Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SnapUp SUS0027

SnapUp Boom X Pro 16W Party Speaker

Model: Boom X Pro (SUS0027)

User Manual

1. Introduction

Thank you for purchasing the SnapUp Boom X Pro 16W Party Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.

2. Package Contents

Verify that all items are present in the package:

- SnapUp Boom X Pro 16W Party Speaker
- Microphone
- Power Cable
- Quick Start Guide
- Warranty Card

3. Product Overview and Features

The SnapUp Boom X Pro is a versatile 16W party speaker designed for clear sound and multi-compatibility. It features dual full-range drivers, RGB disco lights, and True Wireless Stereo (TWS) functionality for an enhanced audio experience.



Figure 3.1: SnapUp Boom X Pro speaker, emphasizing FM radio, dual full-range sound drivers, and 16-watt sound output.

Key Features:

- **16W Boom Surround Sound:** Delivers powerful and immersive audio.
- **Multi-Compatibility:** Supports AUX, Bluetooth V5.3, FM Radio, USB, and TF Card inputs.
- **Up to 8 Hours Playtime:** Enjoy extended music playback.
- **True Wireless Stereo (TWS):** Pair two Boom X Pro speakers for double the power and true stereo sound.
- **Dual Drivers & RGB Disco Lights:** Experience vibrant audio and dynamic visual effects.
- **Built-in Microphone:** For hands-free calling.
- **Portable Design:** Easy to carry and set up anywhere.



Figure 3.2: Connectivity options (USB, Bluetooth V5.3, TF Card, AUX), Type C charging, 52mm speaker driver, and RGB disco lights.

4. Controls and Indicators

The speaker features intuitive controls for power, volume, mode selection, and playback. Specific button functions may vary slightly but generally include:

- **Power Button:** Press and hold to turn the speaker On/Off.
- **Mode Button (M):** Press to switch between Bluetooth, FM, AUX, USB, and TF Card modes.
- **Volume Up (+):** Short press for next track, long press to increase volume.
- **Volume Down (-):** Short press for previous track, long press to decrease volume.
- **Play/Pause Button:** Play or pause audio. In FM mode, long press to auto-scan stations.
- **RGB Light Button:** Press to cycle through light modes or turn lights On/Off.

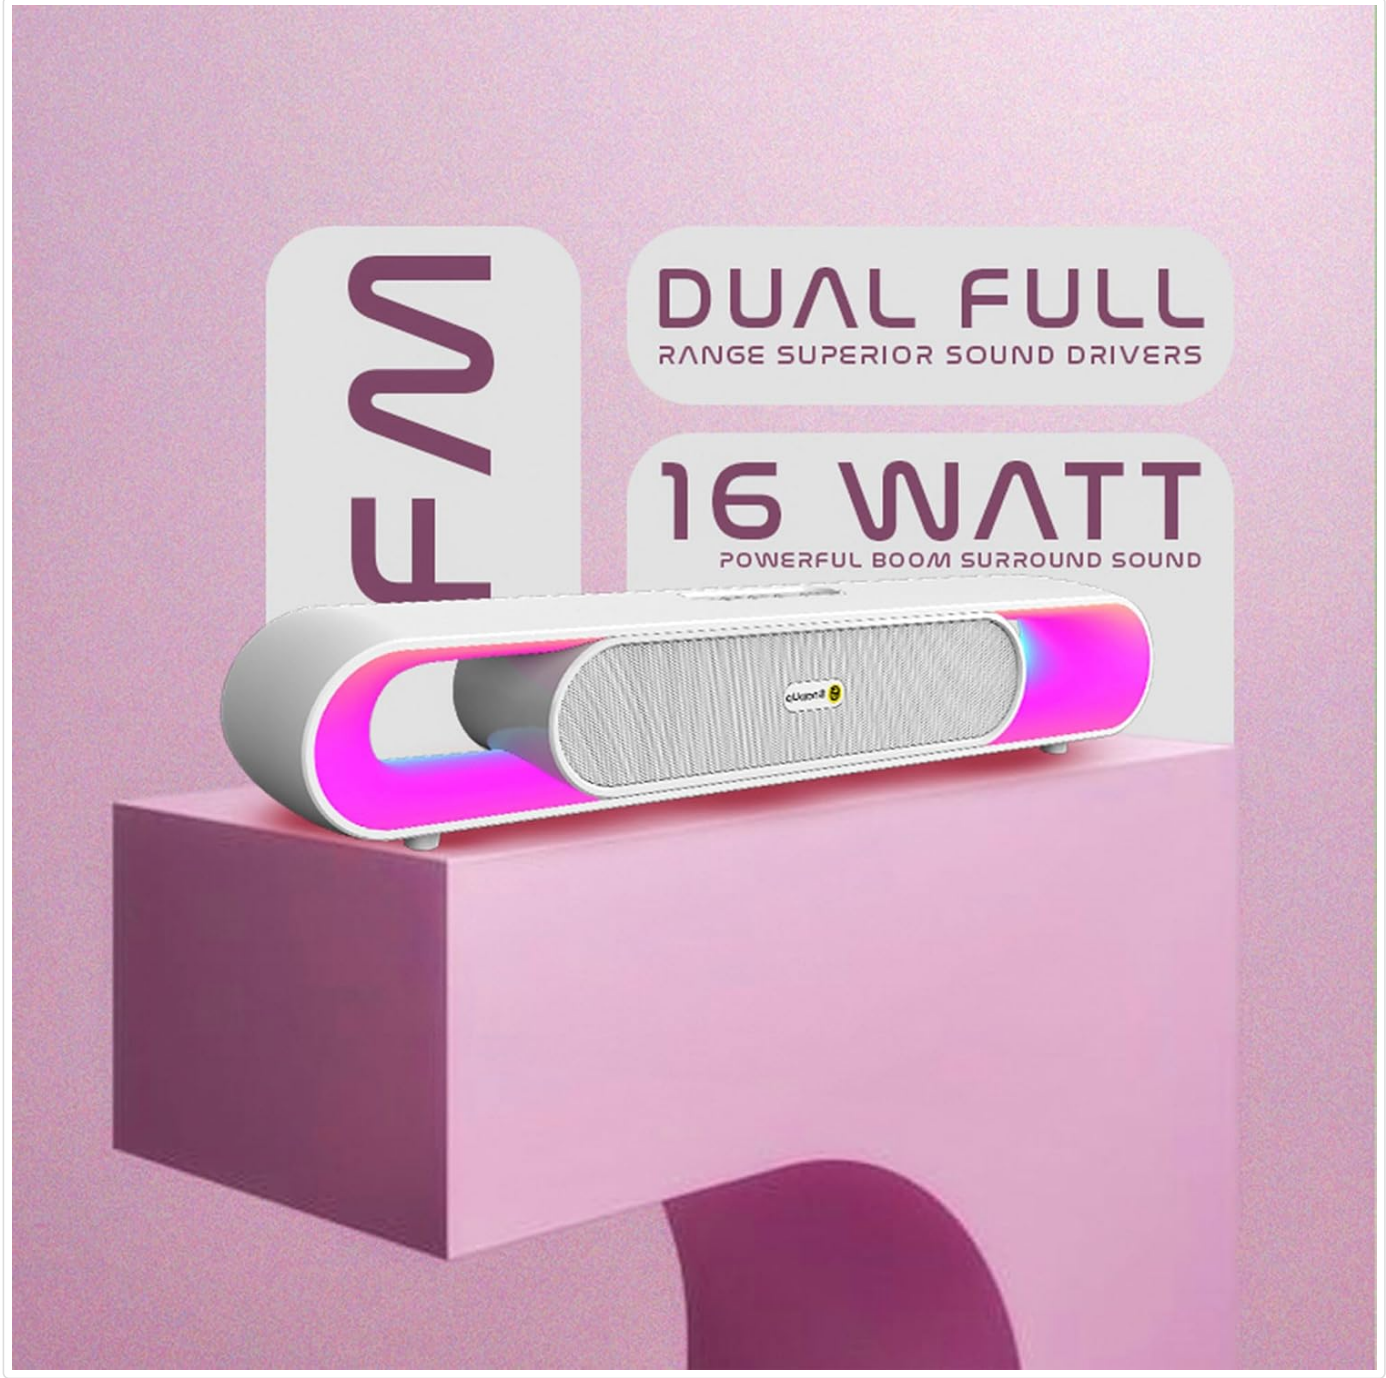


Figure 4.1: Front view of the SnapUp Boom X Pro speaker, showing the grille and general layout.

5. Setup

5.1 Initial Charging

Before first use, fully charge the speaker using the provided Type C power cable. Connect the cable to the speaker's Type C port and a compatible USB power adapter (not included). The charging indicator will show the charging status and turn off when fully charged.

5.2 Power On/Off

Press and hold the Power button for approximately 3 seconds to turn the speaker On or Off.

5.3 Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).

3. Search for "Boom X Pro" in the list of available Bluetooth devices.
4. Select "Boom X Pro" to connect. A confirmation sound will indicate successful pairing.

5.4 True Wireless Stereo (TWS) Pairing

To pair two Boom X Pro speakers for TWS:

1. Ensure both Boom X Pro speakers are turned on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), long press the Play/Pause button until you hear a pairing tone.
3. The two speakers will automatically search and pair with each other. A confirmation sound will indicate successful TWS pairing.
4. Once TWS is established, connect your device to the primary speaker via Bluetooth as described in Section 5.3.

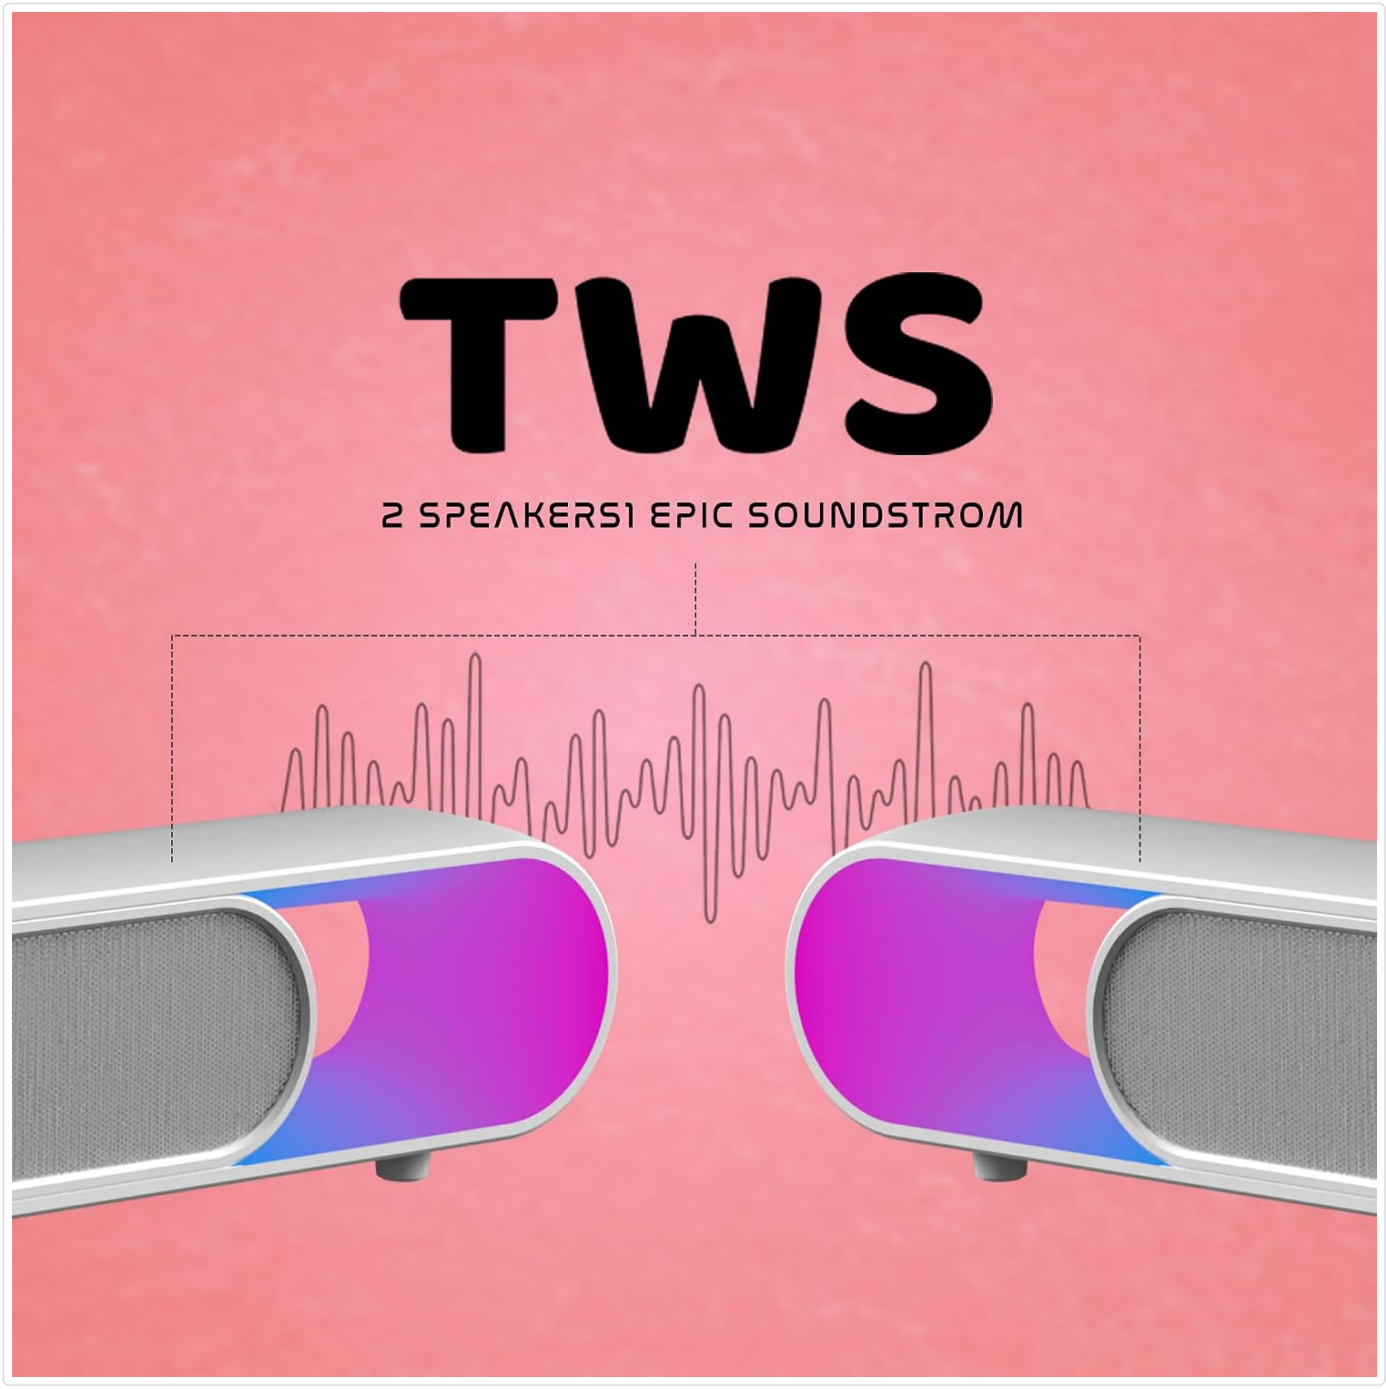


Figure 5.1: Illustration of True Wireless Stereo (TWS) pairing between two Boom X Pro speakers.

6. Operating Modes

6.1 Bluetooth Mode

After successful pairing (Section 5.3), audio from your connected device will play through the speaker. Use your device or the speaker's controls to manage playback and volume.

6.2 AUX Mode

Connect an audio device using a 3.5mm AUX cable (not included) to the speaker's AUX input port. Press the Mode button to switch to AUX mode. Audio will play from the connected device.

6.3 FM Radio Mode

Press the Mode button to switch to FM radio mode. Long press the Play/Pause button to auto-scan and save available FM stations. Use the Volume +/- buttons to navigate between saved stations.

6.4 USB/TF Card Mode

Insert a USB flash drive or a TF (microSD) card into the respective port. The speaker will automatically switch to USB or TF Card mode and begin playing audio files. Ensure audio files are in a compatible format (e.g., MP3).

6.5 RGB Light Control

Press the dedicated RGB Light button to cycle through different light patterns or to turn the lights On/Off.

7. Maintenance

7.1 Cleaning

Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners, alcohol, or other chemical solvents, as these may damage the surface. Avoid getting moisture into any openings.

7.2 Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery periodically to maintain its health.

8. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not turn on	Low battery; Power button not pressed correctly	Charge the speaker fully; Press and hold the Power button for 3 seconds
No sound	Volume too low; Incorrect mode; Device not connected	Increase volume; Press Mode button to select correct input; Re-pair Bluetooth or check AUX/USB connection
Bluetooth pairing fails	Speaker not in pairing mode; Device too far; Interference	Ensure speaker is in pairing mode; Move device closer; Disconnect other Bluetooth devices
TWS pairing fails	Speakers already connected to other devices; Incorrect pairing procedure	Ensure both speakers are disconnected from other devices; Follow TWS pairing steps carefully

Problem	Possible Cause	Solution
FM radio reception is poor	Weak signal; Environmental interference	Relocate the speaker; Perform auto-scan again

9. Specifications

Feature	Specification
Model Number	SUS0027
Speaker Maximum Output Power	16 Watts
Connectivity Technology	Auxiliary, Bluetooth V5.3, USB, TF Card, FM
Audio Output Mode	Stereo
Input Voltage	3.7 Volts
Mounting Type	Tabletop Mount
Enclosure Material	Acrylonitrile Butadiene Styrene (ABS)
Speaker Type	Soundbar
Product Features	Bass Boost, Built-In Microphone, Hi-Res Audio, LED Light, Portable
Subwoofer Speaker Diameter	52 Millimetres
Colour	Off-White
Waterproof	False
Number of Audio Channels	1.0
Impedance	4 Ohms
Item Dimensions (D x W x H)	41.3D x 6.3W x 6.9H Centimeters
Item Weight	720 Grams
Compatible Devices	Desktop, Gaming Console, Laptop, Smartphone, Tablet
Audio Driver Type	Dynamic Driver
Number of Batteries	1 (9V, included)

10. Warranty Information

The SnapUp Boom X Pro 16W Party Speaker comes with a**1 Year Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your purchase receipt and warranty card for any warranty claims.

11. Customer Support

For any support, queries, or warranty claims, please contact:

- **Manufacturer:** Startron Lifestyles Private limited
- **Address:** HD-139, WeWork DLF Two Horizon Centre, 5th Floor, DLF Phase 5, Sector 43, Golf Course Road, Gurugram, Haryana 122002
- **Phone:** 011 - 41187999
- **Email:** care@startronlife.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GCCYNQMD

More documents and user manuals: **https://manuals.plus/**