Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MASHI 5505

MASHI 2026 Upgrade Digital Wall Clock Instruction Manual

Model: 5505

Introduction

Thank you for choosing the MASHI 2026 Upgrade Digital Wall Clock. This clock features a large 16-inch LED display, remote control operation, automatic dimming, a multi-color night light, and Daylight Saving Time (DST) functionality. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.

What's in the Box

Please check the package contents upon opening to ensure all items are present:

- 16" Large Display Digital Clock
- Remote Control
- Power Adapter (5V/2A)
- USB Charging Cable (11.5 feet)
- Mounting Nails (x4)
- Ruler
- Instruction Manual

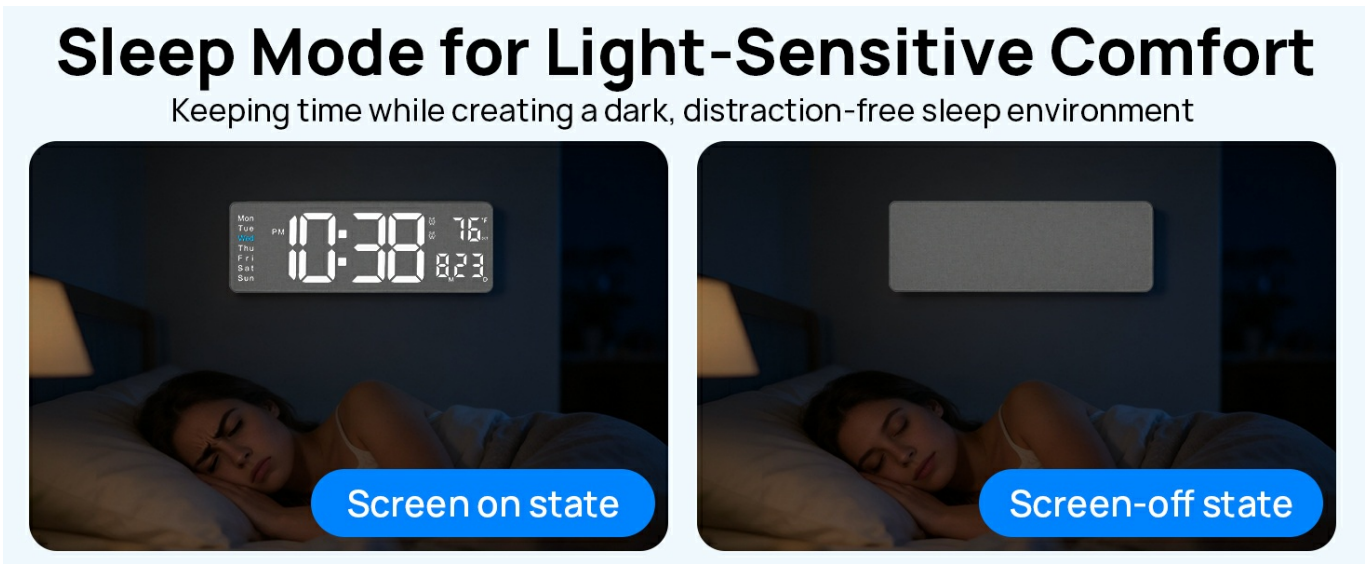


Image: All items included in the product package.

Setup

Power Connection

The MASHI Digital Wall Clock is not battery-operated for primary function. It requires continuous power via the included 5V/2A power adapter and 11.5-foot USB cable.

1. Connect the USB cable to the clock's power input port.
2. Plug the USB cable into the power adapter.
3. Insert the power adapter into a standard electrical outlet. The clock display will illuminate.

Backup Battery Installation (Optional)

Two AAA batteries (not included) can be installed to maintain memory function during power outages. This ensures that time and settings are preserved, but the clock will not display without external power.

1. Locate the battery compartment on the back of the clock.
2. Insert 2 AAA batteries, observing the correct polarity (+/-).
3. Close the battery compartment cover.

Image: Visual guide for installing backup batteries, connecting power, and initial time setting.

Mounting

The clock is designed for wall mounting. Use the included nails and ruler to mark and secure the clock to your desired location.

Operating Instructions

The clock is primarily operated using the included remote control, which has an effective range of up to 32 feet (approximately 10 meters).



Image: The remote control allows for effortless operation of the clock.

Setting Time and Date

Refer to the detailed instructions in the included paper manual for specific button presses to set the time, date, and day of the week.

Brightness Adjustment

The clock offers both automatic and manual brightness control:

- **Automatic Dimming:** A built-in sensor intelligently adapts the display brightness to ambient lighting conditions.
- **Manual Adjustment:** Use the remote control to select from 10 brightness levels for personalized comfort.

Image: The clock offers 10 levels of manual brightness adjustment.

Night Light Function

The clock features a bottom night light with multiple color options:

- Choose from 8 fixed colors.
- Select a multi-color option that cycles through RGB colors.
- The night light can be turned off.

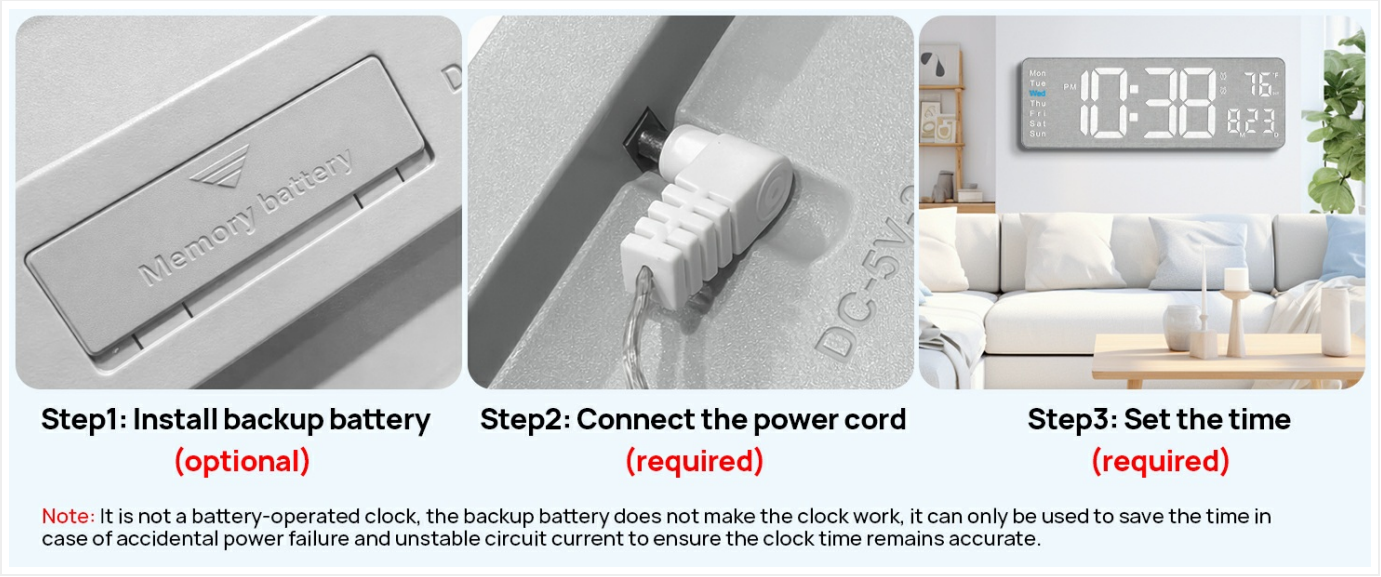


Image: The RGB night light offers 9 color options, including a multi-color cycle.

Daylight Saving Time (DST)

The clock supports automatic adjustment for Daylight Saving Time. Long press the "-" button on the remote control to activate or deactivate DST.

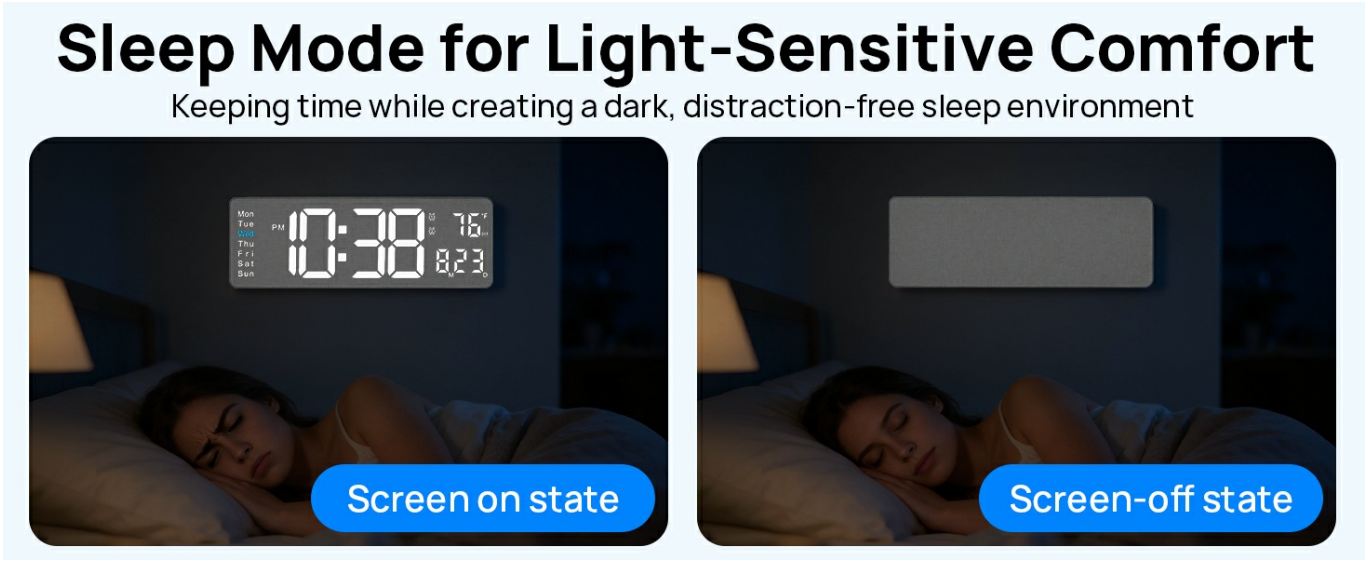


Image: Automatic DST feature for seamless time changes.

Alarm Functions

The clock includes dual alarms with three different alarm modes:

- Monday to Sunday (1-7)
- Monday to Saturday (1-6)
- Monday to Friday (1-5)

Consult the full instruction manual for detailed steps on setting and managing alarms.



Image: Dual alarms with customizable modes for different schedules.

Timer Function

The clock features both countdown and count-up timer functions, with a timing range from 1 second to 99 minutes and 59 seconds.



Image: The clock's positive/countdown timer function.

Sleep Mode

For light-sensitive individuals, the clock offers a sleep mode where the display can be turned off while the timekeeping continues in the background. Short press the designated button on the remote to toggle the display on/off.

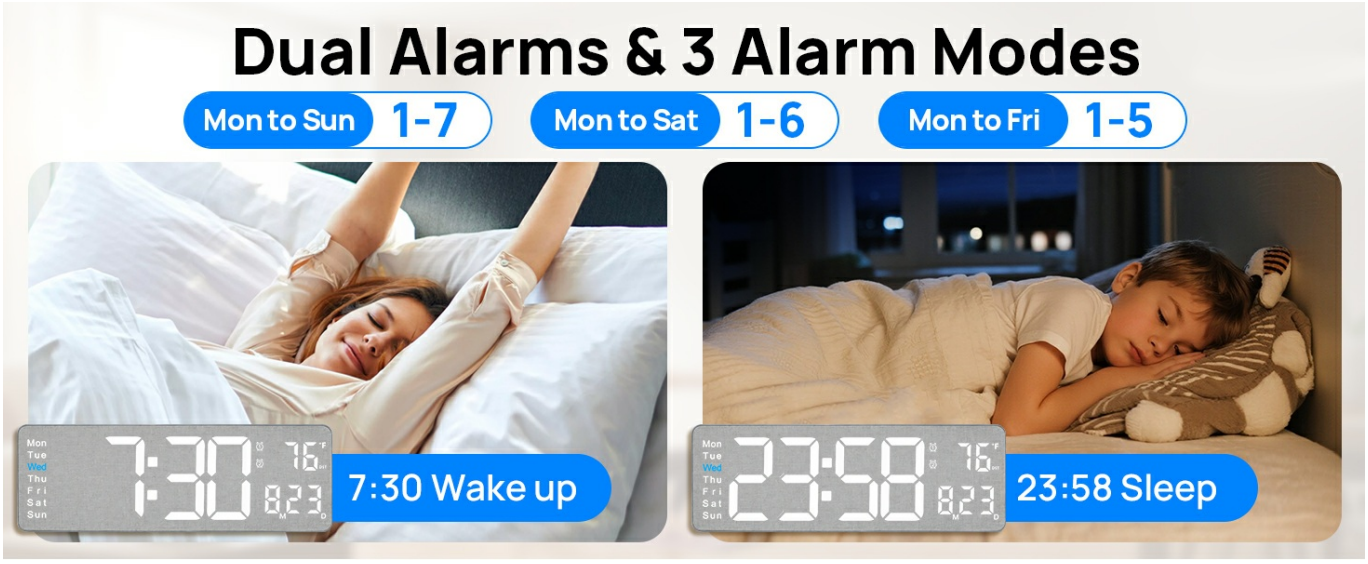


Image: Sleep mode allows the display to be turned off for a dark, distraction-free environment.

Maintenance

To ensure the longevity and proper functioning of your MASHI Digital Wall Clock, follow these maintenance guidelines:

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, which may damage the finish.
- **Placement:** Place the clock in a dry environment, away from direct sunlight, extreme temperatures, and high humidity.
- **Power:** Always use the provided power adapter and cable. Do not attempt to power the clock with incompatible adapters.

Troubleshooting

If you encounter issues with your MASHI Digital Wall Clock, please refer to the following common solutions:

- **Clock not turning on:** Ensure the power adapter is securely plugged into both the clock and a working electrical outlet. Verify the power outlet is functional.
- **Remote control not working:** Check if the remote control batteries (not included) are correctly installed and not depleted. Ensure there are no obstructions between the remote and the clock.
- **Display flickering or incorrect:** Unplug the clock from power for a few minutes, then plug it back in to perform a soft reset.
- **Settings lost after power outage:** Ensure backup AAA batteries are installed correctly. These batteries preserve settings during power interruptions.

For further assistance, please contact MASHI customer support.

Specifications

Feature	Detail
Brand	MASHI
Model Number	5505
Display Type	Digital LED
Screen Size	16 inches
Product Dimensions (W x H)	15.28" x 5.21"
Material	Fabric texture
Mounting Type	Wall Mount
Operation Mode	Electrical (Plug-in)
Connectivity Technology	USB
Power Adapter	5V/2A (Included)
Backup Battery	2 x AAA (Not Included, for memory function only)



Image: The 16-inch large clear display with key dimensions.

Official Product Video



Video: An overview of the MASHI 2026 Upgrade Digital Wall Clock, showcasing its features and design.

Warranty and Support

For warranty information, technical support, or any inquiries regarding your MASHI Digital Wall Clock, please refer to the contact details provided in the packaging or visit the official MASHI website. Keep your purchase receipt as proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GCLLHTD3

More documents and user manuals: **https://manuals.plus/**