Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

OOTD T10

OOTD T10 Electric Scooter User Manual

Model: T10 | Brand: OOTD

1. Introduction

Welcome to the OOTD T10 Electric Scooter user manual. This guide provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your new electric scooter. Please read this manual thoroughly before your first ride to ensure proper use and to maximize your riding experience.

Important Safety Note: This electric scooter is designed exclusively for adult riders. The T10 has a large frame and is not suitable for individuals under 18 years of age or below 160 cm (5.3 ft) in height. Always wear appropriate safety gear, including a helmet, and adhere to all local traffic laws and regulations.



Image: The OOTD T10 Electric Scooter, showcasing its design and all-terrain tires.

2. What's in the Box

Upon opening your OOTD T10 Electric Scooter package, please verify that all the following components are included:

- Folding Electric Scooter (1 unit)
- Charger (1 unit)
- Installation Tools (1 set)

- Instruction Manual (1 unit)

3. Setup and Assembly

Your OOTD T10 Electric Scooter arrives approximately 90% pre-assembled. Follow these steps to complete the setup:

1. **Unfolding the Scooter:** Carefully unfold the scooter frame until it locks into place. Ensure all locking mechanisms are securely engaged.
2. **Handlebar Assembly:** Attach the handlebars to the stem. Ensure all connections are tight and secure.
3. **Bushing Installation:** If required, install the bushing as per the video instructions below.
4. **Initial Charge:** Before your first ride, fully charge the scooter's battery. The initial charge typically takes 6-7 hours. Refer to the charging section for detailed instructions.

Your browser does not support the video tag.
Video: Instructions for installing the bushing on the T10 e-scooter.

Your browser does not support the video tag.
Video: Guide for inspecting the steering and handlebar assembly for proper setup.

4. Operating Instructions

4.1 Powering On/Off

To power on your scooter, press and hold the power button on the display. Repeat to power off. The large LED display will show essential information such as speed, battery level, and total mileage.

Your browser does not support the video tag.
Video: Demonstration of how to open the footplate of the T10 e-scooter.

4.2 Speed Modes

The T10 offers three selectable speed settings to suit various riding conditions:

- **Mode 1 (Gentle):** Up to 15.5 MPH, ideal for safety zones or learning.
- **Mode 2 (Balanced):** Up to 21.5 MPH, suitable for shared paths.
- **Mode 3 (Efficient):** Up to 31 MPH, for open roads and maximum performance.

Your browser does not support the video tag.
Video: Overview of the OOTD T10 Electric Scooter's power, speed, and smooth ride features.

4.3 Riding Tips

- The 11-inch semi-off-road tires and dual shock absorbers provide a stable and comfortable ride across diverse surfaces.
- Utilize the dual disc brakes for effective stopping power in all conditions.
- The integrated rear light functions as both a brake light and turn signal for enhanced visibility.
- The scooter features a quick-folding lightweight frame for easy storage and transport.

Image: The OOTD T10 Electric Scooter navigating an off-road path, highlighting its all-terrain capabilities.

5. Maintenance

5.1 Battery Care

- Always unplug the charger when the battery is fully charged or when the scooter is not in use for extended periods.
- Avoid completely draining the battery before recharging to prolong its lifespan.
- Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures.

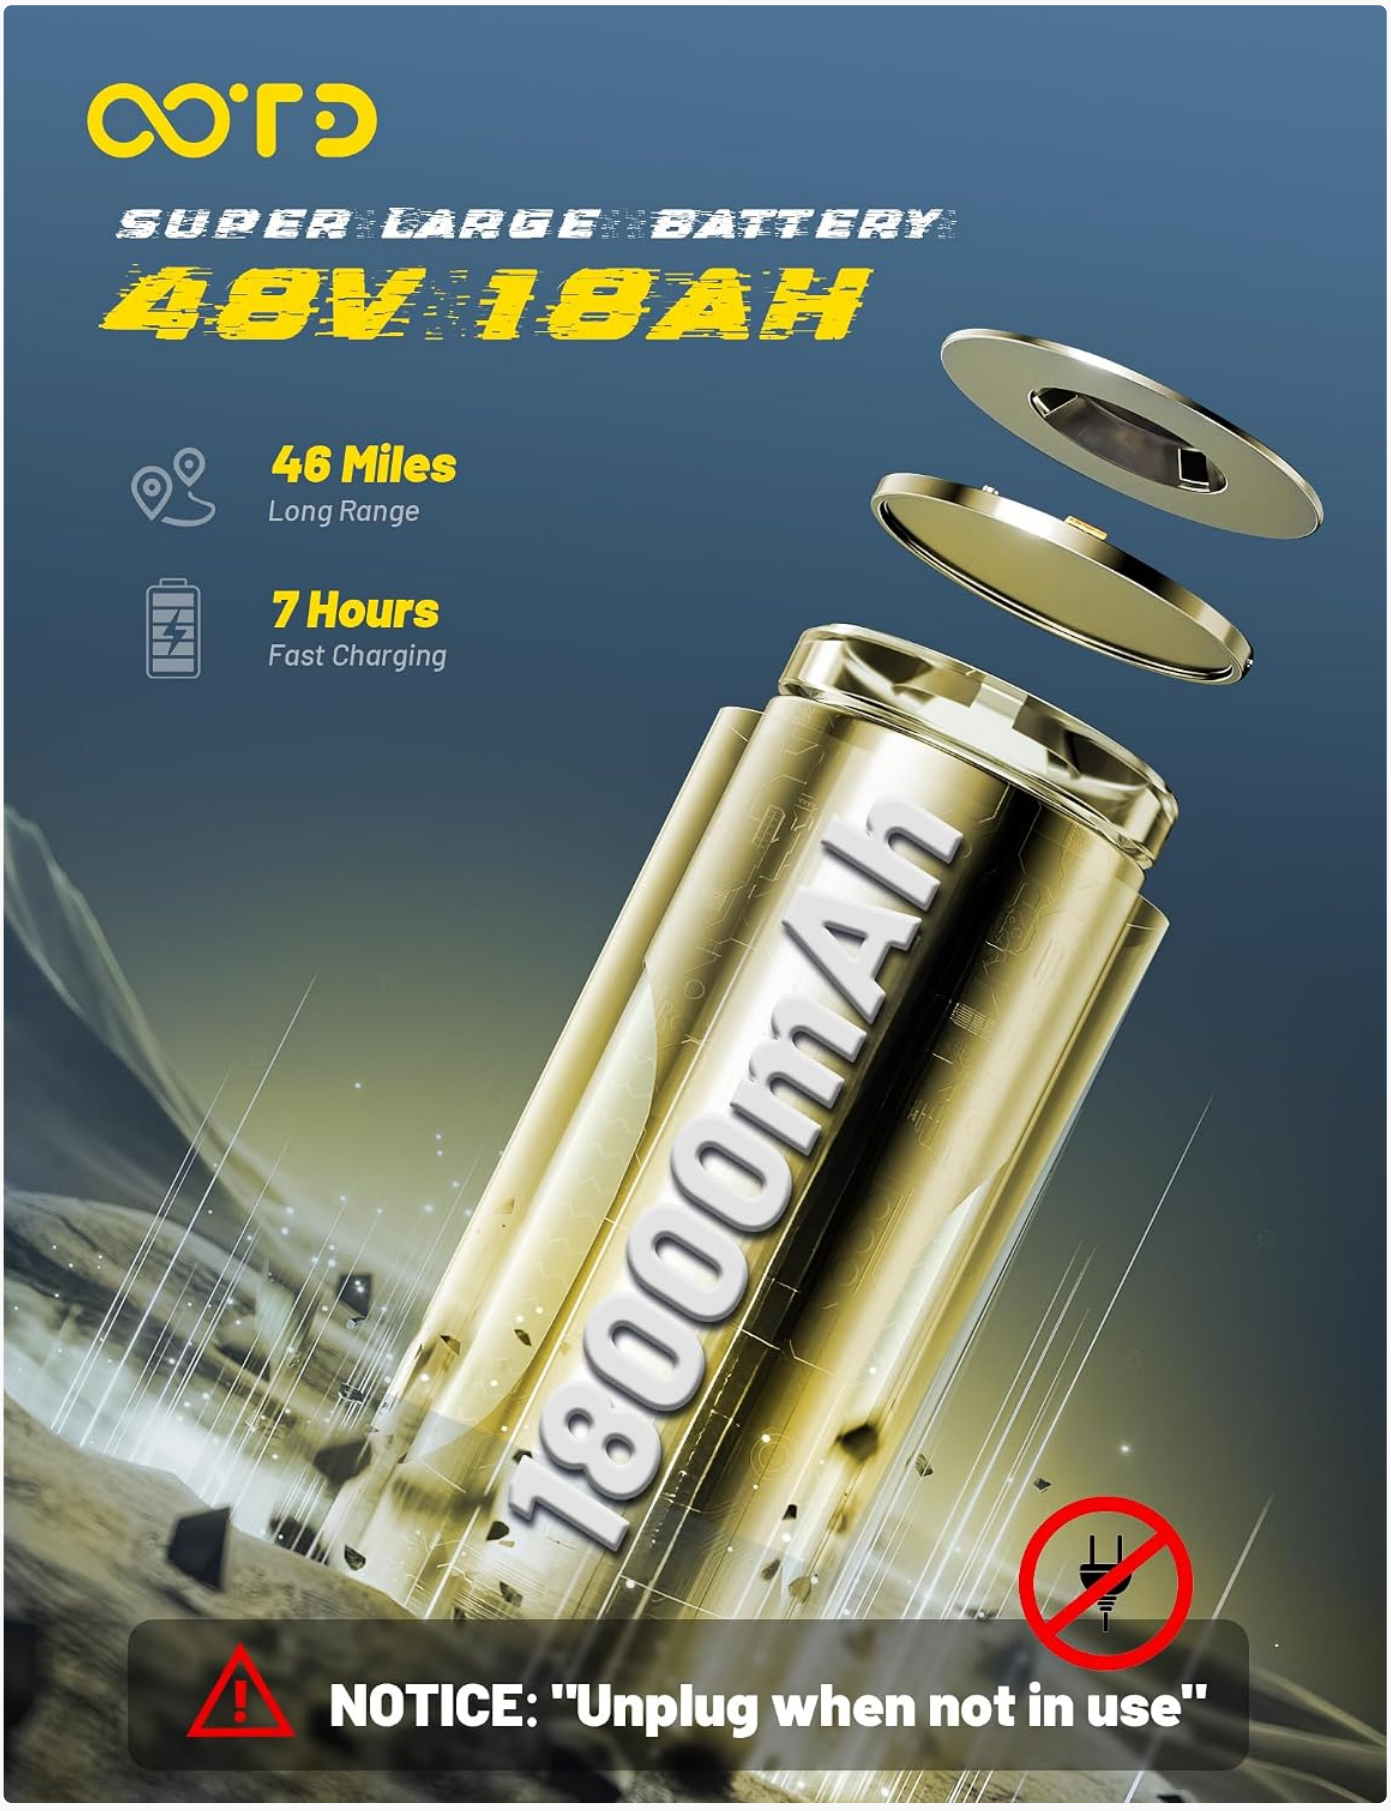


Image: A detailed view of the OOTD T10 Electric Scooter's battery system.

5.2 Tire Maintenance

- Regularly check tire pressure to ensure optimal performance and safety.
- Inspect tires for any signs of wear, punctures, or damage. The T10 features anti-puncture tubeless tires, but regular checks are still recommended.



Image: A close-up of the 11-inch anti-skid and wear-resistant tire of the OOTD T10 Electric Scooter.

5.3 General Cleaning

Wipe down the scooter with a damp cloth after use. Avoid using high-pressure water jets directly on electrical components.

6. Troubleshooting

This section addresses common issues you might encounter with your OOTD T10 Electric Scooter.

6.1 Scooter Does Not Power On

- Ensure the battery is charged. Connect the charger and check the indicator light.
- Verify all electrical connections are secure, particularly the main power cable.
- If the issue persists, contact customer support.

6.2 Reduced Range or Speed

- Check tire pressure; underinflated tires can reduce efficiency.
- Ensure the battery is fully charged. Battery performance can decrease in cold weather.
- Riding conditions (e.g., uphill, heavy load, frequent braking) can affect range and speed.

6.3 Brakes Not Responding Effectively

- Inspect brake cables and calipers for any visible damage or looseness.
- Ensure brake pads are not excessively worn.
- If you are unsure how to adjust or repair brakes, seek professional assistance.

7. Specifications

Feature	Detail
Brand	OOTD
Model Name	OOTD T10 Electric Scooter for Adults
Color	Dark grey
Age Range	Adult
Max Speed	31 MPH
Maximum Distance Range	46 miles
Motor Power	745W brushless motor
Battery	48V 18Ah (UL 2272 certified)
Battery Charge Time	6-7 hours
Weight Limit	265 pounds
Item Weight	62 pounds

Feature	Detail
Product Dimensions (L x W x H)	49.61" x 26.18" x 52.76"
Wheel Size	11 inches
Wheel Type	Tubeless tire
Suspension Type	Dual Suspension
Brake Style	Front Braking, Rear Braking (Dual Disc Brakes)
Frame Material	Iron
Special Features	Anti-Puncture Tire, Foldable, Non-Slip Deck, Rechargeable, Wide Platform

8. Safety Guidelines

- Always wear a helmet and other protective gear (knee pads, elbow pads) when riding.
- Familiarize yourself with local laws and regulations regarding electric scooter use.
- **NOTICE:** In New York State, you cannot use this device on sidewalks or on highways with speed limits over 30 MPH except where local laws, ordinances, orders, rules, or regulations allow. Consult with local cities, towns, or villages where operating this device for their specific conditions, always yield to pedestrians, and follow traffic rules.
- Do not ride in adverse weather conditions (heavy rain, snow, ice).
- Avoid riding under the influence of alcohol or drugs.
- Maintain a safe distance from other vehicles and pedestrians.
- Regularly inspect your scooter for any signs of damage or wear before each ride.



Image: An adult riding the OOTD T10 Electric Scooter, demonstrating safe operation.

9. Warranty and Support

9.1 Warranty Information

The OOTD T10 Electric Scooter comes with a 2-year manufacturer's warranty on the frame and a 1-year coverage on key electrical components. This warranty protects against manufacturing defects under normal use.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact the seller, Venus Ebike, through the Amazon platform or refer to the contact information provided in your purchase documentation.

© 2023 OOTD. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GDF6KYZ9

More documents and user manuals: **https://manuals.plus/**