Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LIORQUE CH-05

LIORQUE CH-05 Digital Alarm Clock User Manual


Model: **CH-05** | Brand: **LIORQUE**

1. Introduction

Thank you for choosing the LIORQUE CH-05 Digital Alarm Clock. This clock features a large LED display, dual alarm functionality, adjustable brightness and volume, a convenient snooze function, weekend mode, and dual USB charging ports. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.



The LIORQUE digital alarm clock in black, featuring a large, clear LED display.

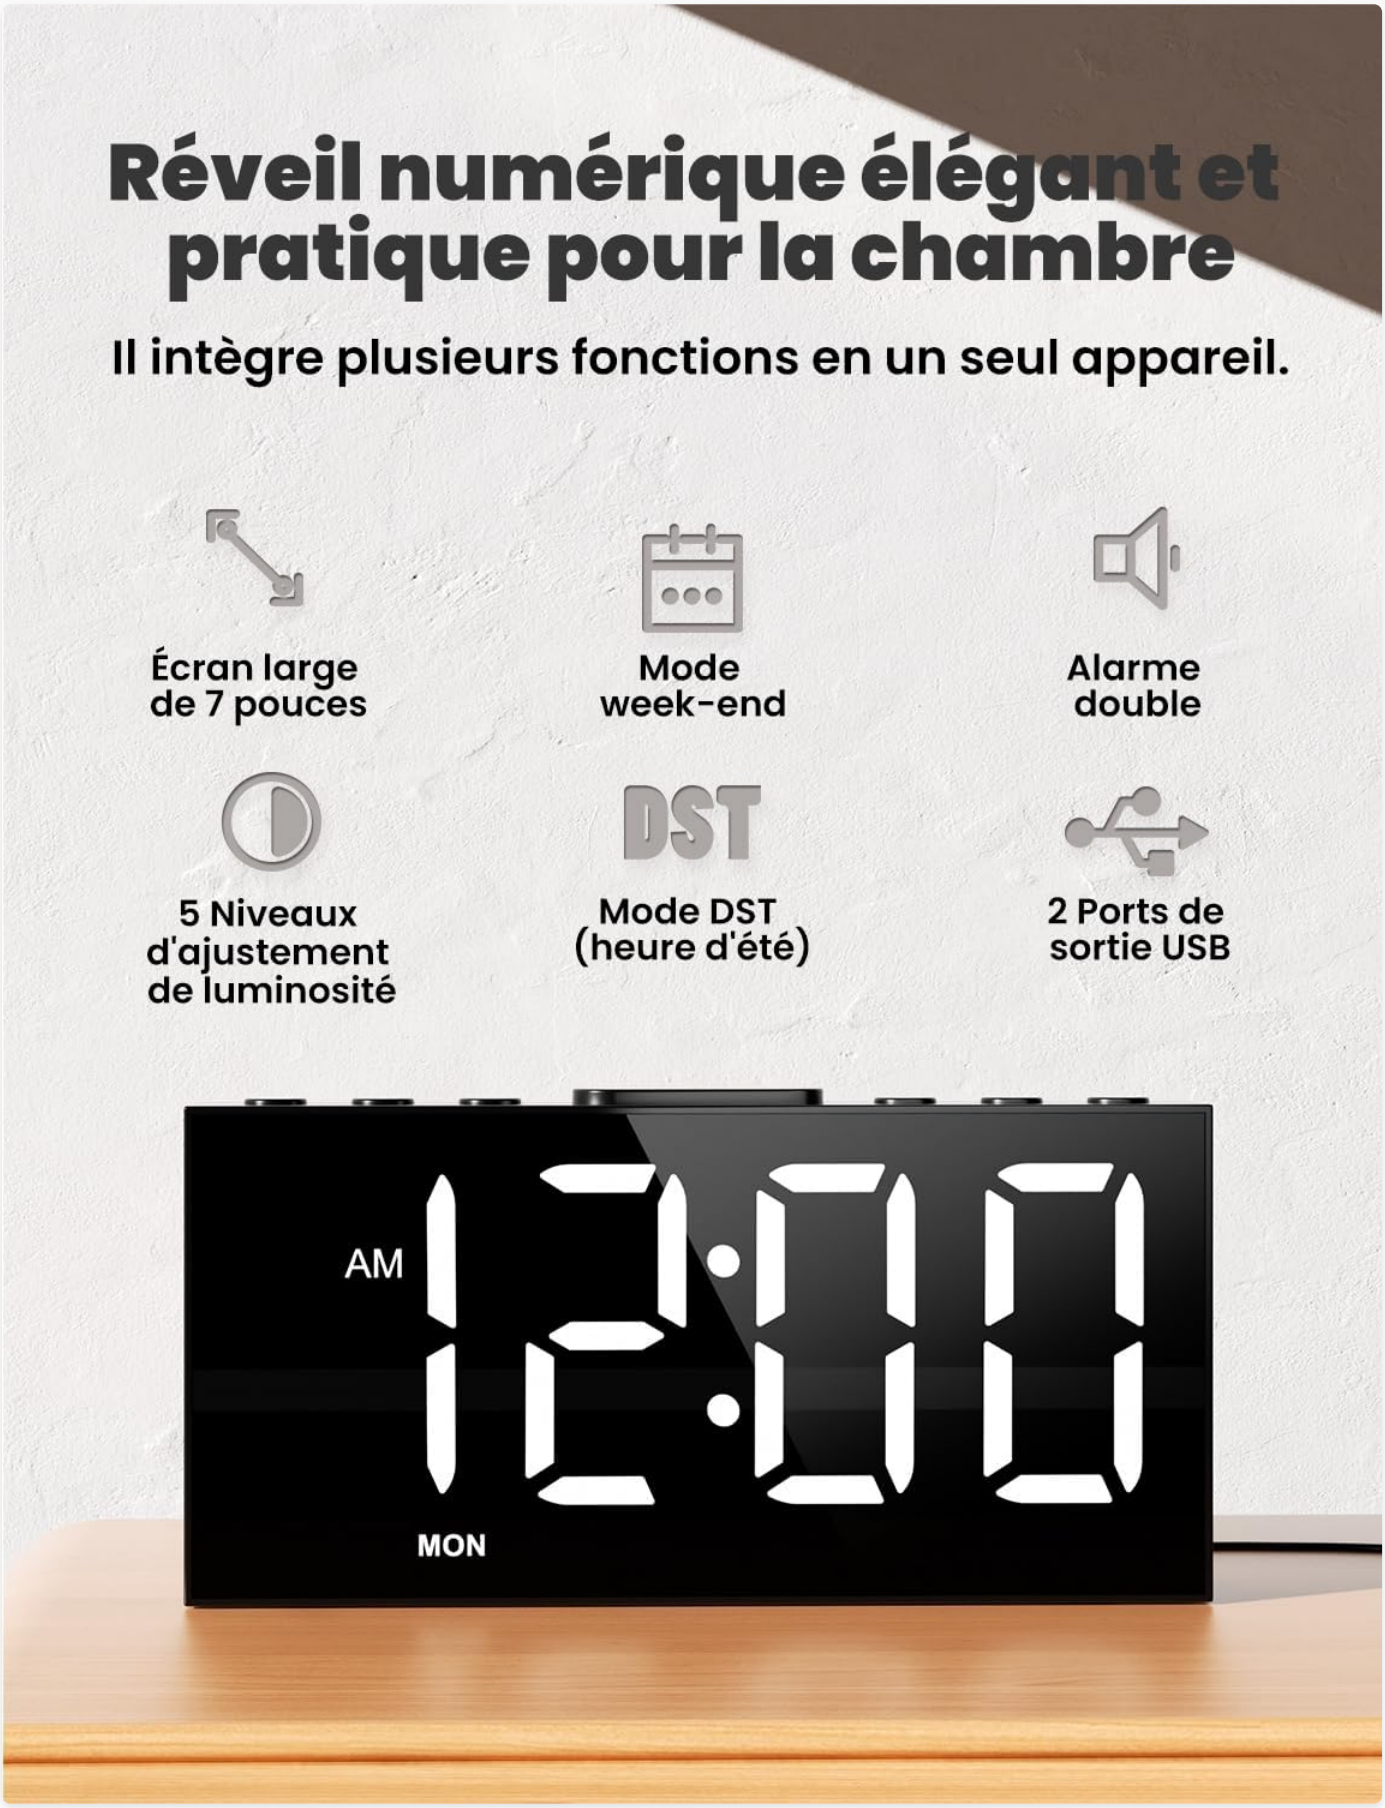

An overview of the clock's main features, highlighting its 7-inch display, weekend mode, dual alarm capability, adjustable brightness, Daylight Saving Time function, and two USB charging ports.

2. Package Contents

- LIORQUE CH-05 Digital Alarm Clock
- Power Adapter
- User Manual
- 1 Non-standard Battery (pre-installed for backup)



The product comes with a power adapter, making it ready for use right out of the box.

3. Setup

3.1 Power Connection

1. Connect the provided power adapter to the USB-C input port on the back of the alarm clock.
2. Plug the power adapter into a standard wall outlet.
3. The clock will power on, and the display will illuminate. The internal battery retains settings during power outages.

3.2 Initial Time Setting

Upon first power-up or after a prolonged power loss without battery backup, you may need to set the time.

1. Press and hold the **SET** button (usually located on the top or back) until the hour digits flash.
2. Use the **+** and **-** buttons to adjust the hour.
3. Press **SET** again to confirm the hour and move to minute adjustment.
4. Use the **+** and **-** buttons to adjust the minutes.
5. Press **SET** one more time to save the time setting.
6. To switch between 12-hour and 24-hour format, press the **12/24H** button (if available) or cycle through by pressing **SET** after minute adjustment.



This image displays the back panel controls, including the DST (Daylight Saving Time) switch, individual switches for setting Alarm 1 and Alarm 2 modes, the USB-C power input, and two USB charging outputs.





LIORQUE	Autres
Écran de 7 pouces, chiffres plus grands	Écran de 6 pouces, chiffres fins
Affichage du jour de la semaine	Aucun
Mode week-end	Non pris en charge
Mode DST (heure d'été)	Aucun
2 Sorties USB	Seulement 1 sortie USB

A detailed view of the clock's display, indicating the positions of the time (hours, minutes), AM/PM indicator, DST icon, and icons for Alarm 1, Alarm 2, and the current day of the week.

4. Operating Instructions

4.1 Alarm Setting (Dual Alarms)

The clock supports two independent alarms (Alarm 1 and Alarm 2).

1. Press the **Alarm 1** button (or **Alarm 2** button) once. The alarm icon and hour digits will flash.
2. Use the **+** and **-** buttons to adjust the alarm hour.
3. Press the **Alarm 1** button again to confirm the hour and move to minute adjustment.
4. Use the **+** and **-** buttons to adjust the alarm minutes.
5. Press the **Alarm 1** button one more time to save the alarm setting. The alarm icon will remain lit, indicating the alarm is active.
6. To deactivate an alarm, press the corresponding **Alarm** button until its icon disappears from the display.



The clock features a snooze function and supports setting two independent alarms.



Example of setting Alarm 1 for waking up and Alarm 2 for a reminder.

4.2 Snooze Function

When the alarm sounds, press the large **SNOOZE/DIMMER** button on top of the clock to activate the snooze function. The alarm will pause for 9 minutes and then sound again.

4.3 Weekday and Weekend Mode

The clock allows you to customize when your alarms are active.

1. On the back of the clock, locate the alarm mode switches for Alarm 1 and Alarm 2.
2. Slide the switch to select the desired mode:
    - **MON-SUN:** Alarm active every day.
    - **MON-FRI:** Alarm active only on weekdays.
    - **SAT-SUN:** Alarm active only on weekends.
    - **Customize:** Allows for specific day selection (refer to advanced settings in the full manual for detailed customization).



The weekend mode allows users to set alarms to function only on weekdays or only on weekends, with customizable day selections.

4.4 Brightness Adjustment

The clock offers 5 levels of display brightness, including the option to turn the display completely off.

- Press the **SNOOZE/DIMMER** button repeatedly to cycle through the 5 brightness levels (100%, 75%, 50%, 25%, 0% off).
- Select the brightness level that is comfortable for your environment.



This image illustrates the 5 adjustable brightness levels of the clock's LED display, ranging from 100% to completely off.

4.5 Volume Adjustment

The alarm volume can be adjusted to 5 different levels.

- While the alarm is sounding, or during alarm setup, press the**Volume** button (often combined with**+** or **-**) to cycle

through the volume levels (L01 to L05).

- Choose the volume that suits your preference.



This image demonstrates the 5 levels of alarm volume adjustment, allowing users to customize the sound to their personal preference.

4.6 Daylight Saving Time (DST)

To activate or deactivate Daylight Saving Time:

- Locate the **DST** switch on the back of the clock.
- Slide the switch to **ON** to advance the time by one hour for DST.
- Slide the switch to **OFF** to revert the time to standard.

4.7 USB Charging Ports

The clock is equipped with two 5V/1A USB-A output ports for charging small electronic devices.

- Connect your device's USB charging cable to one of the USB output ports on the back of the clock.
- Ensure your device is compatible with 5V/1A charging.
- **Note:** Avoid charging high-power devices, as this may damage the clock or the device.



The clock provides two USB output ports (5V/1A) for conveniently charging small devices like smartphones and earbuds. Note: Avoid charging high-power devices to prevent damage.

5. Maintenance

- Clean the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.
- Do not disassemble the clock. This will void the warranty.

6. Troubleshooting

Problem	Possible Cause	Solution
Clock display is off or flickering.	Power adapter not connected properly; brightness set to 0%.	Ensure power adapter is securely plugged in. Press SNOOZE/DIMMER button to increase brightness.
Alarm does not sound.	Alarm not activated; volume set to minimum; incorrect weekday/weekend mode.	Check if alarm icon is lit. Increase alarm volume. Verify alarm mode switch (MON-SUN, MON-FRI, SAT-SUN).
USB charging is slow or not working.	Device requires more than 5V/1A; cable issue; clock not powered.	Ensure device is compatible with 5V/1A. Try a different USB cable. Confirm clock is powered on.
Time is incorrect after power outage.	Internal backup battery depleted or not present.	Reset the time manually. Ensure the internal battery is functional for future backup.

7. Specifications

Feature	Detail
Brand	LIORQUE
Model Number	CH-05
Color	Black
Display Type	Digital LED
Screen Size	7 Inches
Product Dimensions (L x H)	17.5 x 11.2 cm (approx. 6.9 x 4.4 inches)
Power Source	Electric (Adapter Included) with Battery Backup
Batteries	1 Non-standard Battery (Included)
Alarm Function	Dual Alarms, Snooze (9 min), Weekday/Weekend Mode
Brightness Levels	5 (including display off)
Volume Levels	5
USB Output	2 x 5V/1A USB-A Ports
Special Features	DST (Daylight Saving Time) Function

8. Warranty and Support

LIORQUE products are designed for reliability and performance. For any questions, technical support, or warranty claims, please refer to your purchase documentation or contact LIORQUE customer service through the retailer where the product was purchased.

Please retain your proof of purchase for warranty purposes.

© 2026 LIORQUE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GF1QTCCN

More documents and user manuals: **https://manuals.plus/**