Feelfunn WC001-S2

Feelfunn Top Loading Water Dispenser

Model: WC001-S2

Brand: Feelfunn

1. Important Safety Instructions

Please read all instructions carefully before using the Feelfunn Top Loading Water Dispenser. Retain this manual for future reference.

- **Electrical Safety:** Ensure the dispenser is plugged into a grounded outlet. Do not use extension cords. Keep the power cord away from heated surfaces.
- **Water Supply:** Always ensure a water bottle is properly installed and filled before plugging in the unit or activating heating/cooling functions. Operating the unit without water can cause damage.
- **Child Safety:** The hot water dispenser features a child safety lock. Always engage this lock when not in use, especially in households with children. Supervise children around the dispenser.
- **Placement:** Place the dispenser on a flat, stable surface, away from direct sunlight and heat sources. Allow at least 4 inches of clearance from walls for proper ventilation.
- **Cleaning:** Unplug the unit before cleaning. Do not immerse the dispenser in water.
- **Maintenance:** Do not attempt to repair or disassemble the unit yourself. Contact qualified service personnel for repairs.

2. Product Overview

The Feelfunn Top Loading Water Dispenser provides instant access to hot and cold water. It is designed for use with standard 3 or 5-gallon water bottles, making it convenient for homes, offices, and kitchens.



Figure 2.1: Front view of the Feelfunn Top Loading Water Dispenser. This image shows the overall design of the water dispenser with a 5-gallon bottle installed on top, featuring a black and stainless steel finish.



Figure 2.2: Dimensions of the water dispenser and compatible bottle sizes. The dispenser measures 11.0 inches (D) x 11.5 inches (W) x 36.4 inches (H) and is compatible with both 3-gallon and 5-gallon water bottles.

3. Setup Instructions

1. **Unpacking:** Carefully remove the dispenser from its packaging. Inspect for any damage.
2. **Placement:** Position the dispenser on a level, sturdy surface. Ensure it is at least 4 inches away from walls to allow for proper air circulation. Avoid placing it near direct sunlight or heat sources.
3. **Install Drip Tray:** Slide the removable drip tray into its designated slot below the dispensing spouts.
4. **Install Water Bottle:**
    - Remove the protective seal from the top of a 3 or 5-gallon water bottle.
    - Carefully lift the water bottle and invert it, placing it securely onto the top loading receptacle of the dispenser. Ensure the bottle is seated firmly and water begins to flow into the dispenser's reservoirs.
5. **Initial Priming:** Before plugging in the unit, dispense water from both the hot and cold spouts until water flows continuously. This ensures the internal tanks are filled and prevents dry heating/cooling.
6. **Power Connection:** Plug the power cord into a grounded electrical outlet.
7. **Activate Heating/Cooling:** Locate the power switches on the back of the unit. Turn on the switches for hot and cold water as desired. Allow approximately 15-20 minutes for the water to reach optimal temperatures.



Figure 3.1: The top-loading design of the water dispenser, highlighting its ease of installation without requiring plumbing. Simply place a 3 or 5-gallon bottle on top.

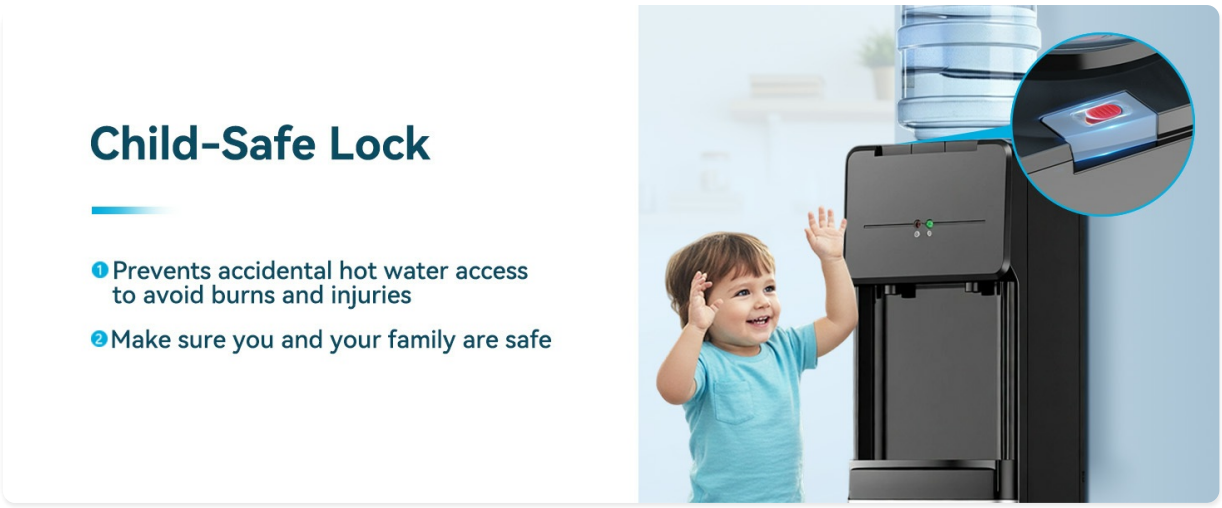


Figure 3.2: Close-up of the removable top loading system, which simplifies bottle replacement and allows for easy cleaning to maintain hygiene.

4. Operating Instructions

Your Feelfunn water dispenser offers both hot and cold water on demand.

4.1 Dispensing Cold Water

- Place your cup or glass under the cold water spout.
- Press the cold water lever/button to dispense cold water. Release to stop.

4.2 Dispensing Hot Water (with Child Safety Lock)

The hot water spout is equipped with a child safety lock to prevent accidental burns.

- Place your cup or mug under the hot water spout.
- **Two-Step Operation:** First, slide the safety lock button (usually red) to unlock. While holding the safety lock, press the hot water lever/button to dispense hot water.
- Release the lever/button to stop the flow. The safety lock will automatically reset.

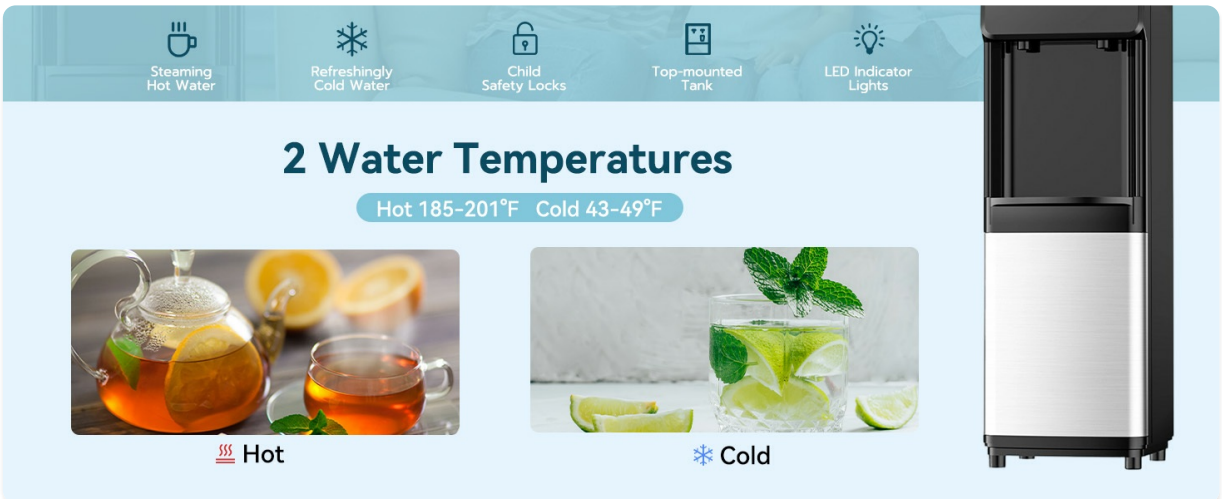


Figure 4.1: The dispenser provides both hot water (185-201°F) suitable for tea or coffee, and cold water (43-49°F) for refreshing drinks.



Figure 4.2: Illustration of the child-safe lock on the hot water spout. Users must slide and press the button simultaneously to dispense hot water, preventing accidental activation.



Figure 4.3: View of the independent ON/OFF switches for hot and cold water on the back of the unit. It is recommended to turn off the hot water switch when the bottle is empty to prevent dry burning.

5. Maintenance

Regular maintenance ensures the longevity and hygienic operation of your water dispenser.

5.1 Cleaning the Drip Tray

- The drip tray collects spills and should be emptied and cleaned regularly.
- Simply pull the drip tray forward to remove it.
- Empty any collected water and wash the tray with mild soap and warm water. Rinse thoroughly and dry before reinserting.

5.2 General Cleaning

- Unplug the dispenser from the power outlet before cleaning.
- Wipe the exterior of the dispenser with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean the water spouts with a soft brush or cloth to remove any mineral buildup.

5.3 Descaling (Recommended Annually)

Over time, mineral deposits can build up in the hot water tank. Descaling helps maintain efficiency.

- Unplug the unit and remove the water bottle.
- Drain all water from the hot and cold tanks using the drain plugs located at the back of the unit.
- Prepare a descaling solution (e.g., a mixture of white vinegar and water, or a commercial descaling agent according to its instructions).
- Pour the solution into the top reservoir. Allow it to sit for 30 minutes to an hour.
- Drain the solution completely.
- Rinse the tanks thoroughly by filling with clean water and draining several times until no vinegar smell remains.
- Reinstall the water bottle and follow initial priming steps before plugging in and turning on.



Figure 5.1: The removable drip tray can be easily detached, emptied, and rinsed under a faucet for effortless maintenance and hygiene.

6. Troubleshooting

If you encounter issues with your water dispenser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No hot water	Hot water switch is off; Unit not plugged in; No water in hot tank; Heating element malfunction.	Ensure hot water switch is ON; Check power connection; Ensure water bottle is full and tanks are primed; Contact customer support.
No cold water	Cold water switch is off; Unit not plugged in; No water in cold tank; Cooling system malfunction.	Ensure cold water switch is ON; Check power connection; Ensure water bottle is full and tanks are primed; Contact customer support.
Water is leaking	Water bottle not seated correctly; Drain plug loose; Damaged water bottle; Internal leak.	Re-seat water bottle firmly; Check and tighten drain plugs; Replace damaged bottle; Unplug and contact customer support.
Unusual noise	Compressor cycling (normal); Unit not level; Loose parts.	This is normal operation; Ensure unit is on a level surface; Contact customer support if noise is excessive or persistent.

If the problem persists after attempting these solutions, please contact Feelfunn customer support for

assistance.

7. Specifications

Feature	Detail
Model Number	WC001-S2
Brand	Feelfunn
Color	Black & Stainless
Product Dimensions (D x W x H)	11" x 11.5" x 36.4"
Capacity	3 or 5 Gallon Bottles
Cold Water Temperature	43°F - 49°F
Hot Water Temperature	185°F - 201°F
Heating Power	500W
Cooling Power	80W
Voltage	110V-120V~60HZ

8. Warranty and Customer Support

The Feelfunn Top Loading Water Dispenser (Model WC001-S2) is backed by a **1-year worry-free warranty** from the date of purchase.
This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, modification, or unauthorized repair.
For warranty claims, technical assistance, or any questions regarding your product, please contact Feelfunn customer support. Refer to your purchase documentation for specific contact details or visit the official Feelfunn website.

© 2026 Feelfunn. All rights reserved.