Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

PRITECH BCM-2149

PRITECH Electric Facial Cleansing Brush

Model: BCM-2149

Introduction

Thank you for choosing the PRITECH Electric Facial Cleansing Brush, Model BCM-2149. This device is designed to provide a comprehensive facial cleansing experience, combining exfoliation, blackhead removal, and massage functions. Please read this manual thoroughly before first use to ensure safe and effective operation.

This brush features a waterproof design, two-speed settings, and a rechargeable battery for convenience and portability.

Product Features

- **2-Speed Adjustment:** Offers two distinct vibration modes for customized deep cleansing, suitable for various skin types.
- **Multi-Functional 3-in-1 System:** Functions as an exfoliating brush, blackhead remover, and facial massage brush.
- **Waterproof Design:** Allows for safe use in wet environments, such as showers.
- **Rechargeable Battery:** Equipped with USB-C fast charging for long-lasting, cordless operation.
- **Portable and Lightweight:** Compact design makes it ideal for travel and on-the-go skincare routines.
- **Ultra-Soft Bristles:** Gentle yet effective bristles designed for daily deep pore cleansing without skin irritation.



Image: A close-up view of the ultra-soft bristles on the PRITECH facial cleansing brush, designed for gentle cleansing.

Package Contents

Upon opening the package, please ensure all the following items are present:

- PRITECH Electric Facial Cleansing Brush (BCM-2149)
- Ordinary Brush Head (for deep cleansing and blackhead removal)
- Sponge Head (for dark circles and deeper dirt removal)
- Sensitive Brush Head (for gentle cleansing on sensitive skin)
- USB-C Charging Cable
- Charging Stand
- User Manual



Image: The PRITECH facial cleansing brush with its three interchangeable heads: an ordinary brush head, a sponge head, and a sensitive brush head, illustrating the 3-in-1 facial system.

Important Safety Information

- Do not use the device on broken, irritated, or severely sensitive skin.
- Avoid using abrasive cleansers or exfoliants with the brush heads, as this may cause skin irritation or damage the device.
- Keep the device out of reach of children.
- Ensure the charging port is completely dry before connecting the USB-C charging cable.
- Do not immerse the charging cable or adapter in water.
- If you experience any discomfort or adverse reactions, discontinue use immediately and consult a dermatologist.

- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.

Setup Guide

1. Charging the Device

1. Before first use, fully charge the device.
2. Connect the USB-C charging cable to the charging port on the device.
3. Plug the other end of the USB-C cable into a compatible USB power adapter (not included) or a computer USB port.
4. The indicator light will show charging status (e.g., blinking while charging, solid when fully charged).

2. Attaching a Brush Head

1. Select the desired brush head (Ordinary, Sponge, or Sensitive) based on your skin type and cleansing needs.
2. Align the brush head with the connector on the device.
3. Gently push the brush head onto the device until it clicks securely into place.
4. To remove, pull the brush head straight off the device.

Operating Instructions

1. Preparing for Cleansing

1. Dampen your face and the brush head with warm water.
2. Apply a small amount of your preferred facial cleanser directly to the brush head or onto your face.

2. Powering On and Selecting Speed

1. Press the power button once to turn on the device. It will start in the default low-speed mode ("soft").
2. Press the power button a second time to switch to the high-speed mode ("enhance") for deeper cleansing.
3. Press the power button a third time to turn off the device.



Image: The PRITECH facial cleansing brush highlighting its two-speed adjustable settings for 'soft' and 'enhance' cleansing modes.

3. Cleansing Your Face

1. Gently move the brush in small, circular motions across your face.
2. Avoid pressing too hard, as the sonic vibrations are designed to do the work.
3. Spend approximately 20 seconds on each area of your face (forehead, nose, chin, and each cheek).
4. The device is designed for 360-degree cleaning and micro-vibration technology for effective results.



Image: A visual representation of the PRITECH facial cleansing brush's 360-degree cleaning and micro-vibration technology.

4. After Cleansing

1. Rinse your face thoroughly with water to remove any remaining cleanser.
2. Rinse the brush head under running water.
3. Pat your face dry with a clean towel.
4. Apply your usual skincare products.

Maintenance and Care

Cleaning the Device and Brush Heads

- After each use, rinse the brush head thoroughly with warm water.

- You can use a mild soap to clean the bristles if necessary, then rinse completely.
- Wipe the body of the device with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Allow the device and brush heads to air dry completely before storing.
- Store the device in its charging stand or a clean, dry place.

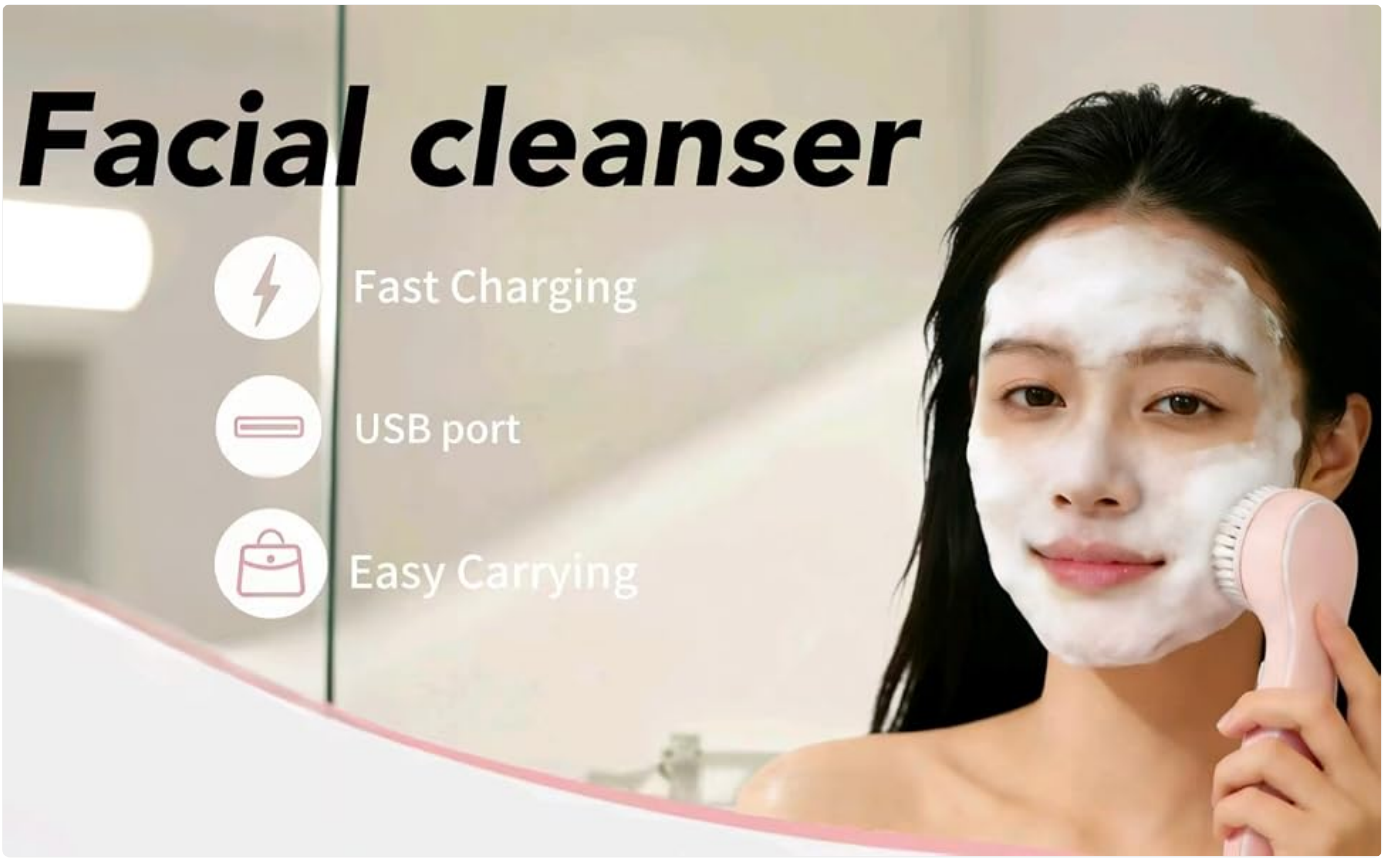


Image: A woman using the PRITECH facial cleansing brush, illustrating the cleansing process.

Replacing Brush Heads

- For optimal performance and hygiene, it is recommended to replace brush heads every 2-3 months, or sooner if bristles appear worn.
- Replacement brush heads can be purchased from authorized PRITECH retailers.

Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB-C cable.
Device stops during use.	Low battery.	Recharge the device.
Brush head does not rotate or vibrate effectively.	Brush head not properly attached or damaged.	Ensure the brush head is securely attached. Replace if damaged.

Problem	Possible Cause	Solution
Skin irritation after use.	Excessive pressure, incorrect brush head, or unsuitable cleanser.	Reduce pressure. Try the sensitive brush head. Use a milder cleanser. Discontinue use if irritation persists.

If the problem persists after trying these solutions, please contact PRITECH customer support.

Specifications

Feature	Detail
Model Number	BCM-2149
Product Dimensions	7.68 x 4.53 x 2.36 inches
Item Weight	8.82 ounces
Power Source	Rechargeable (USB-C)
Operation Mode	Automatic, 2-Speed
Waterproof Rating	Yes (suitable for shower use)
Material Type	Plastic, Bristles
Color	Pink
Manufacturer	Wenzhou Pritech Industrial Co., Ltd.

Warranty and Support

PRITECH products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official PRITECH website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact PRITECH customer service through their official channels.

You can often find support contact information on the product packaging or the brand's official website. PRITECH Store on Amazon

© 2026 PRITECH. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GFH6K6ZH

More documents and user manuals: **https://manuals.plus/**