Flagfront N2-T1

Flagfront N2-T1 Golf Rangefinder Instruction Manual

Model: N2-T1 | Brand: Flagfront

Introduction

This manual provides detailed instructions for the proper use and maintenance of your Flagfront N2-T1 Golf Rangefinder. Designed for golfers, this device offers precise distance measurement, 6X magnification, slope compensation, and flag locking with vibration feedback to enhance your game. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

What's in the Box

Upon opening your Flagfront N2-T1 Golf Rangefinder package, you should find the following items:

- Flagfront N2-T1 Golf Rangefinder
- Type-C Charging Cable
- Portable Soft Case
- Lens Cleaning Cloth
- User Manual

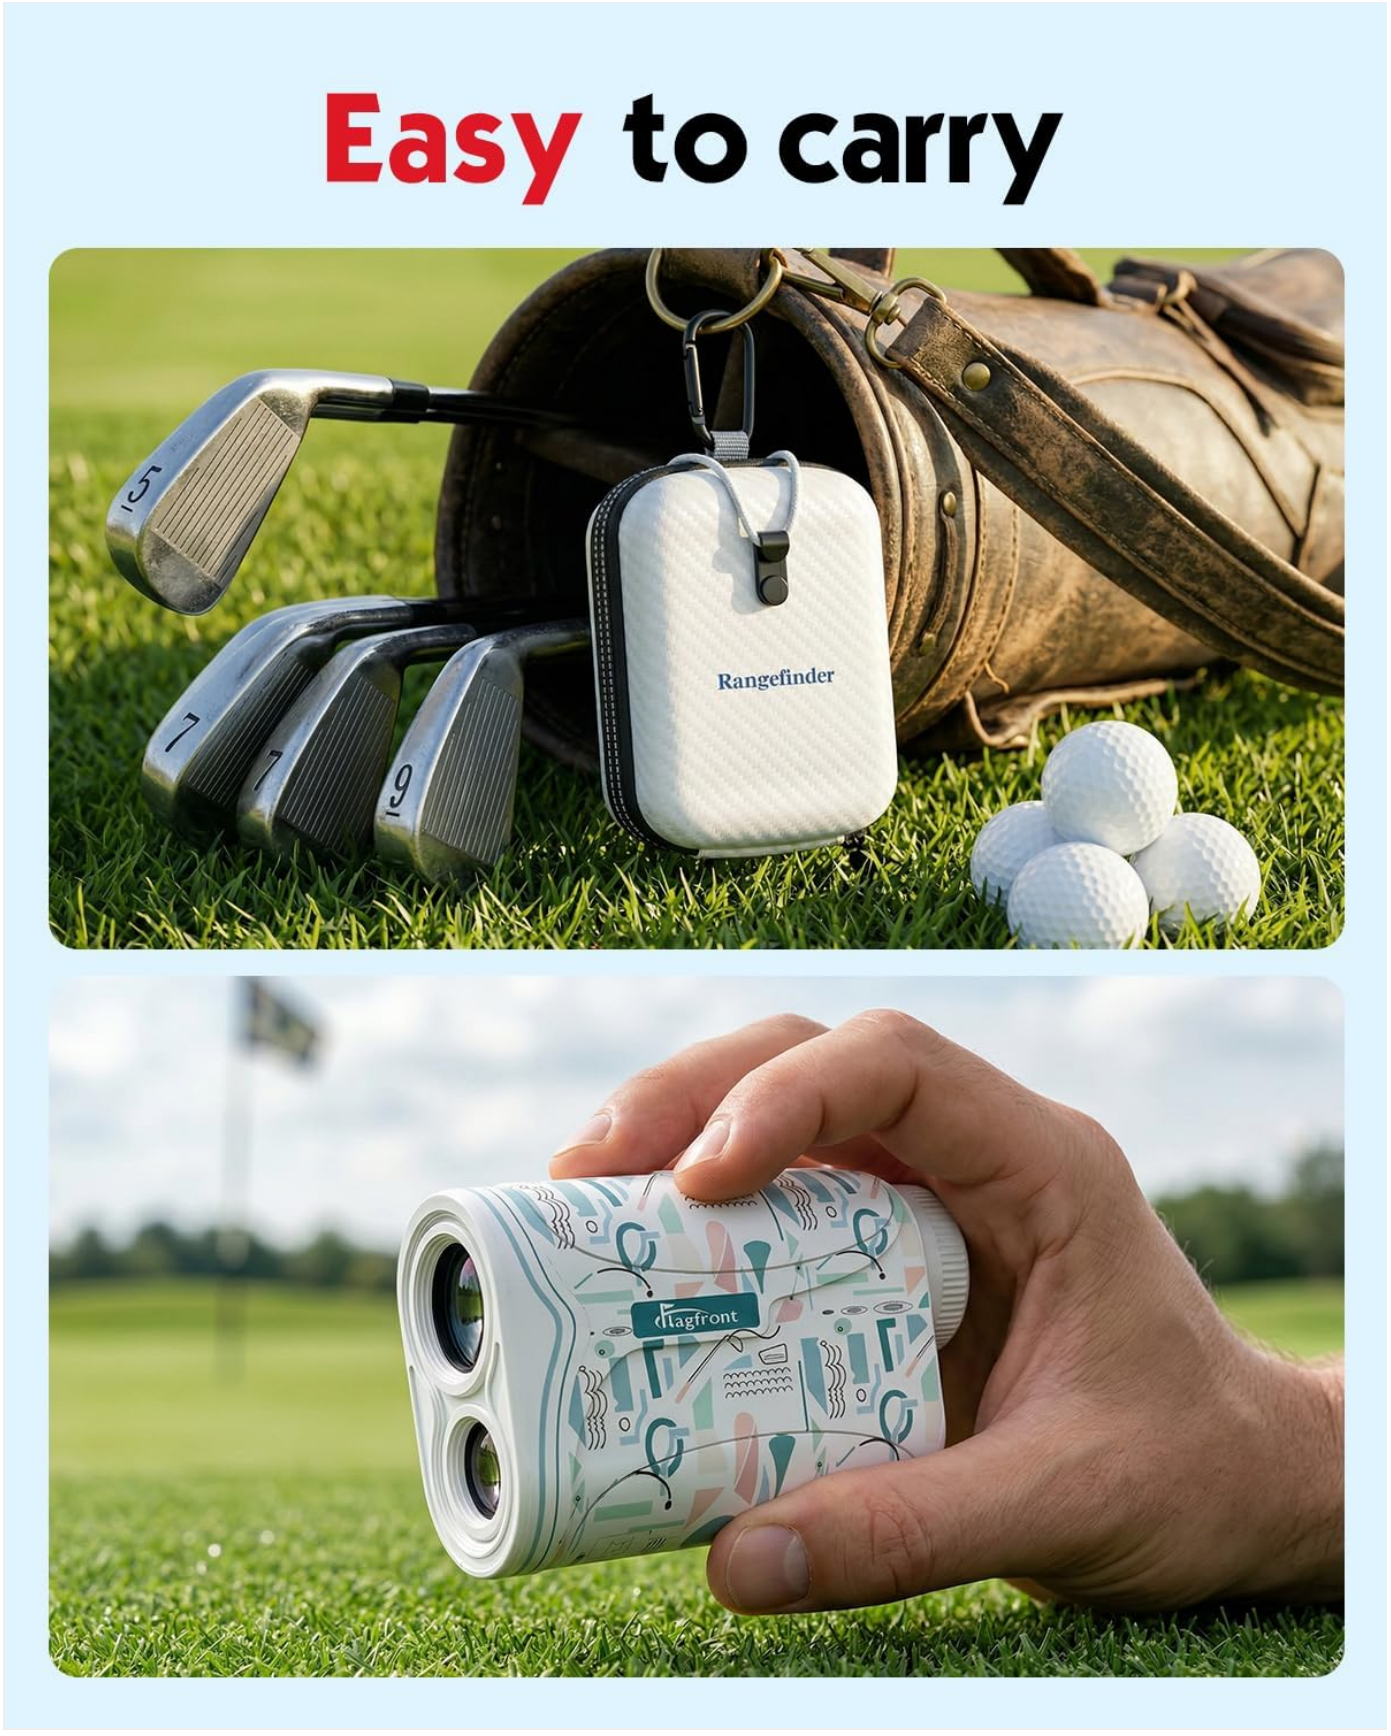


Image: All components included in the Flagfront N2-T1 Golf Rangefinder package.

Product Features

- **1200 Yard Range:** Capable of measuring distances from 5 to 1200 yards with an accuracy of ±1 yard.
- **6X Magnification:** High-definition LCD display with 6x amplification for clear target viewing.
- **Slope Compensation:** Automatically calculates and corrects distances based on uphill or downhill terrain, providing adjusted yardage for improved shot accuracy.

- **Flag Locking with Vibration:** Intelligent flag lock mode identifies the flagpole and provides a vibration alert once locked, minimizing interference from background objects.
- **Continuous Scanning:** Allows for scanning multiple targets to get continuous distance readings.
- **Rechargeable Battery:** Equipped with a built-in Lithium-Ion battery and a Type-C charging port for convenient and sustainable power.
- **Compact and Portable Design:** Lightweight and ergonomically designed for easy handling and transport in a golf bag.



Image: Overview of the compact design and key features of the rangefinder.

Setup

1. **Unboxing:** Carefully remove all components from the packaging. Ensure all items listed in the "What's in the Box" section are present.
2. **Initial Charge:** Before first use, fully charge the rangefinder. Connect the provided Type-C charging cable to the charging port on the device and plug the other end into a compatible USB power source. The LED indicator will show charging status.
3. **Power On:** Press the power button (usually located on the top or side) to turn on the device. The display will illuminate.
4. **Adjust Focus:** Look through the eyepiece and rotate the diopter adjustment ring (if present, usually around the eyepiece) until the display and target appear sharp and clear.



Image: The Type-C charging port on the rangefinder.

Operating Instructions

Basic Measurement

1. **Power On:** Press the power button once to activate the display.
2. **Aim:** Look through the eyepiece and align the aiming reticle with your desired target.

3. **Measure:** Press the power button again to take a measurement. The distance will be displayed on the LCD.

Mode Selection

The rangefinder typically features multiple modes. Use the Mode button (often labeled 'M') to cycle through available modes such as:

- **Standard Mode:** Provides direct line-of-sight distance.
- **Flag Lock Mode:** Designed to easily lock onto the flagpole, ignoring background objects.
- **Slope Mode:** Calculates and displays the slope-adjusted distance.
- **Continuous Scan Mode:** Hold down the power button to scan multiple targets for continuous readings.



Image: Demonstrates the Flag Lock and 6X Magnification features in use.

Using Slope Compensation

In Slope Mode, the rangefinder will not only show the actual distance but also an adjusted distance that accounts for elevation changes. This helps in selecting the correct club for uphill or downhill shots.



Image: Explanation of the Slope Compensation feature.

Automatic Power Off

To conserve battery, the device will automatically power off after a period of inactivity. This feature helps extend battery life during a round of golf.

Maintenance

- **Cleaning Lenses:** Use the provided lens cleaning cloth to gently wipe the lenses. Avoid using abrasive materials or harsh chemicals that could scratch or damage the optical surfaces.
- **Cleaning Body:** Wipe the body of the rangefinder with a soft, damp cloth. Do not submerge the device in water.
- **Storage:** When not in use, store the rangefinder in its portable soft case to protect it from dust, dirt, and physical damage. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Recharge the device regularly, even if not used frequently, to maintain battery health. Avoid fully discharging the battery for extended periods.

Troubleshooting

Problem	Possible Cause	Solution
Device does not power on.	Low or depleted battery.	Charge the device using the provided Type-C cable. Ensure the charging indicator illuminates.
Inaccurate distance readings.	Dirty lenses, unstable aiming, or incorrect mode selection.	Clean lenses with the cleaning cloth. Ensure a steady aim. Verify the correct mode (e.g., Standard, Slope) is selected for your measurement needs.
Cannot lock onto flag.	Background interference, target too far, or not in Flag Lock Mode.	Ensure you are in Flag Lock Mode. Try to aim at the base of the flag. If the flag is very far, try scanning continuously.
Display is dim or unclear.	Low battery or diopter not adjusted.	Charge the device. Adjust the diopter ring around the eyepiece until the display is clear.

Specifications

- **Model:** N2-T1
- **Brand:** Flagfront
- **Measuring Range:** 5-1200 yards
- **Magnification:** 6X
- **Accuracy:** ±1 yard
- **Battery Type:** Lithium-Ion (Rechargeable)
- **Charging Port:** Type-C
- **Material:** Plastic
- **Sport:** Golf

Warranty & Support

The Flagfront N2-T1 Golf Rangefinder comes with a **1-Year Warranty** from the date of purchase, covering manufacturing defects. For warranty claims, technical support, or any inquiries regarding your device, please contact Flagfront customer service through the retailer where the product was purchased or visit the official Flagfront website for contact information.
Please retain your proof of purchase for warranty validation.

© 2026 Flagfront. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question