Aoxun 10x10 Outdoor Gazebo

Aoxun 10x10 Outdoor Gazebo Instruction Manual

Model: 10x10 Outdoor Gazebo (Gray)

Introduction

Thank you for choosing the Aoxun 10x10 Outdoor Gazebo. This manual provides essential information for the safe assembly, operation, and maintenance of your new gazebo. Please read these instructions carefully before beginning assembly and retain them for future reference. This gazebo is designed to provide a shaded and protected outdoor space for patios, gardens, and decks.



Image: The Aoxun 10x10 Outdoor Gazebo, fully assembled, showcasing its double roof design, mosquito netting, and privacy curtains.

Safety Information

- **Read all instructions:** Ensure you understand all assembly steps and safety warnings before installation.
- **Two-person assembly:** Assembly requires at least two adults for safety and ease of installation.
- **Secure installation:** Always anchor the gazebo securely to the ground using the provided expansion bolts and wind ropes to prevent wind damage.
- **Weather conditions:** Do not use the gazebo in extreme weather conditions such as heavy winds, snow, or thunderstorms. Disassemble or secure the canopy during such events.
- **Fire safety:** Keep all flame and heat sources away from the gazebo fabric. The fabric is not fireproof.
- **Regular inspection:** Periodically check all connections and fasteners to ensure they are tight and secure.
- **Weight limits:** Do not hang heavy objects from the gazebo frame or roof. The frame supports a maximum load of 250 lbs.

Package Contents


Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Metal Frame Components (legs, beams, roof supports)
- Double Roof Canopy Fabric
- Mosquito Netting (with zippers)
- Privacy Curtains
- Hardware Kit (screws, bolts, washers, nuts, expansion bolts)
- Wind Ropes
- Assembly Tools (e.g., wrench, hex key - may be included or required)

Assembly Instructions

Follow these steps carefully for proper assembly. It is recommended to have at least two people for this process.

1. **Prepare the Area:** Choose a flat, level surface for assembly. Clear the area of any obstacles.
2. **Unpack Components:** Carefully unpack all parts and lay them out. Refer to the parts list (if provided in the physical manual) to identify each component.
3. **Assemble the Base Frame:** Connect the horizontal base beams to the vertical leg posts. Ensure all connections are finger-tight initially.
4. **Attach Upper Frame:** Connect the upper horizontal beams to the top of the leg posts.
5. **Install Roof Supports:** Assemble the roof support structure according to the diagrams. This typically involves connecting central hubs to corner supports.
6. **Place Canopy:** Drape the main canopy fabric over the roof support structure. Ensure the fabric is oriented correctly, with the smaller top canopy positioned over the main canopy's vent opening. Secure the canopy to the frame using the integrated straps or ties.
7. **Install Mosquito Netting and Privacy Curtains:** Attach the mosquito netting and privacy curtains to the frame using the integrated rings or hooks. The netting and curtains feature zippers for easy opening and closing.
8. **Tighten All Fasteners:** Once the entire structure is assembled, go back and securely tighten all screws and bolts. Do not overtighten.
9. **Anchor the Gazebo:** Use the provided expansion bolts to secure the gazebo legs to a solid surface (e.g., concrete patio). Attach wind ropes to the designated points on the frame and secure them to the ground with stakes for added stability, especially in windy conditions.

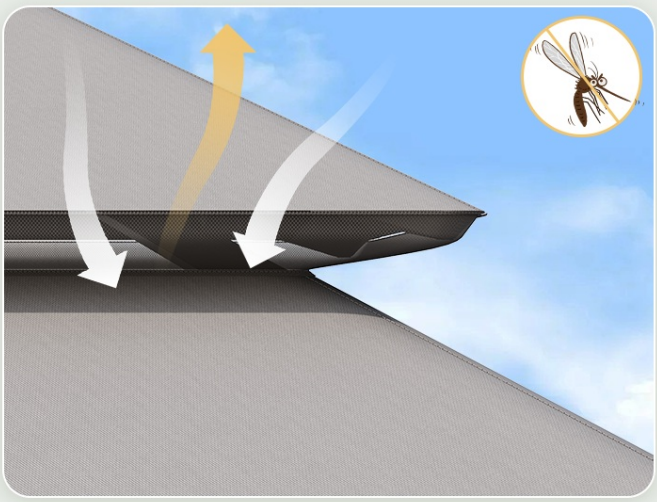

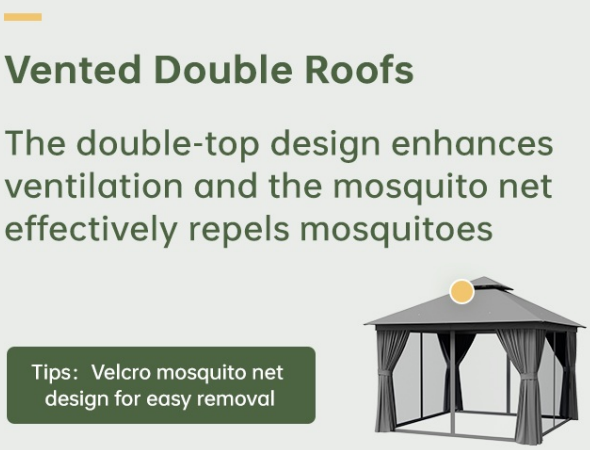


Image: Detailed view of product features including water drainage holes on the canopy, velcro straps for securing curtains, and the stable frame fixation method using bolts.



Image: Visual representation of the gazebo's robust metal frame, highlighting its structural stability and load capacity.

Operating Instructions

- **Mosquito Netting:** Use the integrated zippers to open and close the mosquito netting. This provides protection from insects while allowing airflow.
- **Privacy Curtains:** The privacy curtains can be drawn closed for seclusion or tied back to the posts using the attached velcro straps for an open feel.
- **Accessory Hooks:** The gazebo features corner hanging rings and J-shaped hooks on the interior roof for attaching string lights, fans, or other lightweight decorations. Do not exceed the recommended weight limit for these hooks.



Image: Illustration of the gazebo's accessory points, including four corner rings for string lights and two J-shaped hooks for fans or other decorations.

Maintenance

- **Cleaning Fabric:** Clean the canopy, netting, and curtains with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely before storage.
- **Cleaning Frame:** Wipe the metal frame with a damp cloth. For stubborn dirt, use a mild detergent.

- **Seasonal Storage:** For prolonged periods of non-use or during harsh weather, it is recommended to remove the canopy fabric, netting, and curtains and store them in a dry, protected area.
- **Inspect Regularly:** Periodically check the fabric for tears or damage and the frame for rust or loose connections. Address any issues promptly to ensure longevity.
- **Water Drainage:** The double roof design includes drainage holes to prevent water accumulation. Ensure these holes remain clear of debris.

Troubleshooting

Problem	Possible Cause	Solution
Gazebo feels unstable or wobbly.	Loose connections; insufficient anchoring.	Ensure all bolts and screws are tightened. Verify expansion bolts are securely fastened to the ground and wind ropes are taut.
Water pooling on the canopy.	Drainage holes blocked; improper canopy tension.	Clear any debris from the canopy's drainage holes. Re-adjust canopy tension to ensure proper water runoff.
Mosquito netting or curtains do not close properly.	Zippers are jammed or damaged; fabric misaligned.	Check zippers for obstructions and gently clear. Ensure fabric is properly aligned on the frame. If zippers are damaged, contact customer support.
Frame components appear bent or damaged.	Impact during shipping or assembly; excessive force.	If damage occurred during shipping, contact the seller immediately. Do not attempt to force bent parts.

Specifications

- **Brand:** Aoxun
- **Model:** 10x10 Outdoor Gazebo
- **Product Dimensions:** 120"L x 120"W x 111"H (10ft x 10ft x 9.25ft)
- **Frame Material:** Powder-Coated Metal (Steel)
- **Canopy Material:** Fabric (Water Resistant, Anti-UV UPF 50+)
- **Color:** Gray
- **Assembly Required:** Yes
- **Special Features:** Double Roof, Mosquito Netting, Privacy Curtains, Corner Hanging Rings, J-shaped Hooks, Wind Ropes, Expansion Bolts.



Image: Dimensional diagram of the Aoxun 10x10 Outdoor Gazebo, illustrating its overall size and proportions.

Warranty and Support

For warranty information, product support, or to order replacement parts, please contact Aoxun customer service directly. Refer to your purchase documentation for specific contact details or visit the official Aoxun website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question