Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Yixinxin UKUP019DY

Yixinxin 4K 64MP Underwater Camera UKUP019DY User Manual

1. Introduction

Thank you for choosing the Yixinxin 4K 64MP Underwater Camera UKUP019DY. This camera is designed to capture high-quality photos and videos in various environments, including underwater. Featuring 4K UHD video recording, 64MP high-resolution photos, a waterproof and dustproof design up to 33 feet (10 meters), and a convenient dual-screen display, it is ideal for snorkeling, diving, and other outdoor adventures. This manual provides essential information for setting up, operating, and maintaining your camera.



Image 1.1: The Yixinxin 4K 64MP Underwater Camera UKUP019DY, showcasing its robust design.

2. Package Contents

Please check the package contents to ensure all items are present:

- Yixinxin 4K 64MP Underwater Camera UKUP019DY
- Rechargeable Lithium-Ion Battery (1500mAh)
- 32GB TF Card (pre-installed or included separately)
- USB Charging Cable
- Wrist Strap
- User Manual

3. Product Features

- **4K UHD Video and 64MP High-Resolution Photos:** Capture every moment with stunning 4K video and detailed 64-megapixel images.
- **33FT Waterproof & Dustproof Design:** Designed for underwater use up to 33 feet (10 meters) and protected against dust, making it suitable for various outdoor conditions. The camera also floats for easy retrieval in water.
- **Autofocus Macro Shooting & 16X Digital Zoom:** Achieve precise focus for close-up shots from 3.97 inches (10 cm) and zoom in on distant subjects with 16X digital zoom.
- **HD Dual-Screen Design:** Features a 2.8-inch rear IPS HD screen and a 1.4-inch front IPS HD screen for easy framing of selfies and video recording.
- **Long Battery Life:** Equipped with a 1500mAh battery, providing up to 100 minutes of continuous 4K video recording. Supports memory cards up to 128GB.



Image 3.1: Overview of key features including waterproof depth, anti-shake, 16X zoom, and macro photography.



Image 3.2: Illustration of the camera's waterproof capability up to 33 feet (10 meters).



Image 3.3: The camera's HD dual-screen design, showing the 2.8-inch rear and 1.4-inch front screens.

4. Setup

4.1. Battery Installation

1. Open the battery compartment cover, usually located on the side or bottom of the camera. Ensure the lock is disengaged.
2. Insert the 1500mAh Lithium-Ion battery according to the polarity indicators (+/-).
3. Close the battery compartment cover securely and engage the lock to maintain waterproof integrity.



Image 4.1: Illustration of battery installation into the camera, highlighting the 1500mAh battery.

4.2. Memory Card Installation

1. Locate the memory card slot, often near the battery compartment.
2. Insert the 32GB TF card (or another compatible card up to 128GB) into the slot until it clicks into place. Ensure the card is oriented correctly.
3. Close any covers securely.

4.3. Charging the Battery

1. Connect the camera to a power source using the provided USB cable.
2. The charging indicator light will typically illuminate during charging and turn off or change color when fully charged.
3. A full charge provides approximately 100 minutes of 4K video recording.

5. Operating Instructions

5.1. Power On/Off

- To power on: Press and hold the Power button until the screen illuminates.
- To power off: Press and hold the Power button again until the screen turns off.

5.2. Taking Photos

1. Turn on the camera.
2. Frame your shot using either the front or rear screen.
3. Half-press the Shutter button to activate autofocus. The focus frame will typically turn green when focus is achieved.
4. Fully press the Shutter button to capture the photo.

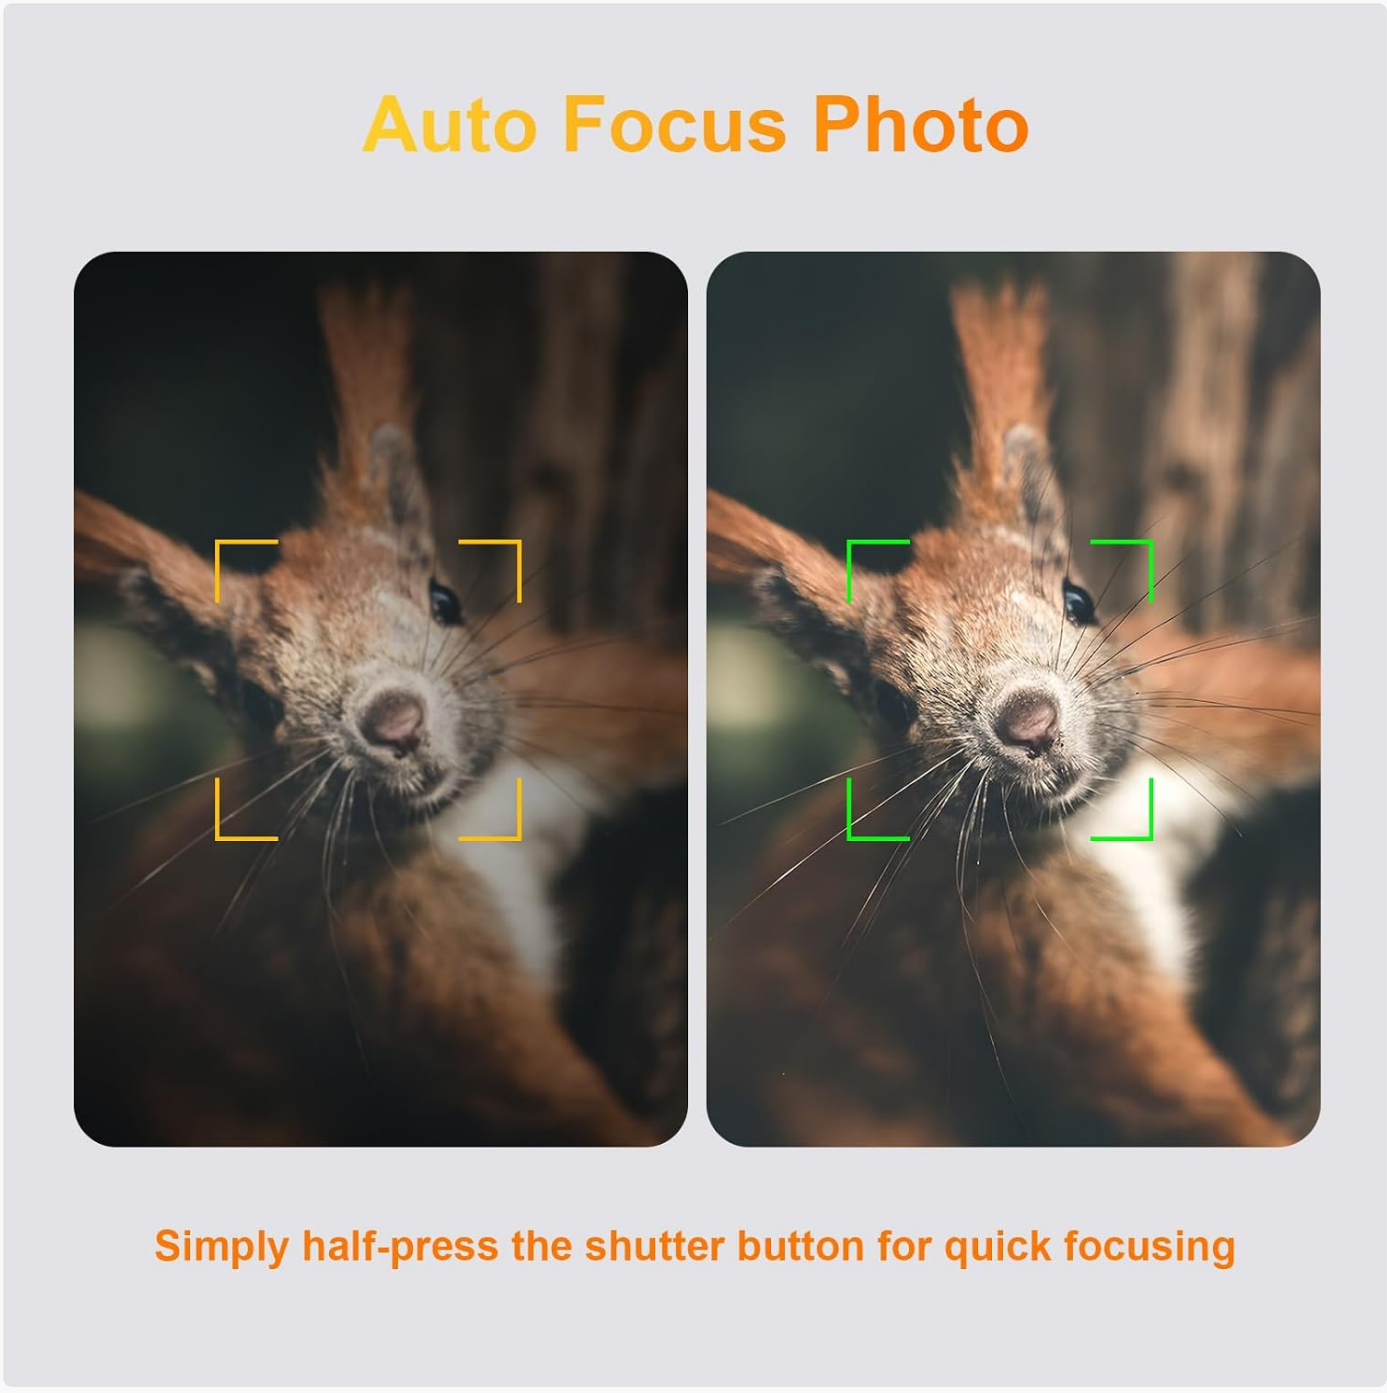


Image 5.1: Demonstration of the camera's autofocus feature, showing a clear, focused image after half-pressing the shutter.

5.3. Recording Videos

1. Switch the camera to video mode (refer to your camera's specific mode button or menu).

2. Press the Shutter button to start recording. A recording indicator (e.g., red dot or timer) will appear on the screen.
3. Press the Shutter button again to stop recording.

5.4. Using Dual Screens

The camera features both a rear (2.8-inch) and a front (1.4-inch) screen. You can switch between screens or use the front screen for selfies and vlogging. Consult your camera's specific buttons or menu options for screen switching functionality.

5.5. Zoom Function

Use the zoom buttons (often marked 'W' for Wide and 'T' for Telephoto) to adjust the 16X digital zoom. Press 'T' to zoom in and 'W' to zoom out.

5.6. Underwater Use

Before submerging the camera, ensure all compartment covers (battery, memory card, USB port) are securely closed and locked to maintain its waterproof seal. The camera is floatable, making it easier to retrieve if dropped in water.

6. Maintenance

6.1. Cleaning

- After underwater use, rinse the camera with fresh water to remove salt, sand, or chlorine.
- Wipe the camera dry with a soft, lint-free cloth.
- Clean the lens and screens with a specialized lens cleaning cloth. Avoid abrasive materials.



Image 6.1: The camera's dustproof design, illustrating its resilience against environmental elements like wind and sand.

6.2. Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, remove the battery.

6.3. Battery Care

- Charge the battery fully before first use.
- Avoid completely draining the battery frequently to prolong its lifespan.
- Use only the provided or approved charging accessories.

7. Troubleshooting

Problem	Possible Cause	Solution
Camera does not power on	Battery is low or not inserted correctly.	Charge the battery. Reinsert the battery, ensuring correct polarity.
Photos are blurry	Autofocus failed, camera shake, or dirty lens.	Ensure half-press for autofocus. Hold the camera steady. Clean the lens.
Memory card error	Card not inserted correctly, incompatible card, or card is full/corrupted.	Reinsert the card. Use a compatible TF card (up to 128GB). Format the card (this will erase data).
Water leakage	Compartment covers not properly sealed.	Immediately remove the camera from water. Open all compartments and allow to dry completely. Ensure all seals are clean and covers are securely locked before next use. If leakage persists, discontinue use.

8. Specifications

Feature	Specification
Brand	Yixinxin
Model Name	UKUP019DY
Image Sensor Technology	CMOS
Effective Still Resolution	64 Megapixels
Photo Sensor Size	1/2.7-inch
Video Capture Resolution	2160p (4K UHD)
Optical Zoom	1X
Digital Zoom	16X
Screen Size	2.8 inches (rear), 1.4 inches (front)
Display Type	LCD (IPS HD)
Connectivity Technology	USB
Battery Type	Lithium-Ion
Battery Capacity	1500mAh
Recording Capacity	100 minutes (4K video)
Memory Storage Capacity	Up to 128GB (TF card)
Image Stabilization	No

Feature	Specification
Self-Timer	No
Audio Recording	No
Video Output Ports	1
Color	Yellow
GTIN / UPC	717504970127

9. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.

© 2023 Yixinxin. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GGQVWC6N

More documents and user manuals: **https://manuals.plus/**