Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Luqeeg Luqeeg17eabcnl6z-12

Luqeeg Portable MP3 Player User Manual

Model: Luqeeg17eabcnl6z-12

1. Product Overview

The Luqeeg Portable MP3 Player is a compact and lightweight device designed for enjoying music and audiobooks on the go. It features lossless sound quality, supports memory cards up to 64GB for expanded storage, and has a long-lasting built-in battery. Its simple design makes it suitable for various users, including students.



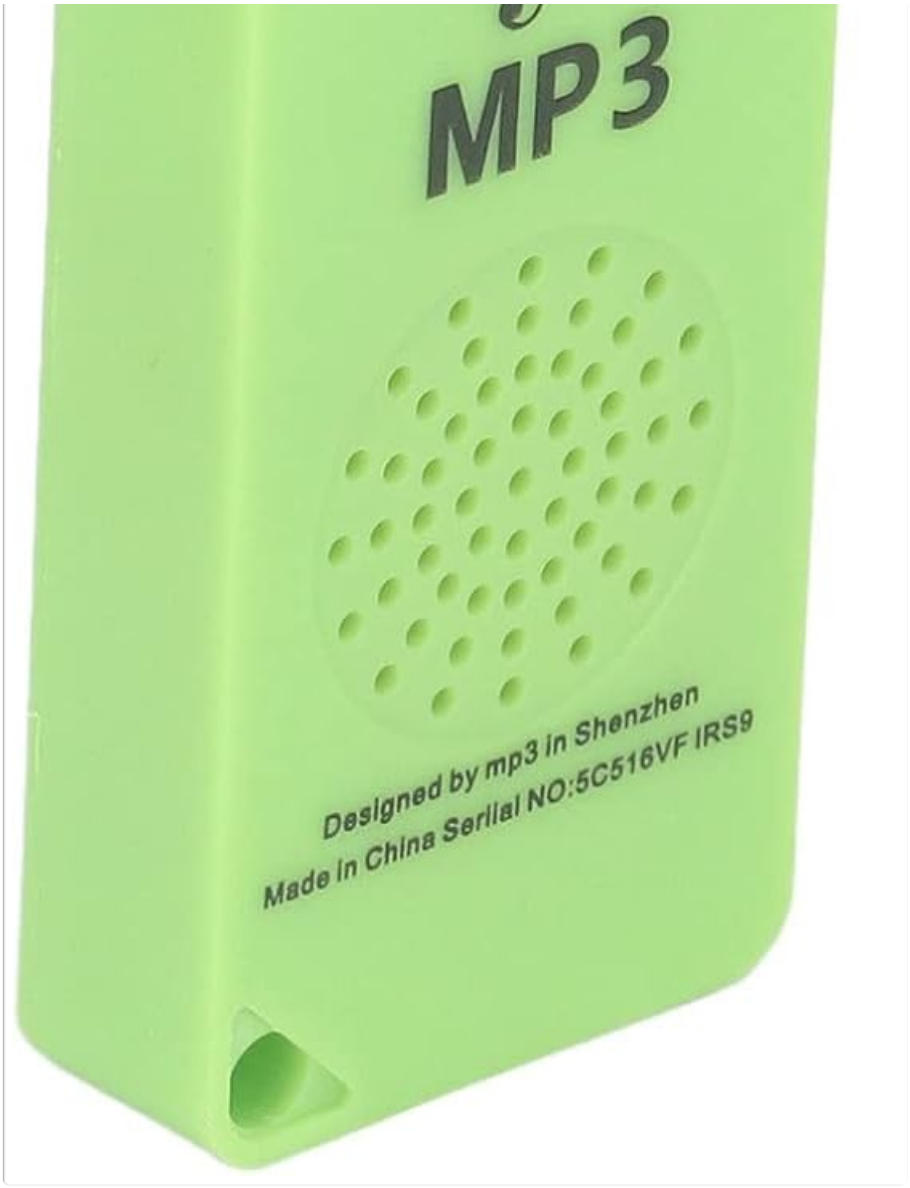


Figure 1: Front view of the Luqeeg Portable MP3 Player, showing the speaker grille and 'MP3' branding.

2. Setup

2.1 Charging the Device

Before initial use, fully charge the MP3 player. Connect the device to a USB power source (e.g., computer USB port or USB wall adapter) using a compatible charging cable. The charging indicator will typically show the charging status and turn off or change color when fully charged.

2.2 Inserting a Memory Card

The device supports a memory card (not included) up to 64GB for storing audio files.

1. Locate the memory card slot on the side of the MP3 player.
2. Gently insert the memory card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, push the card inward until it springs out.




on
off
MP3
Designed by mp3 in Shenzhen
Made in China Serial NO:5C516VF IRS9



Figure 2: Side view illustrating the memory card slot and the 'on/off' switch.

2.3 Powering On/Off

Use the physical switch located on the side of the device to turn it on or off.

- To turn **on**: Slide the switch to the 'on' position.
- To turn **off**: Slide the switch to the 'off' position.

2.4 Connecting Headphones

The MP3 player features a standard 3.5mm headphone jack.

- Insert your 3.5mm headphones into the headphone jack located on the top of the device.



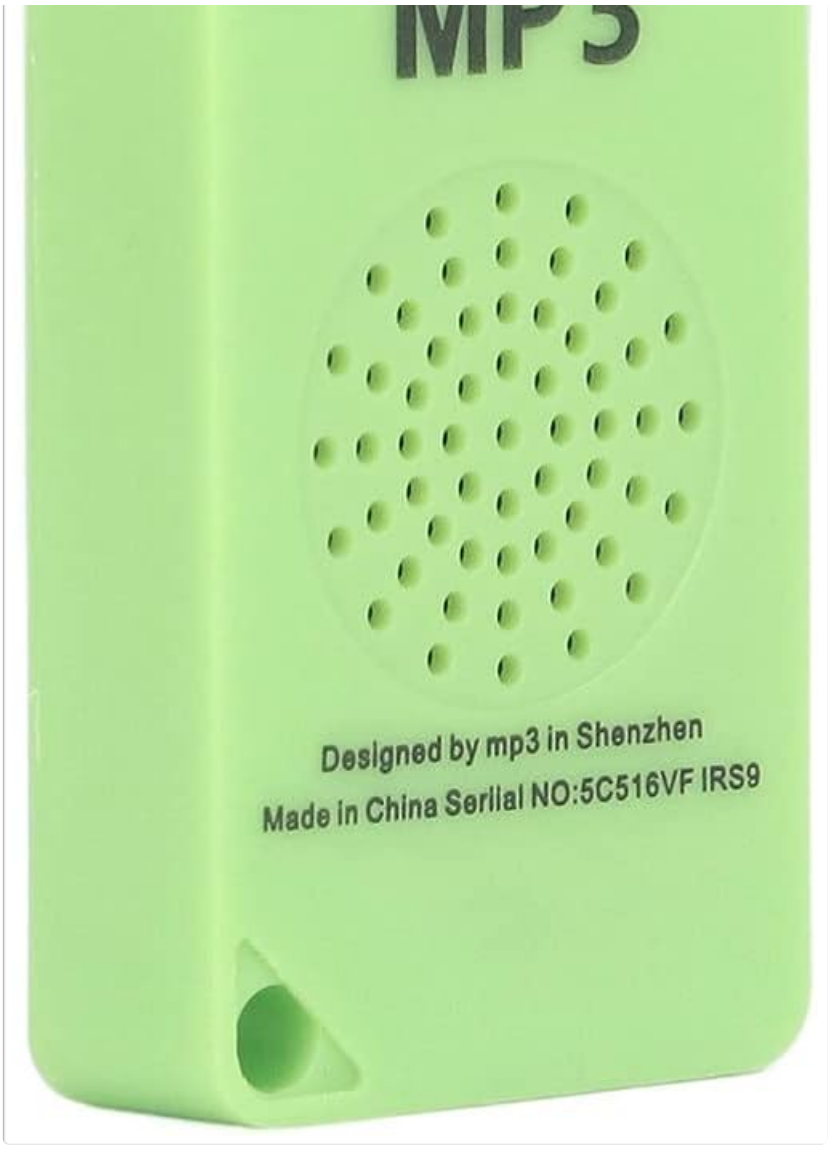


Figure 3: Top view displaying the 3.5mm headphone jack.

3. Operating Instructions

3.1 Transferring Audio Files

To transfer music or audiobook files to your MP3 player:

1. Ensure a memory card is inserted into the MP3 player.
2. Connect the MP3 player to your computer using a USB cable.
3. The device should appear as a removable disk drive on your computer.
4. Drag and drop your desired audio files (e.g., MP3 format) into the device's storage.
5. Safely eject the device from your computer before disconnecting the USB cable.

3.2 Basic Playback Controls

The MP3 player features simple controls for audio playback.

- **Play/Pause:** Press the designated button (if available, typically a central button or a specific function button) to start or pause playback.
- **Next/Previous Track:** Use the forward/backward buttons to skip to the next or previous track.

- **Volume Control:** Adjust the volume using the dedicated volume buttons or a rocker switch.

Note: Specific button functions may vary slightly. Refer to the device's physical markings for exact controls.

4. Maintenance

4.1 Cleaning

- Wipe the exterior of the device with a soft, dry cloth.
- Do not use liquid cleaners, aerosols, or harsh chemicals.

4.2 Battery Care

- Avoid fully discharging the battery frequently.
- Charge the device regularly, even if not in use, to maintain battery health.
- Do not expose the device to extreme temperatures.

4.3 Storage

- Store the MP3 player in a cool, dry place away from direct sunlight and moisture.
- Keep it away from strong magnetic fields.

5. Troubleshooting

5.1 Device Will Not Turn On

- Ensure the battery is charged. Connect the device to a power source and allow it to charge for at least 30 minutes.
- Verify the 'on/off' switch is in the 'on' position.

5.2 No Sound

- Check if headphones are properly connected to the 3.5mm jack.
- Increase the volume level.
- Ensure the audio files are not corrupted and are in a supported format.

5.3 Cannot Transfer Files to Device

- Ensure the USB cable is securely connected to both the device and the computer.
- Verify that a memory card is properly inserted and recognized by the device.
- Try connecting to a different USB port on your computer.
- Ensure the device drivers are correctly installed on your computer (usually automatic).

6. Specifications

Feature	Detail

Feature	Detail
Brand	Luqeeg
Model Name	Luqeeg17eabcnl6z-12
Colour	Green
Material	ABS
Built-in Lithium Battery	180mAh
Maximum Memory Card Support	64GB (Memory Card Not Included)
Parcel Dimensions	9 x 3 x 1 cm
Item Weight	21 g
Country of Origin	China

7. Warranty and Support

7.1 Warranty Information

This product is covered by a manufacturer warranty for 90 days from the date of purchase. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For further assistance or inquiries, please visit the official Luqeeg store or contact your retailer.

Official Luqeeg Store: Luqeeg Store on Amazon

© 2023 Luqeeg. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GH6Z7Z11

More documents and user manuals: **https://manuals.plus/**