Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Skullcandy Crusher ANC 2

Skullcandy Crusher ANC 2 Wireless Headphones User Manual

Model: S6CAW-U050

Introduction

Welcome to the user manual for your Skullcandy Crusher ANC 2 Wireless Headphones. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance and an immersive audio experience.



Image: Front view of the Skullcandy Crusher ANC 2 Wireless Headphones in Realtree EDGE Drab color.

What's in the Box

Your Skullcandy Crusher ANC 2 package includes the following items:

- Crusher® ANC 2 Wireless Headphones
- USB-A to USB-C Charging Cable
- 3.5mm Audio Cable
- Protective Travel Case
- Quick Start & User Guides



Image: Contents of the Skullcandy Crusher ANC 2 box, including headphones, cables, and case.

Setup

1. Charging Your Headphones

Before first use, fully charge your headphones. A full charge takes approximately 2.5 hours.

1. Connect the USB-C end of the charging cable to the USB-C port on your headphones.
2. Connect the USB-A end of the charging cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The LED indicator on the headphones will show charging status. It will typically turn off or change color when fully charged.

Rapid Charge: A 10-minute charge provides up to 4 hours of listening time.

2. Bluetooth Pairing

1. Ensure your headphones are powered off.
2. Press and hold the Power button for 3-5 seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "Crusher ANC 2" from the list of available devices.
5. Once connected, the LED indicator will typically flash blue slowly or turn solid blue.

3. Multipoint Pairing

Your Crusher ANC 2 headphones can connect to two devices simultaneously.

1. Pair with your first device as described above.
2. Disable Bluetooth on the first device.
3. The headphones will re-enter pairing mode. Pair with your second device.
4. Re-enable Bluetooth on your first device. The headphones should automatically connect to both devices.



Image: User wearing Crusher ANC 2 headphones, demonstrating wireless use.

Operating Your Headphones

Controls Overview

The Crusher ANC 2 headphones feature intuitive button controls for various functions:

- **Power Button:** Power on/off, Play/Pause, Answer/End Call.
- **Volume Up (+):** Increase volume, Skip track forward (long press).
- **Volume Down (-):** Decrease volume, Skip track backward (long press).
- **ANC/Stay-Aware Button:** Toggle Active Noise Cancelling (ANC) and Stay-Aware modes.
- **Crusher Bass Slider:** Adjust the level of sensory bass.

Active Noise Cancelling (ANC) and Stay-Aware Mode

Press the ANC button to cycle through modes:

- **ANC On:** Blocks out ambient noise for an immersive listening experience.
- **Stay-Aware Mode:** Allows you to hear your surroundings while still enjoying your audio, useful for awareness in busy environments.

- **ANC Off:** Standard listening mode without noise cancellation.

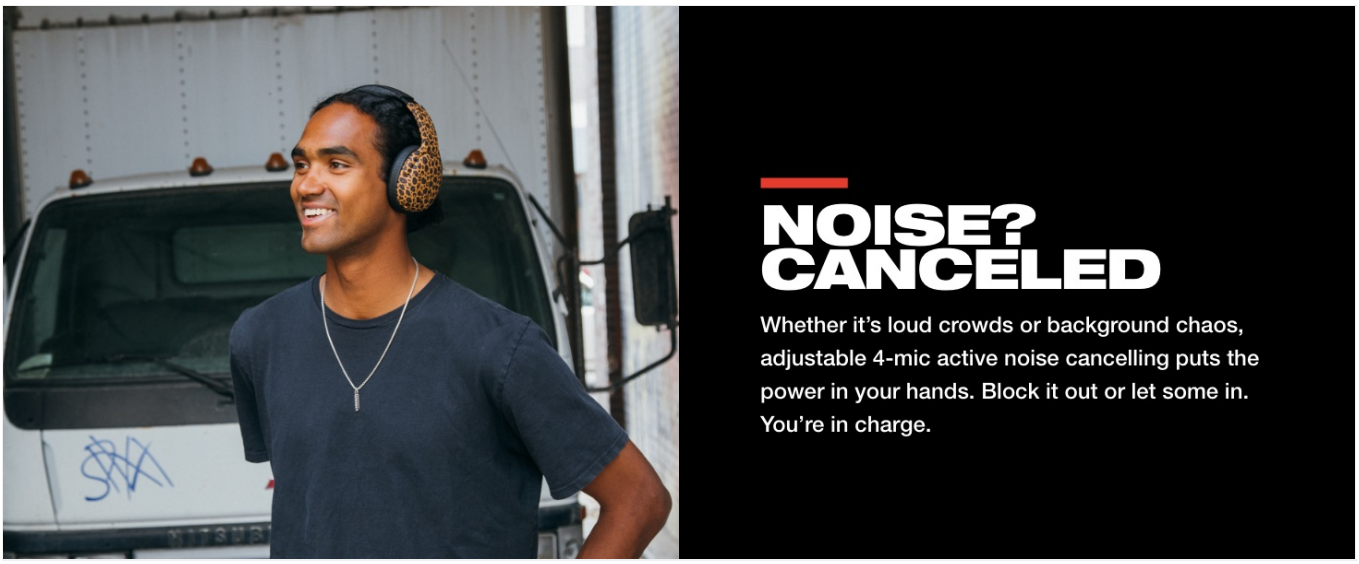


Image: Visual representation of the active noise canceling feature.

Crusher Sensory Bass

Adjust the patented Multi-Sensory Crusher Bass using the dedicated slider on the earcup. This allows you to feel the bass in your audio, from subtle vibrations to powerful thumps.

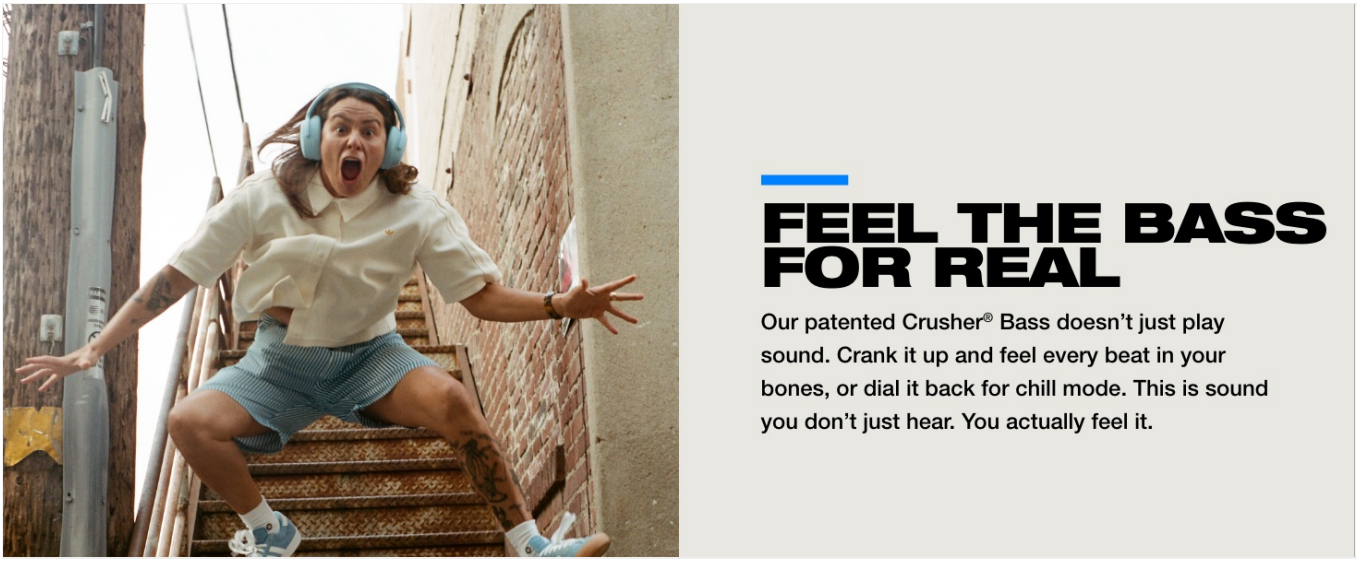


Image: Illustration highlighting the immersive sensory bass experience.

Skullcandy App Integration

Enhance your experience by downloading the Skullcandy App. The app allows you to:

- Customize your sound with Personal Sound by Mimi.
- Fine-tune EQ settings.
- Adjust ANC and Stay-Aware levels.
- Assign custom button functions.
- Access voice commands.

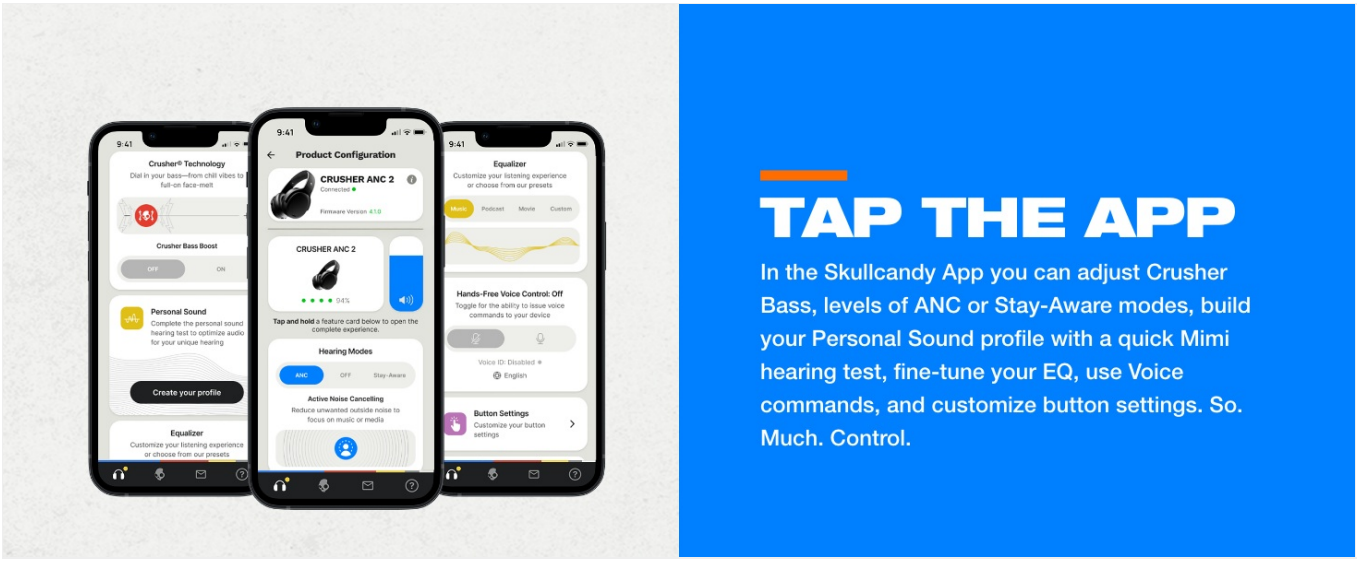


Image: Screenshots of the Skullcandy app showing customization options.

Official User Guide Video

Your browser does not support the video tag.

Video: Official Skullcandy Crusher ANC 2 User Guide. This video provides a comprehensive walkthrough of the headphone features and operations.

Maintenance

Cleaning

- Gently wipe the earcups and headband with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or spray directly onto the headphones.
- Avoid getting moisture into any openings.

Storage

- When not in use, store your headphones in the provided protective travel case to prevent damage.
- Store in a cool, dry place, away from extreme temperatures and direct sunlight.

Troubleshooting

No Power

- Ensure the headphones are charged. Connect to a power source using the USB-C cable.
- Press and hold the Power button for a few seconds to ensure it's not just in standby.

Cannot Pair via Bluetooth

- Ensure headphones are in pairing mode (LED flashing blue/red).
- Turn off and on Bluetooth on your device.
- Forget "Crusher ANC 2" from your device's Bluetooth list and try pairing again.
- Ensure headphones are not already connected to another device (multipoint pairing).

No Sound or Low Volume

- Check volume levels on both the headphones and your connected device.
- Ensure headphones are properly paired and connected.
- Try playing audio from a different application or source.

ANC Not Working Effectively

- Ensure ANC mode is activated (not Stay-Aware or Off).
- Check for proper fit of the earcups over your ears to create a good seal.
- Update firmware via the Skullcandy App if available.

Specifications

Feature	Detail
Brand	Skullcandy
Model Name	Crusher ANC 2
Model Number	S6CAW-U050
Ear Placement	Over Ear
Noise Control	Active Noise Cancellation (Adjustable)
Connectivity Technology	Wireless (Bluetooth 5.2)
Bluetooth Range	10 meters
Battery Life (ANC Off)	Up to 60 hours
Battery Life (ANC On)	Up to 50 hours
Rapid Charge	10 min charge = 4 hours playtime
Full Charge Time	2.5 hours
Impedance	32 ohm
Frequency Response	20 Hz - 20 kHz
Sensitivity	100 dB
Weight	332 g
Additional Features	Multi-Sensory Crusher Bass, Multipoint Pairing, Foldable Design, Built-in Microphone, Skullcandy App Compatible

Warranty and Support

Your Skullcandy Crusher ANC 2 Wireless Headphones come with a**1-Year Manufacturer Warranty**. For warranty claims, technical support, or further assistance, please visit the official Skullcandy support website or contact their

customer service.
Skullcandy Support: www.skullcandy.com/support

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GHBWT3M8

More documents and user manuals: **https://manuals.plus/**