Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Bellemave TH-00477-FXL-B

Bellemave Metal Full XL Over Queen Bunk Bed Instruction Manual

Model: TH-00477-FXL-B

1. Introduction

Thank you for purchasing the Bellemave Metal Full XL Over Queen Bunk Bed. This manual provides essential information for the safe assembly, operation, and maintenance of your new bunk bed. Please read these instructions carefully before assembly and retain them for future reference.

2. Safety Information

Your safety is paramount. Adhere to all warnings and instructions to prevent injury.

- **Weight Capacity:** The upper bed has a maximum weight capacity of 400 lbs. The lower bed has a maximum weight capacity of 600 lbs. Do not exceed these limits.
- **Guardrails:** The top bunk is equipped with full-length guardrails for fall protection. Ensure they are always securely in place.
- **Ladders:** Use the provided ladders for accessing the upper bunk. Ensure ladders are securely attached before use.
- **Children's Safety:** This bunk bed has passed multiple CPC (Children's Product Certificate) safety tests. However, children should be supervised when using the bunk bed, especially the upper bunk.
- **Mattress Size:** Use only mattresses of the specified size to ensure proper fit and safety.
- **Assembly:** Ensure all components are correctly assembled and tightened according to the instructions. Periodically check and re-tighten all connections.
- **No Jumping:** Do not allow jumping on the bunk bed.
- **Ventilation:** Ensure adequate ventilation around the bed.

3. Product Overview

The Bellemave Metal Full XL Over Queen Bunk Bed is designed to maximize vertical space, offering a Full XL size upper bed and a Queen size lower bed. Constructed with a reinforced metal frame and an anti-rust powder-coated finish, it provides stability and durability.

Key Features:

- Full XL upper bed and Queen lower bed configuration.
- Heavy-duty metal construction for enhanced strength and durability.
- Integrated guardrails on the upper bunk for safety.
- Two side ladders for convenient access to the upper bunk.
- Noise-free slat system with plastic stoppers for a stable sleep environment.
- Anti-rust powder-coated finish.



Figure 3.1: Assembled Bellemave Metal Full XL Over Queen Bunk Bed. This image shows the bunk bed fully assembled with mattresses and bedding, highlighting its overall design and functionality.

4. Setup and Assembly

The Bellemave Metal Full XL Over Queen Bunk Bed requires assembly. All necessary tools, hardware, and detailed instructions are included in the packaging.

1. **Unpacking:** The product ships in two separate boxes, which may arrive at different times. Ensure all boxes have arrived before beginning assembly. Carefully unpack all components and verify against the parts list provided in the separate assembly guide.
2. **Preparation:** Choose a clear, flat, and spacious area for assembly. It is recommended to have at least two adults for assembly.
3. **Follow Instructions:** Refer to the separate, detailed assembly instruction manual provided with your product for step-by-step guidance. Pay close attention to diagrams and warnings.
4. **Tightening:** Ensure all screws and bolts are securely tightened after assembly. Do not overtighten to avoid stripping threads.
5. **Placement:** Position the bunk bed away from windows, heaters, and other potential hazards.

Note: If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

5. Operation and Usage

Once assembled, the bunk bed is ready for use.

- **Mattress Placement:** Place a Full XL mattress on the upper bunk and a Queen mattress on the lower bunk. Ensure mattresses fit snugly within the frame.
- **Accessing Upper Bunk:** Always use the provided ladders to access the upper bunk. Do not climb on the frame or guardrails.
- **Weight Distribution:** Distribute weight evenly on both bunks. Avoid concentrating heavy loads in one area.
- **Children:** Ensure children understand and follow safety guidelines, especially regarding the upper bunk.

6. Maintenance

Regular maintenance will help prolong the life and ensure the safety of your bunk bed.

- **Cleaning:** Wipe the metal frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Hardware Check:** Periodically (e.g., every 3-6 months) inspect all bolts, screws, and connections. Re-tighten any loose hardware to maintain stability and prevent noise.
- **Slat System:** Ensure the plastic stoppers on the slat system remain in place to prevent noise and maintain mattress support.
- **Damage Inspection:** Regularly check for any signs of wear, damage, or structural compromise. If any damage is found, discontinue use and contact customer support.

7. Troubleshooting

If you encounter any issues with your Bellemave bunk bed, refer to the following common solutions:

Problem	Possible Cause	Solution
Bed feels wobbly or unstable.	Loose hardware connections.	Check and re-tighten all bolts and screws. Ensure all components are correctly aligned.
Squeaking or noise during use.	Loose connections; slats not properly seated.	Re-tighten all hardware. Ensure all slats are correctly positioned and the plastic stoppers are in place.
Missing parts during assembly.	Packaging error or lost during transit.	Verify all boxes have arrived. Refer to the parts list in the assembly guide. Contact customer support for replacement parts.

If the problem persists after attempting these solutions, please contact Bellemave customer support.

8. Specifications

Feature	Detail
Model Number	TH-00477-FXL-B
Size	Full XL over Queen
Material	Metal
Color	Black
Product Dimensions (L x W x H)	82.7"L x 63"W x 63.7"H
Item Weight	58 pounds
Upper Bed Weight Capacity	400 lbs
Lower Bed Weight Capacity	600 lbs
Included Components	Guardrails, Slats
UPC	800067041875

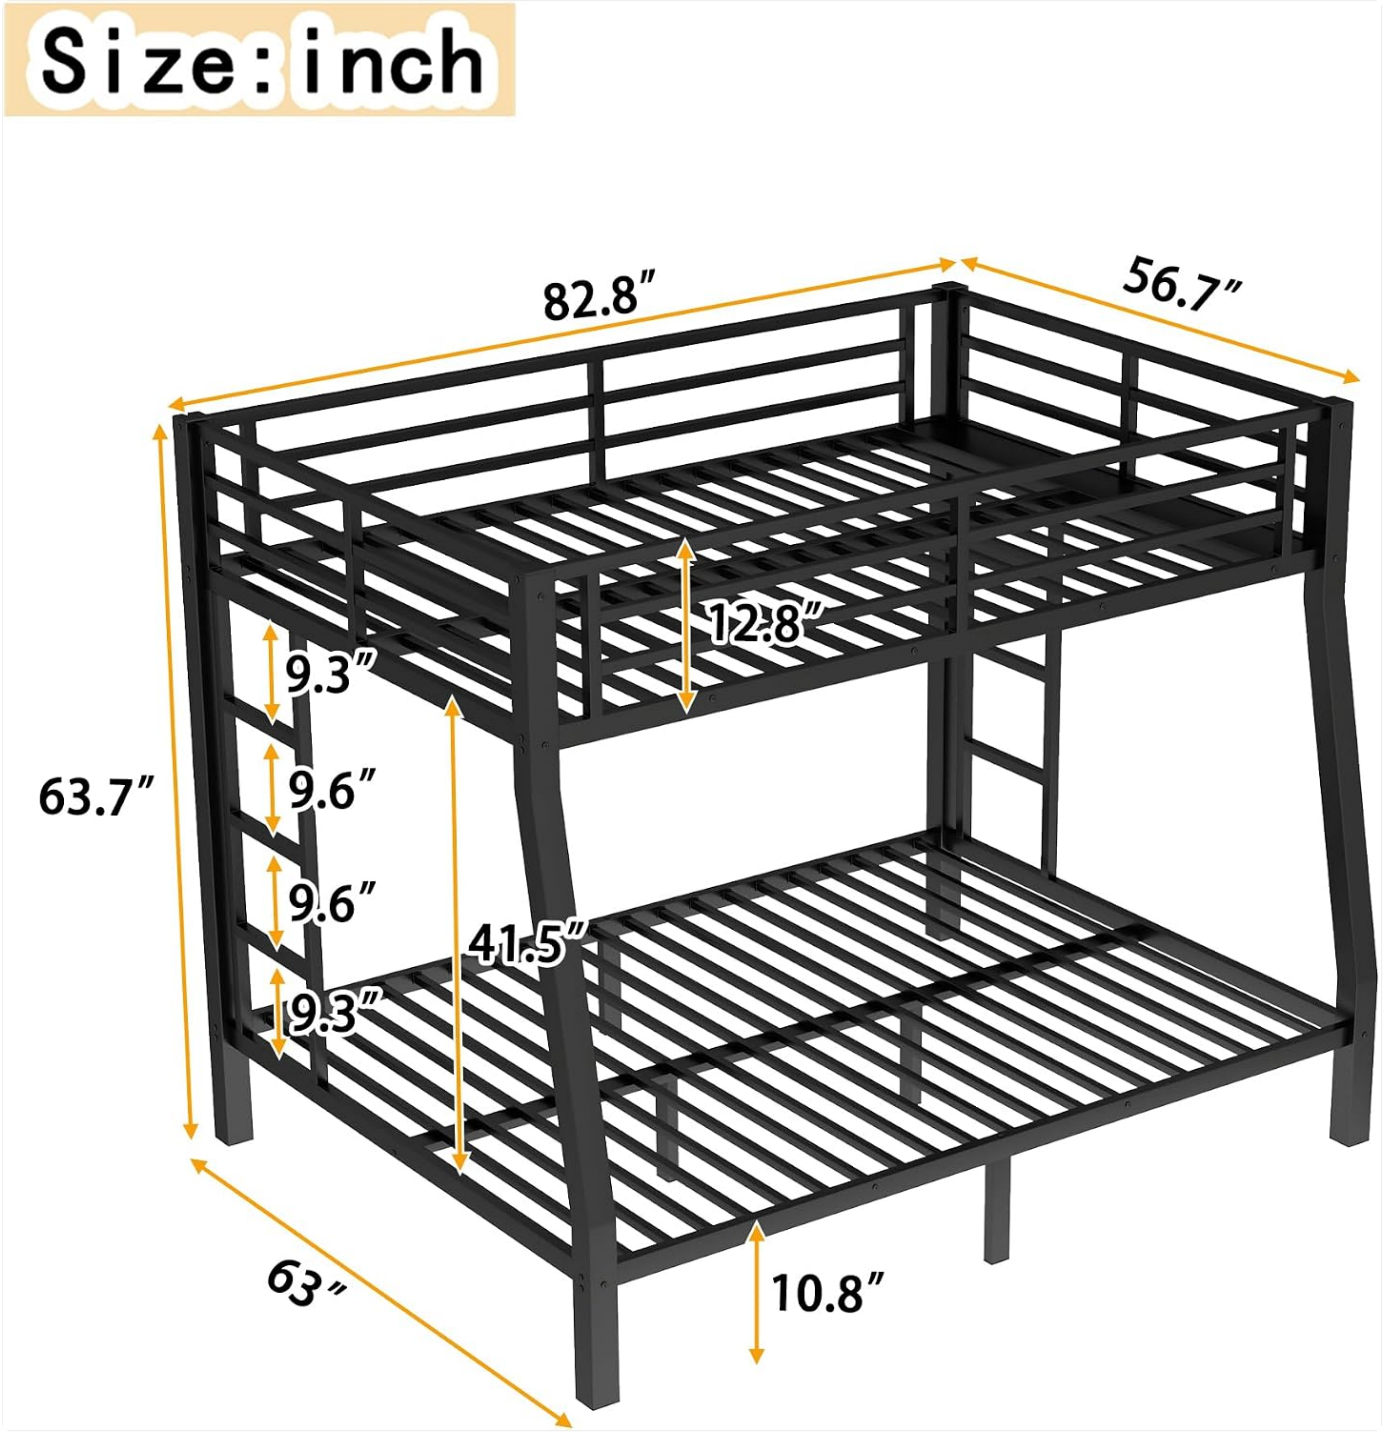


Figure 8.1: Detailed dimensions of the Bellemave Metal Full XL Over Queen Bunk Bed. This diagram illustrates the length, width, and height measurements of the bunk bed, including the clearance between bunks and floor.

9. Warranty and Support

For warranty information or customer support, please refer to the documentation included with your purchase or contact Bellemave directly through their official website or the retailer where the product was purchased.
Please have your model number (TH-00477-FXL-B) and proof of purchase ready when contacting support.

© 2023 Bellemave. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GHMKYTKV

More documents and user manuals: **https://manuals.plus/**