Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

COTINSE IR10

COTINSE Wireless Driveway Alarm Motion Sensor (Model IR10) User Manual

Model: IR10 | Brand: COTINSE

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your COTINSE Wireless Driveway Alarm Motion Sensor. This system is designed to enhance security and convenience by alerting you to motion within its detection range. It features 58 melodies, 5 adjustable volume levels, and a wireless range of up to 500 feet.

Package Contents

Please ensure all components are present before proceeding with installation:

- 1 x Receiver (Door Chime)
- 1 x Motion Sensor (Transmitter)
- 1 x Mounting Base
- 2 x AAA Batteries (for Motion Sensor)
- Mounting Screws
- User Manual



Image: Components included in the COTINSE Wireless Driveway Alarm package.

Setup

1. Powering the Devices

Receiver (Door Chime): Plug the receiver into a standard electrical outlet. It will power on automatically.
Motion Sensor (Transmitter): The motion sensor can be powered by 2 AAA batteries (included) for portability or via a Type-C USB cable for continuous operation. To install batteries, open the battery compartment, insert the batteries, and close the compartment. Ensure the ON/OFF switch on the sensor is set to 'ON'.



Image: Powering options for the receiver and motion sensor.

2. Mounting the Motion Sensor

The motion sensor can be mounted on walls, door frames, or ceilings using the included mounting base and screws. The mounting base allows for 360° rotation to optimize the detection angle.

1. Attach the mounting base to your desired location using the provided screws.
2. Secure the motion sensor onto the mounting base.
3. Adjust the sensor's angle for optimal coverage. The detection angle is 45° vertical and 15° horizontal.

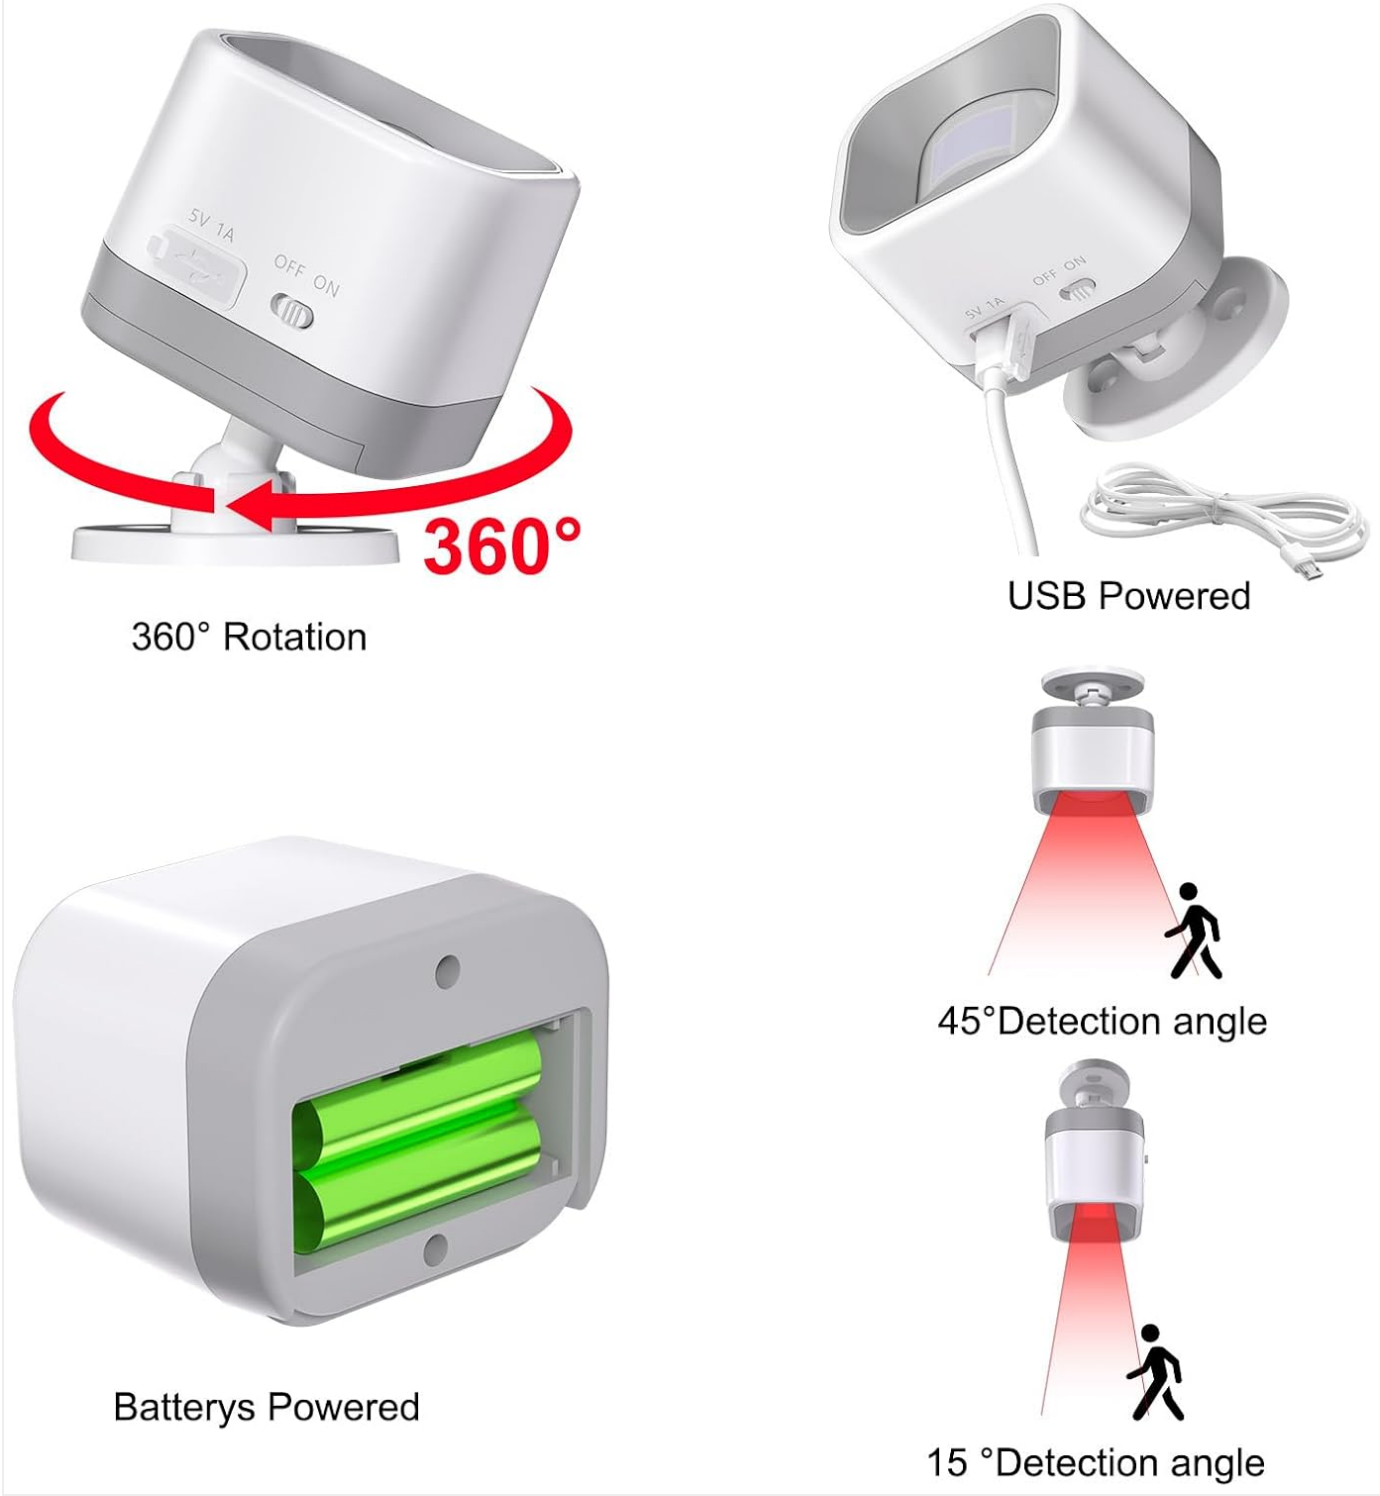


Image: Installation of the motion sensor on an exterior wall.

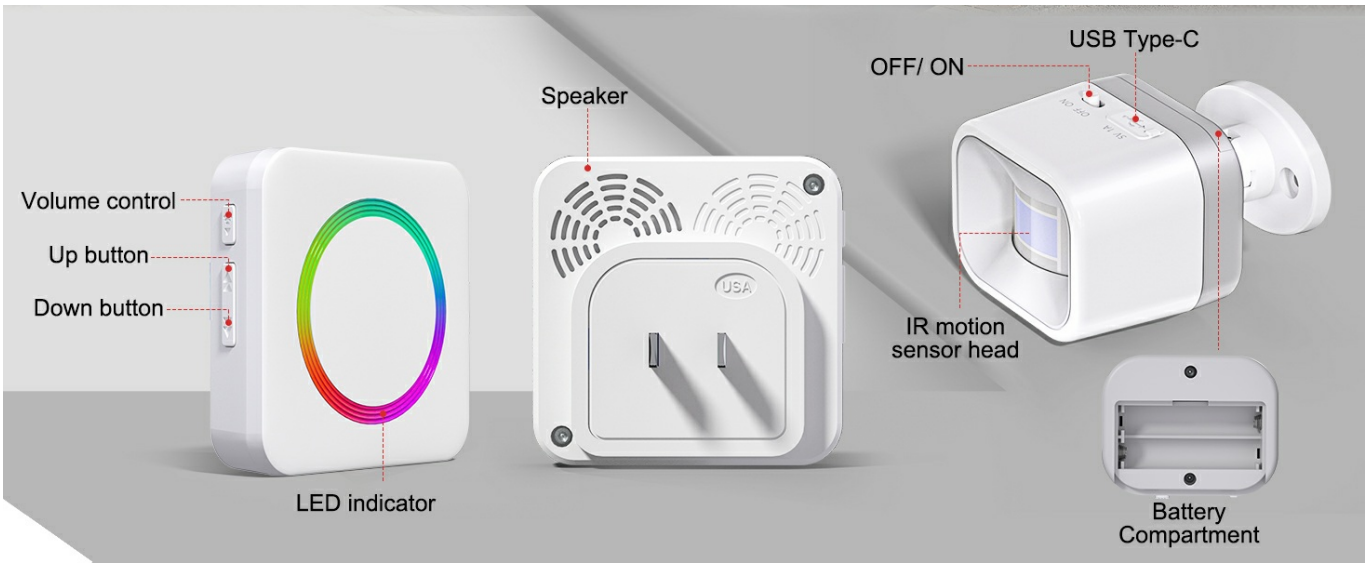


Image: Motion sensor with 360° rotation and detection angle illustration.

3. Pairing Additional Transmitters (Motion Sensors)

The system is expandable, allowing you to pair multiple motion sensors with a single receiver (up to 58 sensors). Follow these steps to pair an additional transmitter:

1. Ensure the first transmitter is already paired and working with the receiver.
2. Press and hold both the "Volume" and "Down" buttons on the receiver simultaneously until you hear a ring. This puts the receiver into pairing mode.
3. Trigger the new transmitter by waving your hand in front of it. You will hear the receiver ring, indicating successful pairing.

Your browser does not support the video tag.

Video: Instructions on how to add another transmitter pairing to the receiver.

Operating Instructions

1. Selecting a Ringtone

The receiver offers 58 unique chimes and ringtones. To select your preferred ringtone:

1. Press the "Up" or "Down" button on the side of the receiver to cycle through the available ringtones.
2. Once you hear your desired ringtone, press and hold the "Volume" button for 5 seconds, or briefly press both "Volume" and "Down" buttons until the receiver "dings" and the LED flashes.
3. Wave your hand in front of the motion sensor to confirm the new ringtone is set.

Your browser does not support the video tag.

Video: Guide on how to choose your favorite ringtone for the door chime.

2. Adjusting Volume Levels

The receiver has 5 adjustable volume levels, ranging from 0dB (silent) to 110dB (loud). Use the "Volume" button on the side of the receiver to cycle through the volume settings.



Image: Receiver with volume control and ringtone options.

3. Motion Detection

The motion sensor detects movement within its range (9.8 to 19.7 feet) and angle (45° vertical, 15° horizontal). Upon detection, it sends a signal to the receiver, which then plays the selected ringtone and illuminates its colorful LED indicator.

A smart 5-second interval between detections prevents continuous ringing from a single person or pet, ensuring efficient alerts.



Image: Driveway alert scenario with motion sensor and receiver.



Image: Receiver displaying colorful LED indicator and sound options.

4. Versatile Applications

This system is suitable for various monitoring scenarios:

- **Business Entry Alert:** Welcome customers in retail stores.
- **Driveway Alarm:** Alert to approaching vehicles.
- **Elderly Care Monitor:** Provide alerts for monitoring elderly or dementia patients.
- **Child Safety:** Monitor children's movement in restricted areas.
- **Home Security:** Detect intruders.



Image: Diverse applications of the motion sensor system.



Image: Specific use cases for the motion sensor alarm.

Maintenance

1. Battery Replacement

When the motion sensor's battery is low, its performance may be affected. Replace the 2 AAA batteries as needed. Ensure correct polarity when inserting new batteries.

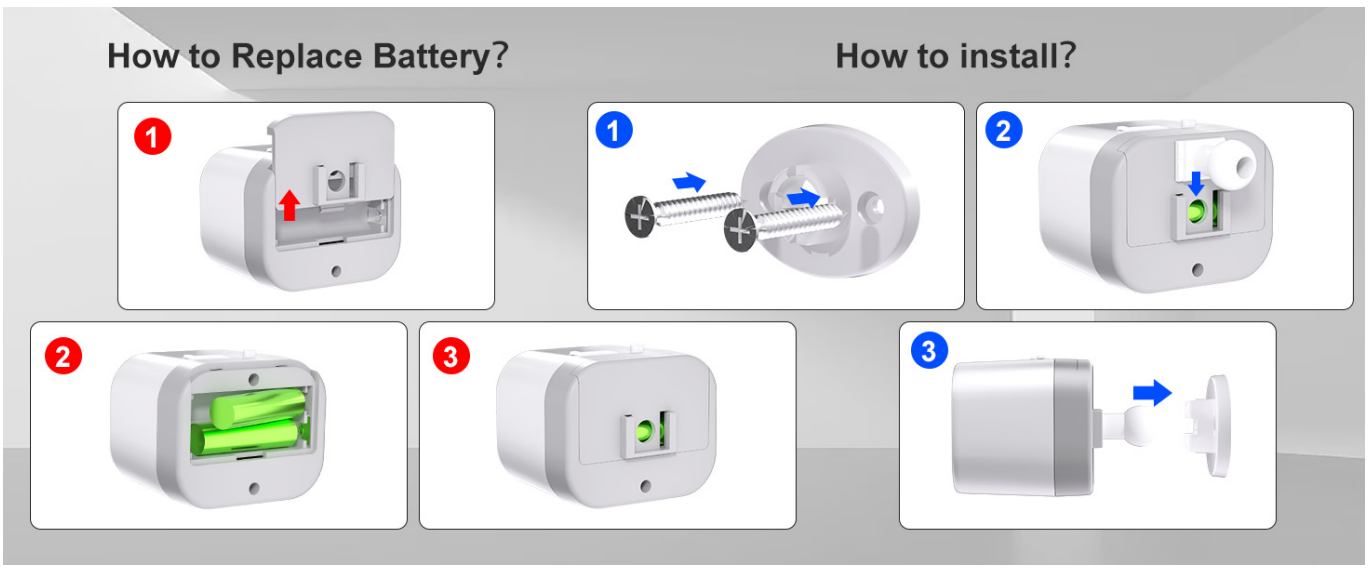


Image: Instructions for battery replacement and sensor installation.

2. Cleaning

Wipe the devices with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

Troubleshooting

1. Sensor Not Triggering Alarm

- Ensure the motion sensor is powered on and has fresh batteries or is connected via USB.
- Verify the sensor is within the 500ft wireless range of the receiver.
- Check for obstructions between the sensor and the receiver.
- Confirm the sensor is properly paired with the receiver (refer to Setup section).
- Adjust the sensor's angle to ensure motion is within its detection zone (45° vertical, 15° horizontal).

2. Resetting the Doorbell and Transmitter

If you experience persistent issues or wish to clear all pairings, you can reset the system:

1. Plug the receiver into an outlet and ensure it has power.
2. Trigger the transmitter with your hand to confirm it is currently ringing the doorbell.
3. Press and hold the "Down" button on the receiver for approximately 5 seconds until you hear the doorbell ring. This indicates a successful reset.
4. Trigger the transmitter again. The doorbell should no longer ring, confirming the reset.

Your browser does not support the video tag.

Video: Instructions on how to reset the doorbell and transmitter.

SPECIFICATIONS

Feature	Detail
Brand	COTINSE
Model Number	IR10
Item Weight	5.9 ounces
Product Dimensions	3.35 x 3.35 x 3.35 inches
Power Source (Sensor)	2 AAA Batteries (included) / USB Type-C
Power Source (Receiver)	AC Plug-in
Wireless Range	Up to 500 feet (150 meters)
Motion Detection Range	9.8 - 19.7 feet (3-6 meters)
Motion Detection Angle	45° Vertical, 15° Horizontal
Ringtones	58 melodies
Volume Levels	5 (0dB to 110dB)
Expandability	Up to 58 sensors per receiver

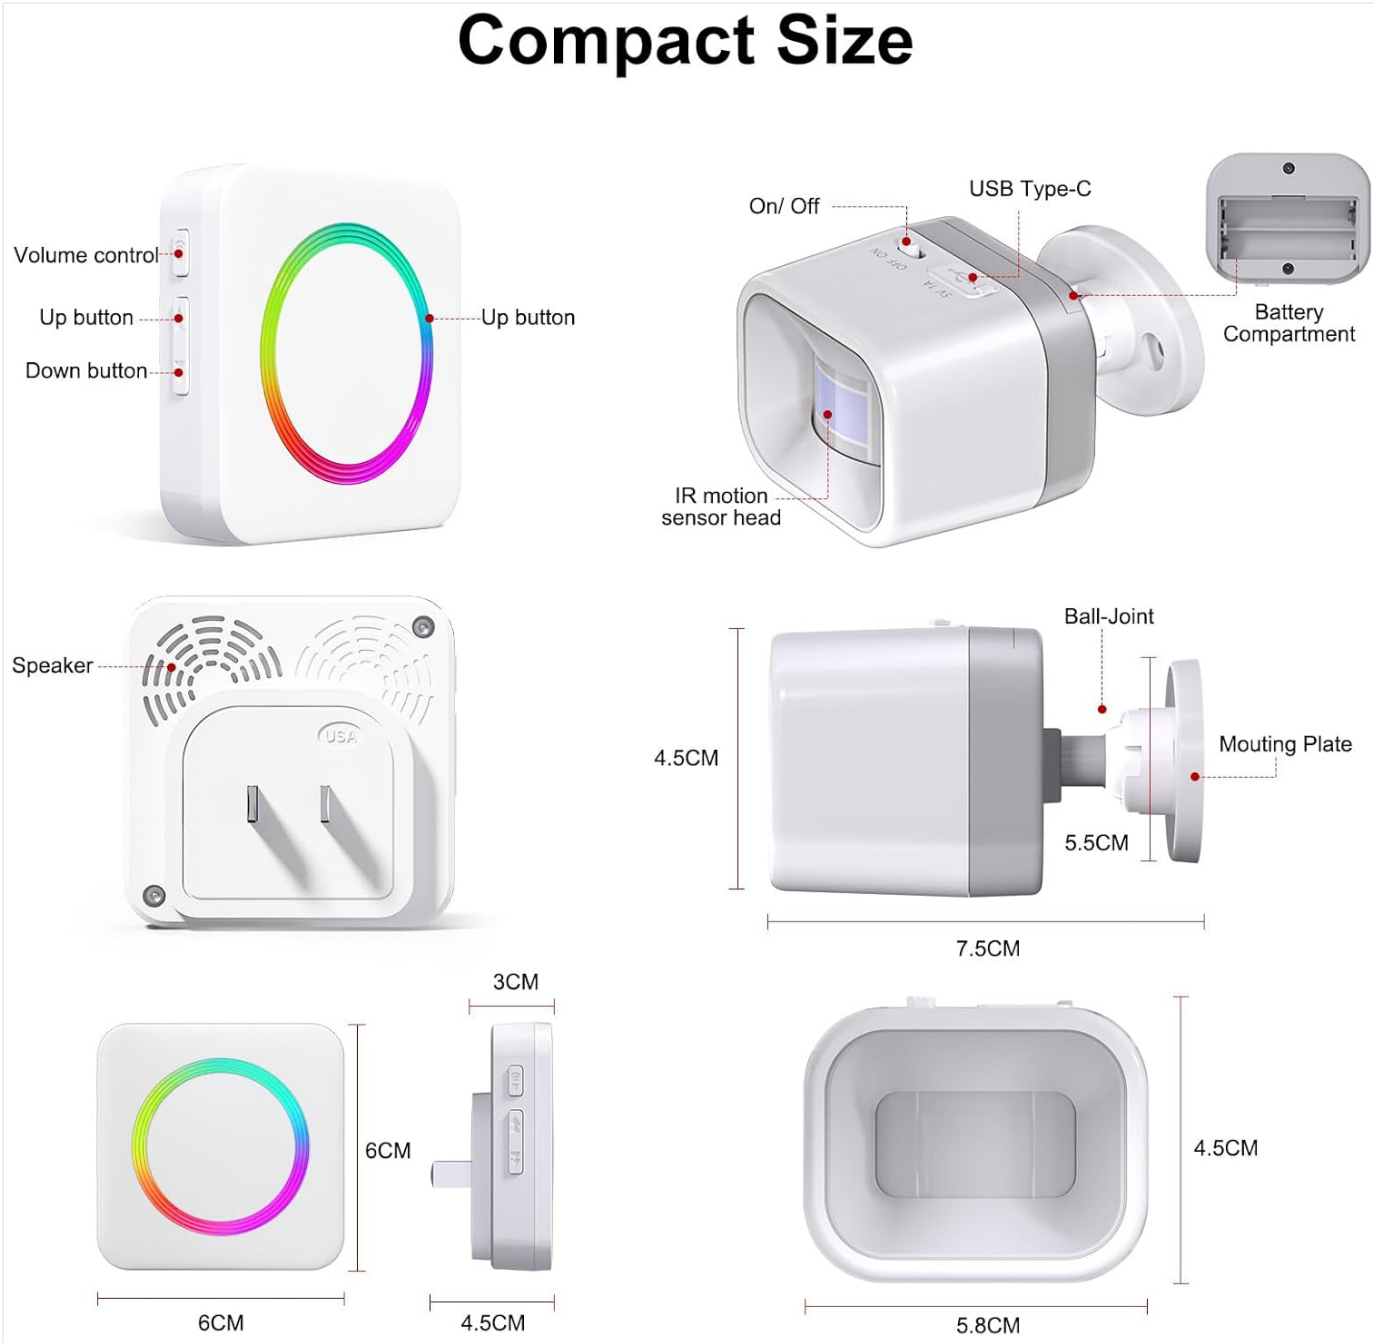


Image: Detailed view of the product components and dimensions.

Warranty and Support

For warranty information and technical support, please refer to the product packaging or contact COTINSE customer service directly. Keep your purchase receipt for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GJSM8MHK

More documents and user manuals: **https://manuals.plus/**