Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

STMHOM PHK_35CA

STMHOM Farmhouse TV Stand Instruction Manual

Model: PHK_35CA | Brand: STMHOM

1. Product Overview

This STMHOM Farmhouse TV Stand is designed to enhance your living space with its functional storage and aesthetic appeal. It features a reinforced frame, sturdy wood legs, and a realistic wood grain finish. The unit includes three adjustable shelves for customizable storage and handle-free cabinet doors for a clean, minimalist look. A discreet rear cable hole is provided for organized wire management.

The TV stand is suitable for televisions up to 70 inches and offers ample space for media consoles, gaming systems, books, and decorative items.

2. Safety Information

- **Maximum Load Capacity:** The top surface supports a maximum load of 121 lbs (55 kg). Each adjustable shelf supports a maximum load of 33 lbs (15 kg). Do not exceed these weight limits to prevent damage or injury.
- **Placement:** Place the TV stand on a flat, level, and stable surface. Uneven surfaces can cause instability.
- **Anti-Tip Device:** If an anti-tip device is included, it is strongly recommended to install it to prevent the unit from tipping over, especially in households with children or pets.
- **Assembly:** Ensure all fasteners are securely tightened before use. Periodically check and re-tighten fasteners as needed.
- **Children:** Do not allow children to climb on or play with the TV stand.

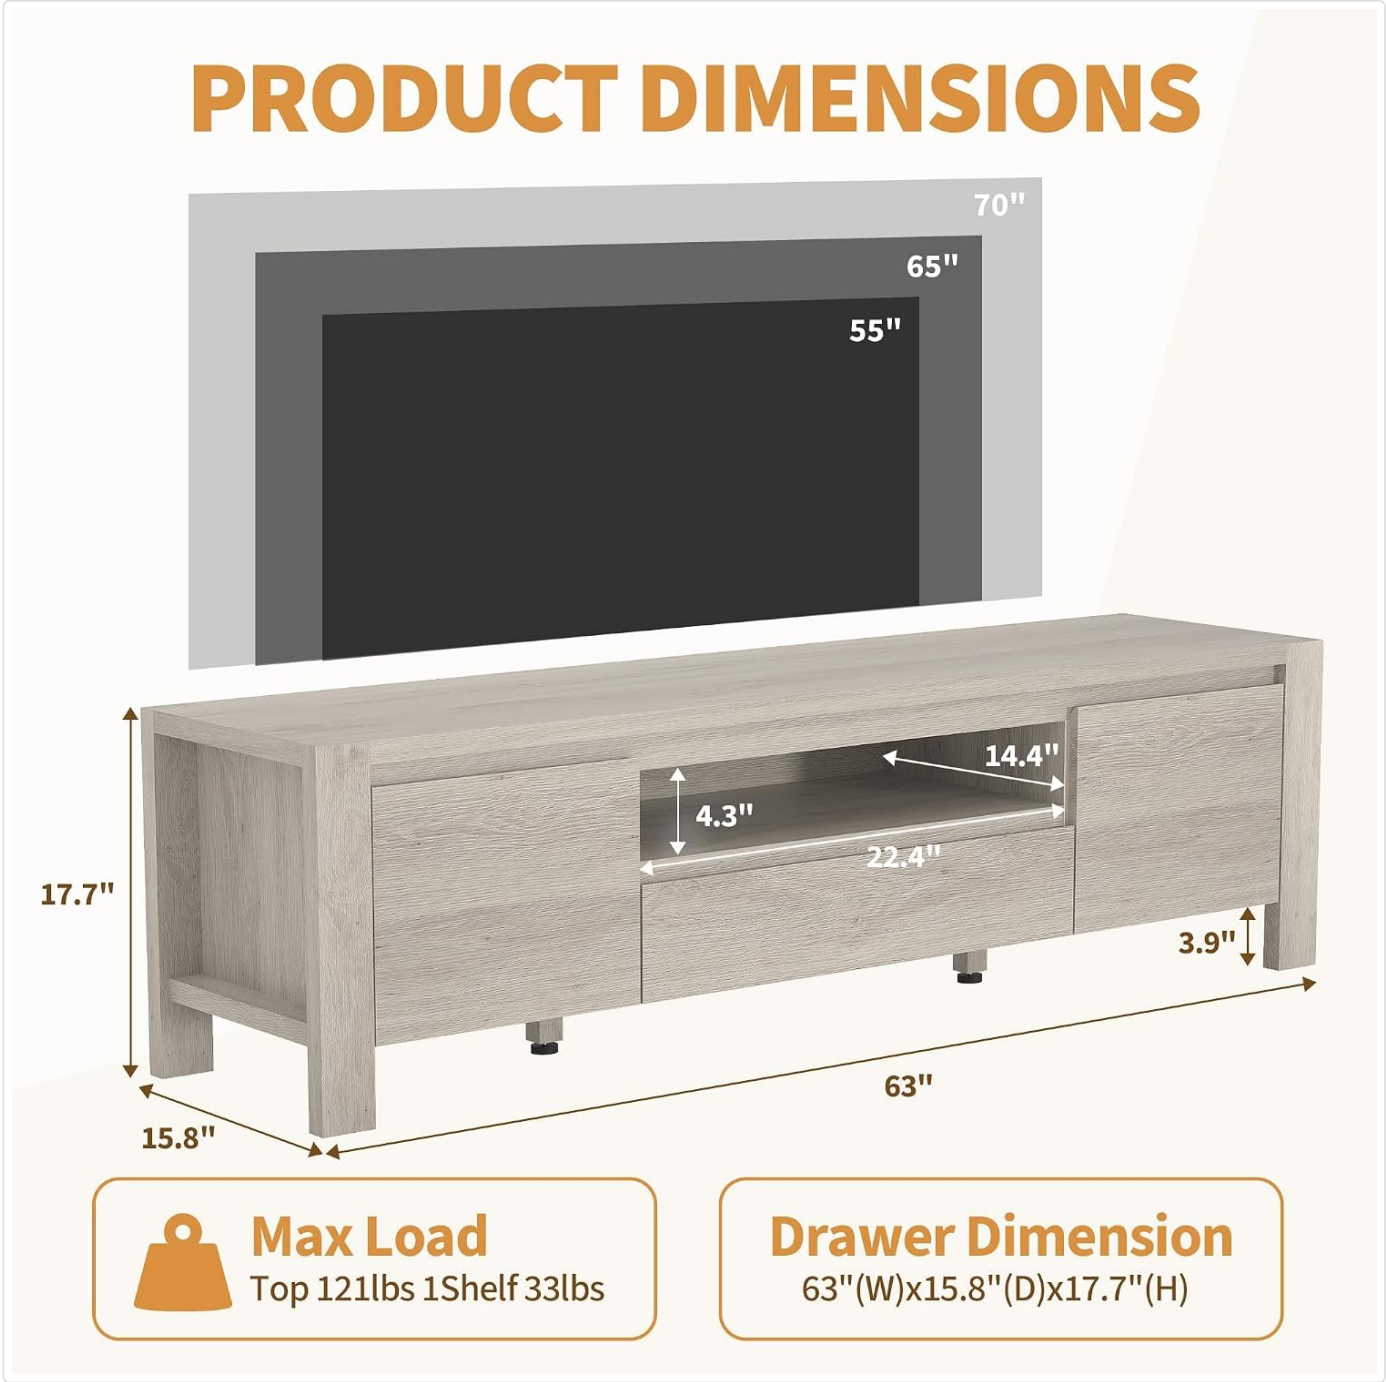


Image: Product dimensions and maximum load capacities. The TV stand measures 63 inches wide, 15.8 inches deep, and 17.7 inches high. The top surface supports up to 121 lbs, and each shelf supports up to 33 lbs.

3. Package Contents

Before beginning assembly, please verify that all parts and hardware are present and undamaged. If any components are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

- All furniture panels and components
- Assembly hardware (screws, dowels, cam locks, etc.)
- Installation Tool (e.g., Allen wrench)
- Instruction Manual

4. Setup and Assembly Instructions

Assembly typically requires two adults. Please follow these steps carefully. A Phillips head screwdriver may be required (not included).

1. **Prepare the Area:** Clear a spacious, clean area for assembly. Lay down a blanket or cardboard to protect the furniture pieces and your floor from scratches.
2. **Identify Components:** Unpack all components and separate them by type. Refer to the parts list in your included manual to identify each piece.
3. **Assemble the Base and Side Panels:** Attach the sturdy legs to the bottom panel. Then, connect the side panels to the base and back panel using the provided hardware. Ensure all connections are secure.
4. **Install Fixed Shelves and Dividers:** Insert any fixed shelves or internal dividers into their designated slots or attach them with hardware.
5. **Install Adjustable Shelves:** Place the shelf pins into the desired holes within the cabinet sections. Then, carefully place the adjustable shelves onto the pins. This allows for flexible use of space.



Image: Illustration of the adjustable shelf feature, showing how shelves can be moved to different heights within the cabinet compartments.

6. **Attach Cabinet Doors:** Mount the cabinet doors to the main frame using the provided hinges. Adjust the hinges as

necessary to ensure the doors align properly and close smoothly. The design features handle-free doors for a sleek look.



Image: Close-up view of the beveled side of a cabinet door, highlighting the handle-less design for a simpler aesthetic.

7. **Cable Management:** Utilize the integrated cable management hole located at the back of the unit to route and organize your TV, speaker, and other electronic wires.



Image: Detailed view showing the sturdy legs, the wood grain finish, and the cable management hole at the back of the unit.

8. **Final Check:** Once assembled, gently move the TV stand to its desired location. Ensure all connections are tight and the unit is stable before placing any items on it.

5. Operating Instructions

- **Adjusting Shelves:** To adjust the height of the interior shelves, remove all items from the shelf. Carefully lift the shelf, remove the four shelf pins, reposition them into the desired holes, and then place the shelf back onto the pins.
- **Cable Management:** Use the rear cable hole to neatly route power cords and signal cables from your electronic devices, keeping them organized and out of sight.
- **Weight Distribution:** Distribute weight evenly across the top surface and shelves. Avoid placing heavy items on one side or corner to maintain stability.



Image: Interior view of the TV stand's cabinet and open shelving, demonstrating the ample storage space for various media components and decorative items.

6. Maintenance

- **Cleaning:** Wipe the surface with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood grain finish.
- **Fasteners:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the finish.

7. Troubleshooting

- **Wobbly Stand:** Ensure the TV stand is on a level surface. Check that all assembly hardware is fully tightened. If the

floor is uneven, use furniture pads or shims under the legs to stabilize the unit.

- **Doors Not Aligning:** Adjust the hinges on the cabinet doors. Most hinges allow for minor adjustments in height, depth, and side-to-side positioning. Refer to the hinge manufacturer's instructions if specific adjustments are unclear.
- **Missing Parts:** If you discover any missing components during assembly, stop immediately and contact STMHOM customer support with your purchase details and the specific part number(s) required.
- **Difficulty Assembling:** Review the assembly instructions carefully. Ensure you are using the correct hardware for each step. Do not force parts together. If issues persist, contact customer support.

8. Specifications

Attribute	Detail
Brand	STMHOM
Model Name	TV stands (Model PHK_35CA)
Color	Grey
Material	Engineered Wood
Mounting Type	Floor Mount
Product Dimensions (L x W x H)	62 x 15 x 17 inches (157.5 x 38.1 x 43.2 cm)
Item Weight	75 Pounds (34 kg)
Maximum TV Size Supported	Up to 70 inches
Top Load Capacity	121 lbs (55 kg)
Shelf Load Capacity	33 lbs (15 kg) per shelf
Assembly Required	Yes
Included Components	Installation Tool
UPC	822200556688

9. Warranty and Support

This product is typically covered by a standard return policy, which allows for returns within 30 days of purchase. For specific warranty information, please refer to your purchase documentation or contact the retailer directly.

For customer support, assistance with assembly, or to report missing/damaged parts, please contact the seller or manufacturer through your purchase platform. Please have your model number (PHK_35CA) and purchase date ready.

© 2026 STMHOM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GK16WR54

More documents and user manuals: **https://manuals.plus/**