Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CYBER-G Cyber-G Guitar

CYBER-G Smart Guitar Instruction Manual

Model: Cyber-G Guitar

Introduction

Welcome to the CYBER-G Smart Guitar. This innovative instrument combines traditional guitar playing with modern technology, offering 24 built-in tones, a speaker and drum system, and integration with the Enya Music App. This manual provides essential information for setting up, operating, and maintaining your new smart guitar.



Image: The CYBER-G Smart Guitar in white, showcasing its sleek design.

Setup

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in the "What's in the Box" section are present and undamaged.

Your browser does not support the video tag.

Video: An unboxing demonstration of the Cyber G String Guitar, showing the contents and initial setup steps.

2. Assembly (Detachable Neck)

The CYBER-G Smart Guitar features a detachable neck for portability. To assemble, align the neck with the body and gently push until it clicks into place. Ensure a secure connection.



Image: Illustration of the multi-module interchange feature, highlighting the detachable neck design for easy assembly and portability.

3. Charging

Before first use, fully charge the guitar using the provided charger and cable. The charging indicator will show the battery status.

4. Enya Music App Connection

Download the Enya Music App from your device's app store. Follow the in-app instructions to pair your CYBER-G Smart Guitar via Bluetooth. This app unlocks additional features and learning tools.

Operating Instructions

1. Power On/Off

To power on, long press the FUNC button. To power off, long press the FUNC button again.

2. Sound Selection (24 Built-in Tones)

The CYBER-G Smart Guitar features 24 built-in tones, including acoustic, electric, bass, piano, and various orchestral instruments. Rotate the FUNC knob to cycle through available tones. Short press the FUNC button to switch presets.

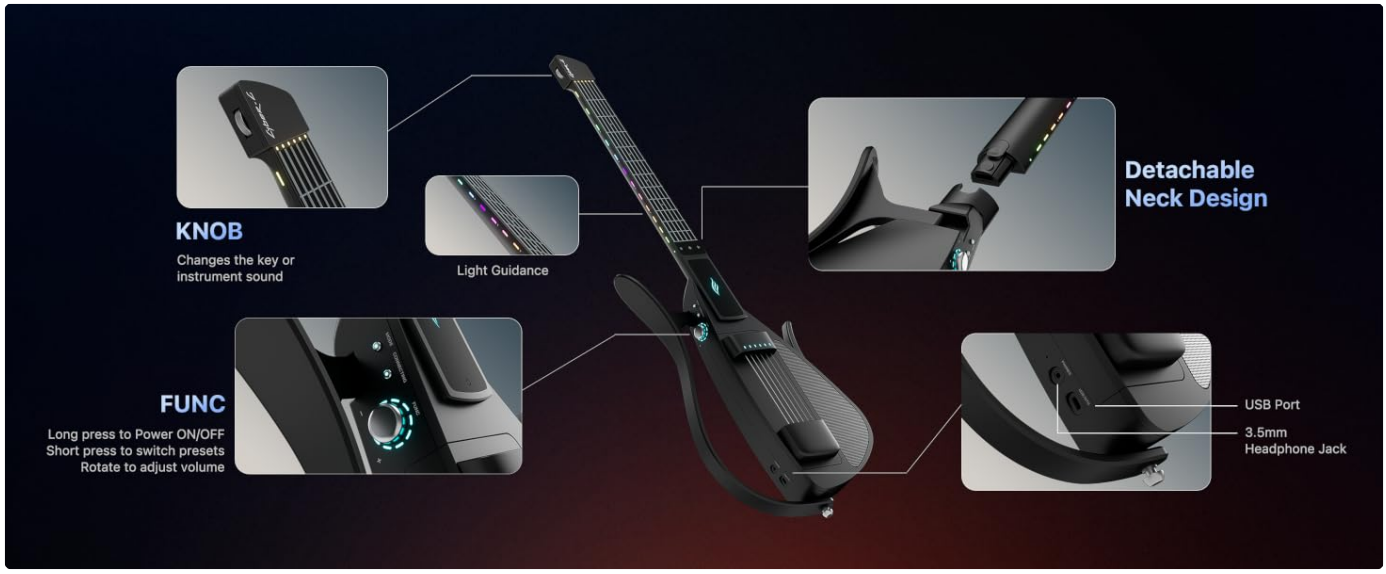


Image: A musician playing the Cyber-G Smart Guitar, with various instrument icons illustrating the 24 built-in tones available.

Your browser does not support the video tag.

Video: Demonstration of the 24 instrument sounds available on the Cyber-G Smart Guitar.

3. Performance Modes

The guitar offers multiple performance modes to suit different skill levels:

- **Auto Mode:** Designed for beginners, simply strum and the guitar will play the correct notes.
- **Semi-Assist Rhythm Mode:** Provides assistance with rhythm, allowing you to focus on chord changes.
- **Classic Guitar Play Mode:** Full control over fretting and strumming for experienced players.

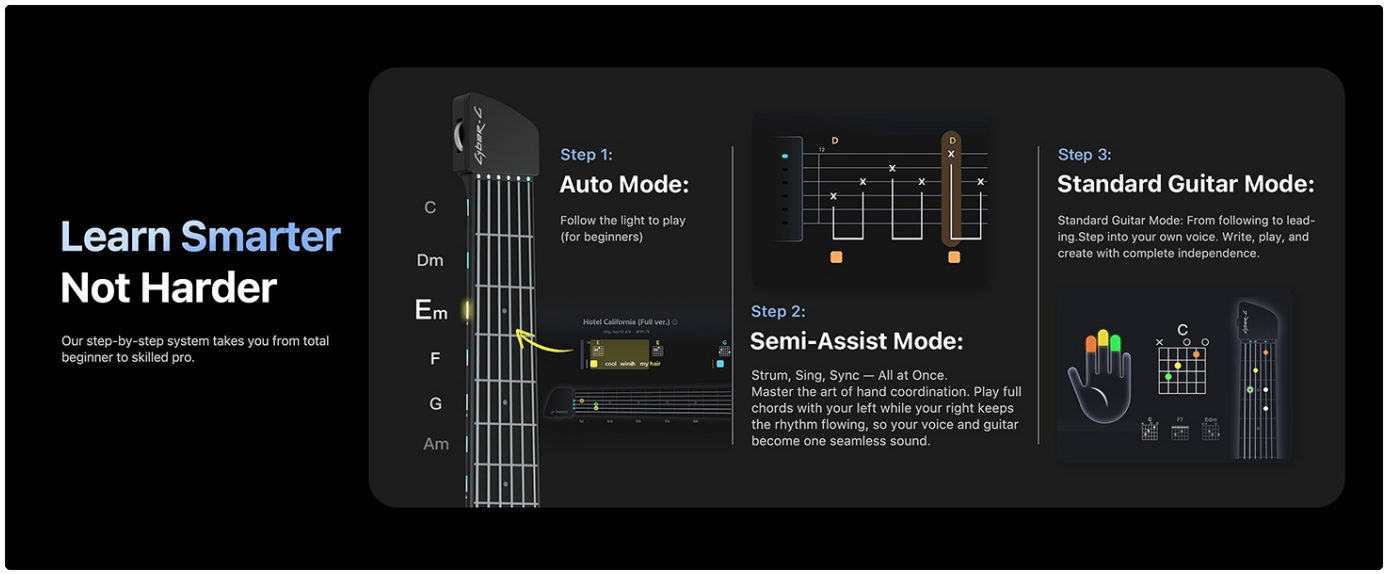


Image: Visual representation of the three learning modes: Auto Mode, Semi-Assist Mode, and Standard Guitar Mode, guiding users from beginner to advanced playing.

4. Interactive Play (Light-Guided Fretboard)

The fretboard features integrated lights that guide you through songs and exercises, making learning intuitive.

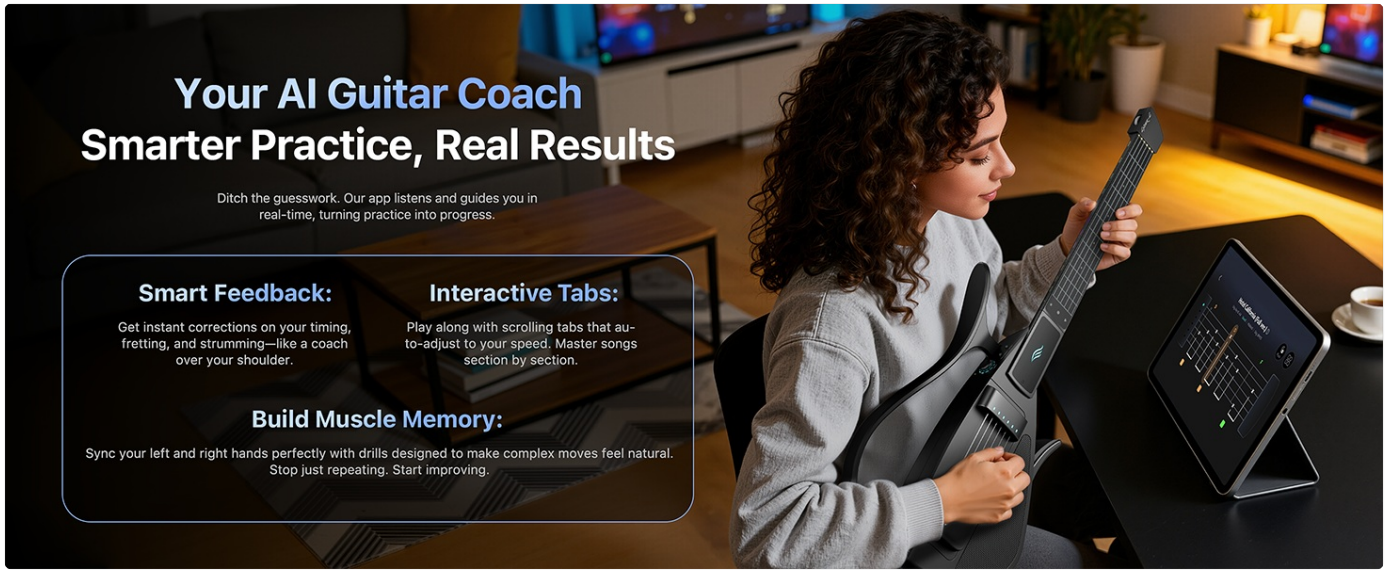


Image: A close-up of the guitar's fretboard with illuminated lights, demonstrating the interactive play feature for smarter practice.

5. Enya Music App Features

The Enya Music App provides a comprehensive learning experience:

- **Smart Feedback:** Receive real-time corrections on timing, fretting, and strumming.
- **Interactive Tabs:** Play along with scrolling tabs that auto-adjust to your speed.
- **Build Muscle Memory:** Drills designed to synchronize left and right hands.

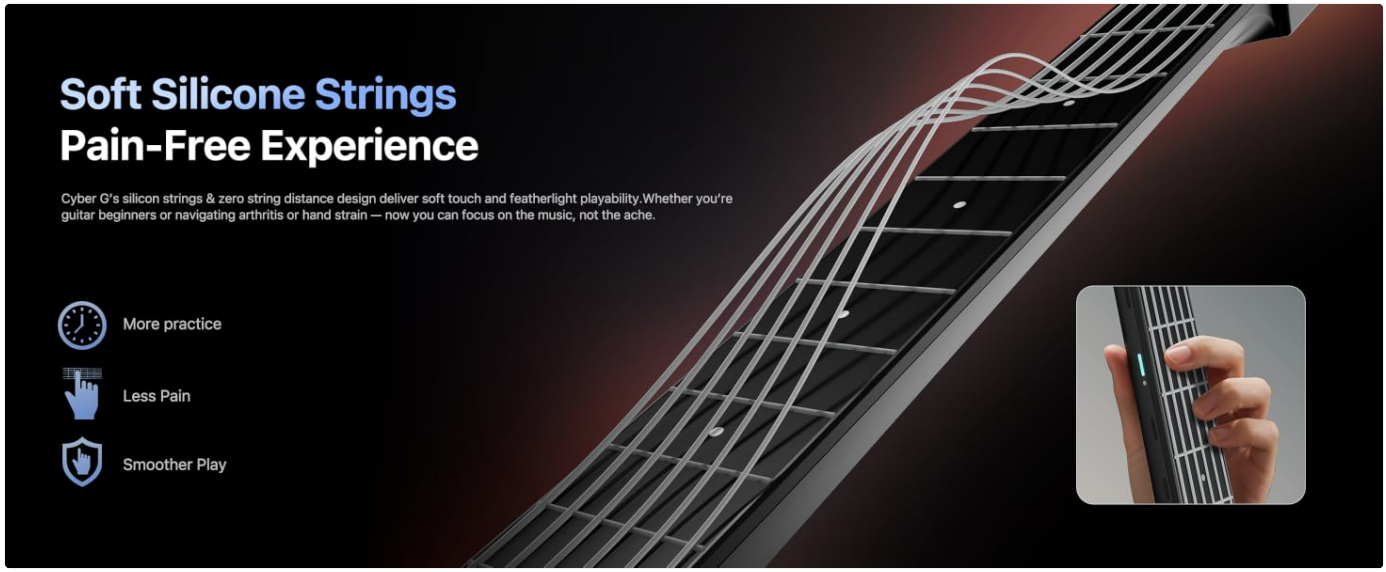


Image: A woman using the Enya Music App on a tablet while playing the Cyber-G Smart Guitar, illustrating the smart practice assistance features.

6. Onboard Speaker

The guitar features a built-in 30W speaker (10W tweeter + 20W woofer) for clear sound output. Adjust volume using the FUNC knob.

Maintenance

1. Cleaning

Wipe the guitar body and fretboard with a soft, dry cloth. Avoid abrasive cleaners or solvents.

2. Silicone Strings Care

The silicone strings are designed for durability and comfort. Clean them gently with a damp cloth if needed. Avoid sharp objects that could damage the silicone.

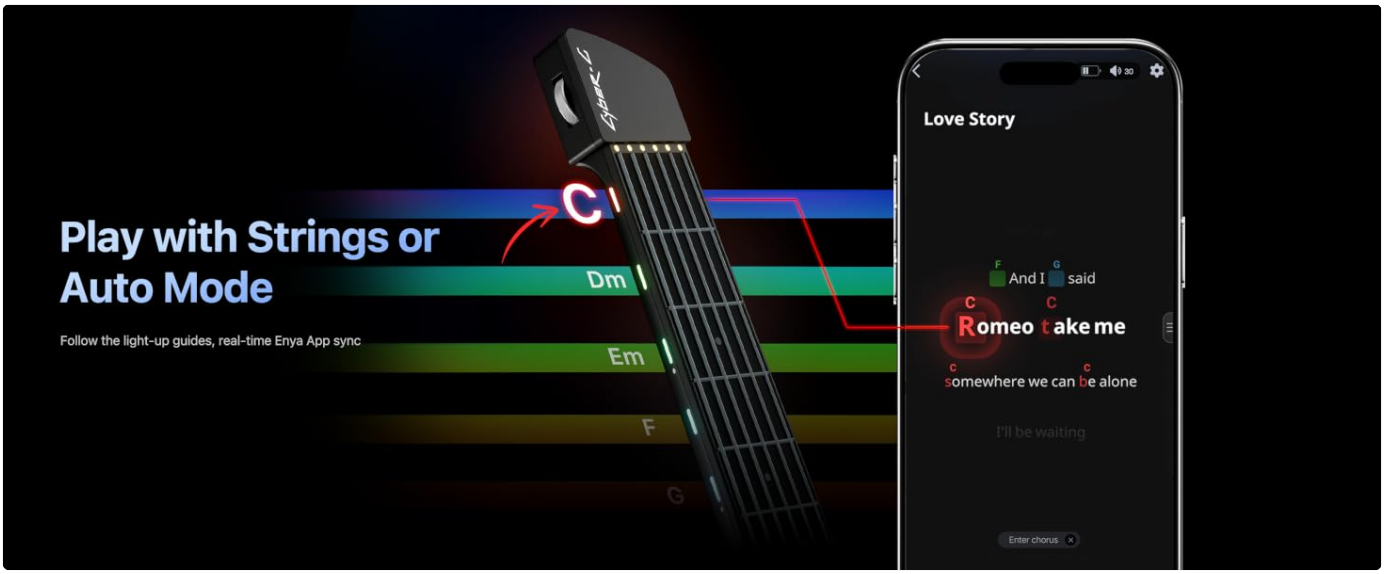


Image: A close-up view of the guitar's soft silicone strings, emphasizing their design for a pain-free playing experience.

3. Storage

Store the guitar in its portable case when not in use to protect it from dust and damage. The detachable neck allows for compact storage.

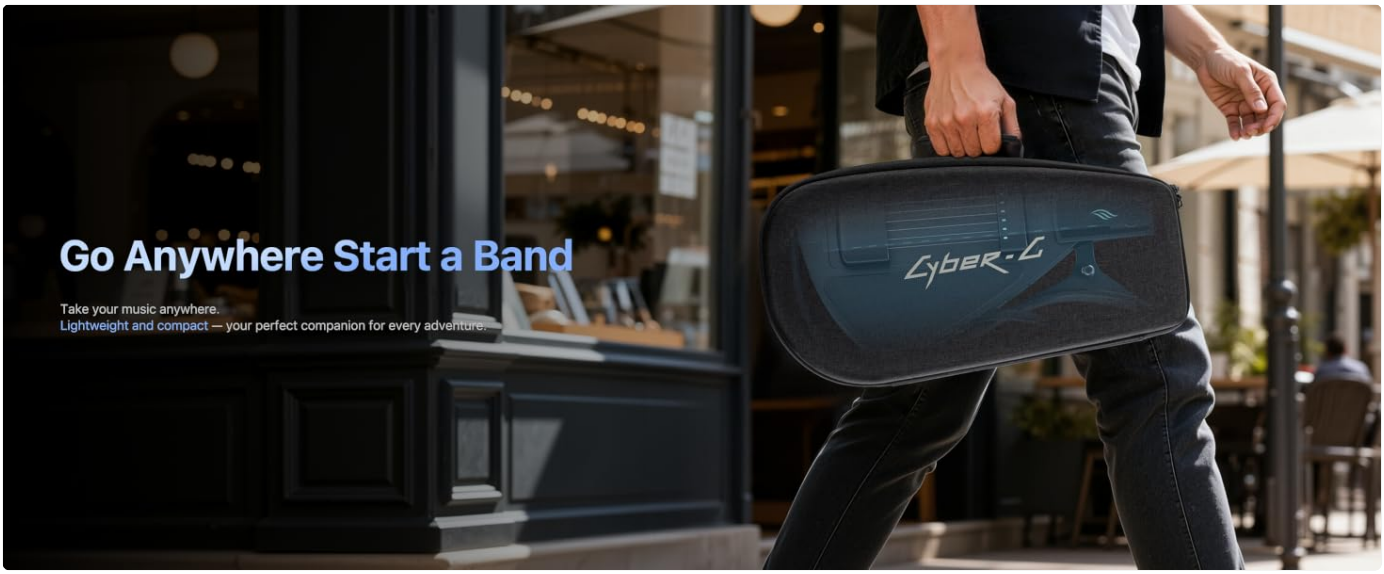


Image: A person carrying the Cyber-G Smart Guitar in its portable case, highlighting its travel-friendly design.

Troubleshooting

Problem	Possible Cause	Solution
Guitar does not power on.	Low battery or power button not pressed correctly.	Ensure the guitar is charged. Long press the FUNC button to power on.
No sound output.	Volume too low, incorrect tone selected, or speaker issue.	Increase volume using the FUNC knob. Verify a tone is selected. Check if external audio is connected.

Problem	Possible Cause	Solution
App connection issues.	Bluetooth not enabled, guitar not in pairing mode, or app error.	Ensure Bluetooth is active on your device. Put the guitar in pairing mode (refer to app instructions). Restart the app and guitar.
Fretboard lights not working.	Feature disabled in app or internal error.	Check app settings to ensure light guidance is enabled. Restart the guitar.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact customer support.

Specifications

- **Brand:** CYBER-G
- **Model Name:** CYBER-G
- **Model Number:** Cyber-G Guitar
- **Color:** White (as per current product variant)
- **Top Material Type:** ABS+PC
- **Body Material:** ABS+PC
- **Back Material Type:** ABS+PC
- **Neck Material Type:** ABS+PC
- **Fretboard Material Type:** ABS+PC
- **String Material Type:** ABS+PC (Silicone Strings)
- **Hand Orientation:** Right
- **Number of Strings:** 6
- **Guitar Bridge System:** Adjustable
- **Connector Type:** 3.5mm audio jack
- **Manufacturer:** Enya Musical
- **Included Components:** Enya music APP (software)

Warranty Information

The CYBER-G Smart Guitar comes with a**1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty claims, or any questions regarding your CYBER-G Smart Guitar, please contact Enya Musical customer support.

- **Online Support:** Visit the official Enya Musical website for FAQs and support resources.
- **Email Support:** Refer to your product packaging or the Enya Musical website for contact email.

Please have your model number and purchase date ready when contacting support.

© 2023 CYBER-G. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GKCVW6YG

More documents and user manuals: **https://manuals.plus/**