Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CYBER-G Cyber-G Guitar

CYBER-G Smart Guitar Instruction Manual

Model: Cyber-G Guitar

Introduction

Welcome to the CYBER-G Smart Guitar. This innovative instrument features silicone strings, 24 built-in tones, an integrated speaker and drum system, and seamless integration with the Enya music APP. Designed for all skill levels, from beginners to experienced musicians, the CYBER-G offers a versatile and portable playing experience.
This manual provides essential information for setting up, operating, maintaining, and troubleshooting your CYBER-G Smart Guitar. Please read it thoroughly to ensure optimal performance and longevity of your instrument.

Setup

Unboxing and Initial Assembly

Upon unboxing, ensure all components are present: the CYBER-G Smart Guitar, built-in speaker, drum system, and access to the Enya music APP. The guitar features a detachable neck design for portability.

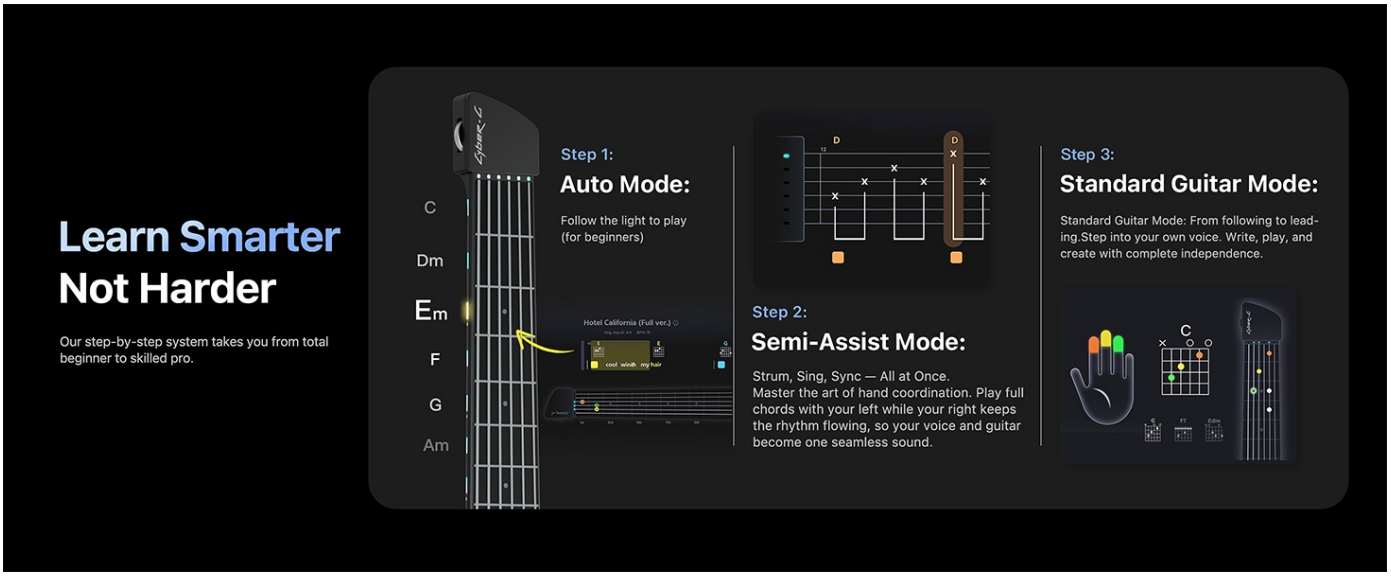


Image: Detailed view of the CYBER-G Smart Guitar highlighting the detachable neck, knob, function button, USB port, and 3.5mm headphone jack.

Charging the Guitar

Connect the guitar to a power source using the provided USB cable. The USB port is located near the 3.5mm headphone jack on the body of the guitar. Ensure the guitar is fully charged before first use.

Video: Unboxing and initial setup of the Cyber G String Guitar, showing how to connect components and prepare for use.

App Connection

Download the Enya music APP from your device's app store. Follow the in-app instructions to connect your CYBER-G Smart Guitar via Bluetooth. The app provides interactive lessons, tone selection, and practice assistance.

Operating Instructions

Power On/Off and Volume Control

To power on the guitar, long press the 'FUNC' button. Short press the 'FUNC' button to switch between presets. Rotate the 'FUNC' button to adjust the volume.



Image: Close-up view of the guitar's control knob and function button.

Selecting Tones and Sounds

The CYBER-G Smart Guitar features 24 built-in tones, including classic acoustic, electric, bass, piano, flute, and drum sounds. Use the 'KNOB' to change the key or instrument sound. You can also select and customize tones through the Enya music APP.



Image: Visual representation of the 24 built-in tones available on the CYBER-G Smart Guitar.

Video: Demonstration of the 24 instrument sounds available on the CYBER-G Smart Guitar, showcasing its versatility.

Playing Modes

The guitar offers multiple performance modes to suit different skill levels and playing styles:

- **Simplified Mode:** Follow the light-guided fretboard to hit the correct notes. Ideal for beginners.
- **Assisted Mode:** Tap the chords and pluck the strings. The system helps maintain rhythm without complex fingering.
- **Standard Mode:** Offers a classic guitar playing experience with full control over fingering and techniques.

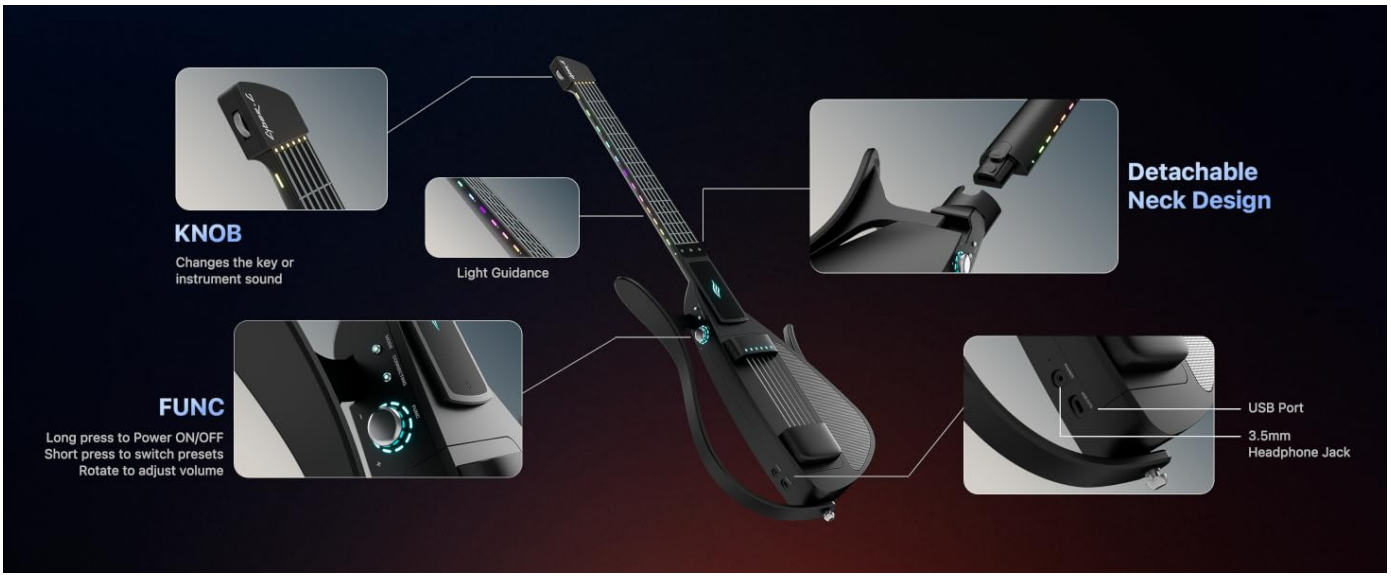


Image: Visual explanation of the Simplified, Assisted, and Standard playing modes.

Video: Demonstration of the Cyber-G String Mode, highlighting its ease of use for all players.

Interactive Play and Practice Assistance

The Enya music APP syncs in real-time with the guitar's light-guided fretboard, providing visual cues for notes and chords. The AI Guitar Coach offers smart feedback on timing and fretting, interactive tabs, and drills to build muscle memory.



Image: The guitar's fretboard displaying lights in sync with the Enya App, guiding the user.

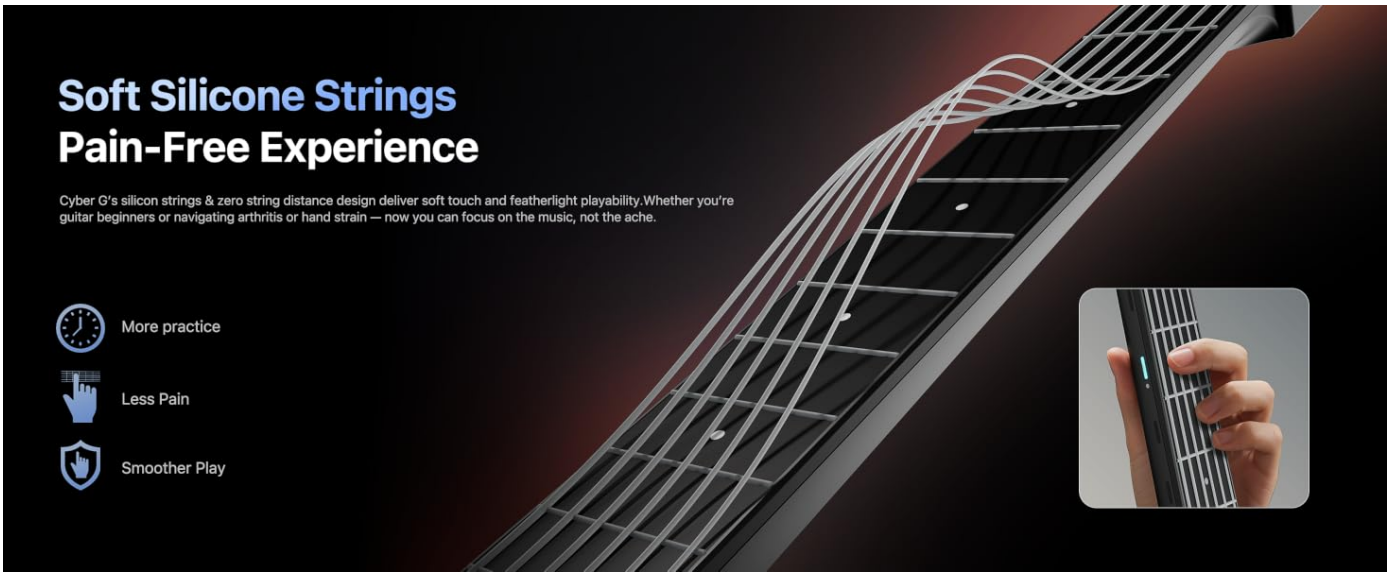


Image: A user practicing with the CYBER-G Smart Guitar and the Enya App providing smart practice assistance.

Multi-Module Interchange

The CYBER-G allows you to switch between string, keyboard, and pick modules. These modules can be interchanged in seconds to adapt to different playing styles and musical needs.



Image: The multi-module interchange feature, showing how different playing modules can be attached to the guitar.

Maintenance

Cleaning

Wipe the guitar's body and fretboard with a soft, dry cloth. For silicone strings, a damp cloth can be used to remove any residue. Avoid using harsh chemicals or abrasive materials that could damage the finish or electronic components.

Storage

Store the CYBER-G Smart Guitar in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is partially charged (around 50%) to preserve battery health. The detachable neck design allows for compact storage in its portable case.

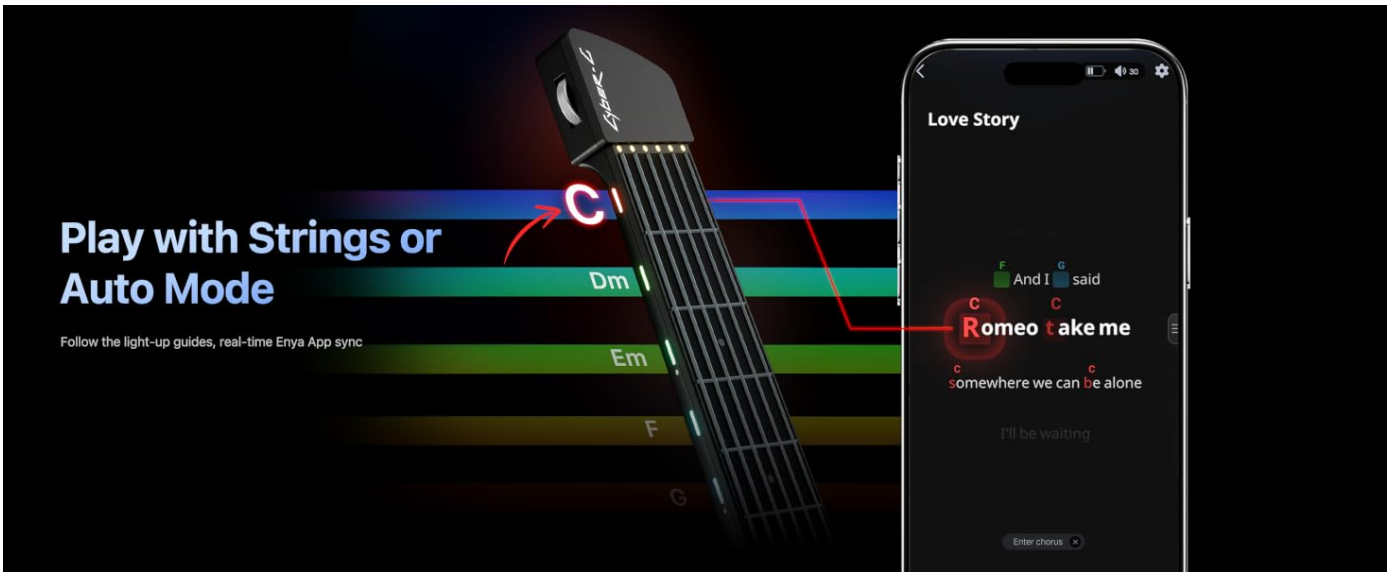


Image: A person carrying the CYBER-G Smart Guitar in its portable case, illustrating its travel-friendly design.

Troubleshooting

No Sound Output

- Check the volume level on the guitar and any connected devices.
- Ensure the guitar is powered on.
- Verify that the correct tone/instrument sound is selected.
- If using headphones, ensure they are properly plugged into the 3.5mm jack.

App Connectivity Issues

- Ensure Bluetooth is enabled on your mobile device.
- Restart both the guitar and the Enya music APP.
- Make sure the guitar is within range of your device.
- Check for any app updates.

Fretboard Lights Not Responding

- Confirm the guitar is connected to the Enya music APP.
- Ensure you are in a mode that utilizes the light-guided fretboard (e.g., Simplified Mode).

Specifications

Feature	Detail
Brand	CYBER-G
Model Name	CYBER-G
Model Number	Cyber-G Guitar-BK
Color	Black

Body Material	ABS+PC
String Material Type	ABS+PC (Silicone Strings)
Number of Strings	6
Built-in Tones	24
Speaker System	Built-in (10W Tweeter + 20W Woofer)
Drum System	Built-in
Connectivity	Enya music APP (Bluetooth), USB Port, 3.5mm Headphone Jack
Hand Orientation	Right

Warranty

The CYBER-G Smart Guitar comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Support

For further assistance, technical support, or inquiries regarding your CYBER-G Smart Guitar, please refer to the Enya music APP for resources or contact the manufacturer, Enya Musical, directly through their official channels. Visit the CYBER-G Store on Amazon for additional product information and support links.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GKDX5JWZ

More documents and user manuals: **https://manuals.plus/**