Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WINGBO SYCF5415

WINGBO 54-inch Flush Mount Ceiling Fan User Manual

Model: SYCF5415

1. Safety Information

Please read and understand all instructions before beginning installation. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Ensure the power is turned off at the circuit breaker before installation or maintenance.
- All electrical wiring must be performed by a qualified electrician and comply with local and national electrical codes.
- The mounting structure must be capable of supporting the weight of the fan (approximately 17 lbs / 7.7 kg).
- Maintain a minimum clearance of 7 feet (2.1 meters) from the floor to the bottom of the fan blades.
- Do not insert objects into the path of the fan blades.
- This fan is suitable for indoor and covered outdoor use. Do not expose to direct rainfall or standing water.

2. Package Contents

Verify that all components are present and undamaged before proceeding with installation.

- Motor Assembly
- Ceiling Mounting Bracket
- 5 Solid Wood Blades
- Remote Control with Wall Mount
- Hardware Pack (screws, washers, wire nuts)
- Instruction Manual



Image: All components of the WINGBO 54-inch Flush Mount Ceiling Fan laid out, including the motor, blades, remote, and hardware.

3. Installation Instructions

Follow these steps carefully for proper installation. It is recommended to have a second person assist during installation.

Video: Detailed installation guide for the WINGBO 54-inch Ceiling Fan, demonstrating unboxing, mounting, wiring, and blade attachment.

3.1 Mounting the Ceiling Bracket

1. Turn off power at the circuit breaker.
2. Remove the mounting bracket from the fan canopy.
3. Secure the mounting bracket to the ceiling junction box using the provided screws. Ensure it is firmly attached to a structural support.

3.2 Wiring the Fan

1. Carefully lift the fan motor assembly and hang it from the mounting bracket using the safety cable.
2. Connect the electrical wires according to local codes: Live (black) to Live, Neutral (white) to Neutral, and Ground (green/yellow) to Ground. Use the provided wire nuts.
3. Connect the receiver unit for the remote control, ensuring all connections are secure.

3.3 Attaching the Blades

1. Attach each of the 5 solid wood blades to the motor housing using the provided screws and washers. Ensure all screws are tightened securely.
2. Once all blades are attached, carefully push the canopy up against the ceiling and secure it to the mounting bracket.

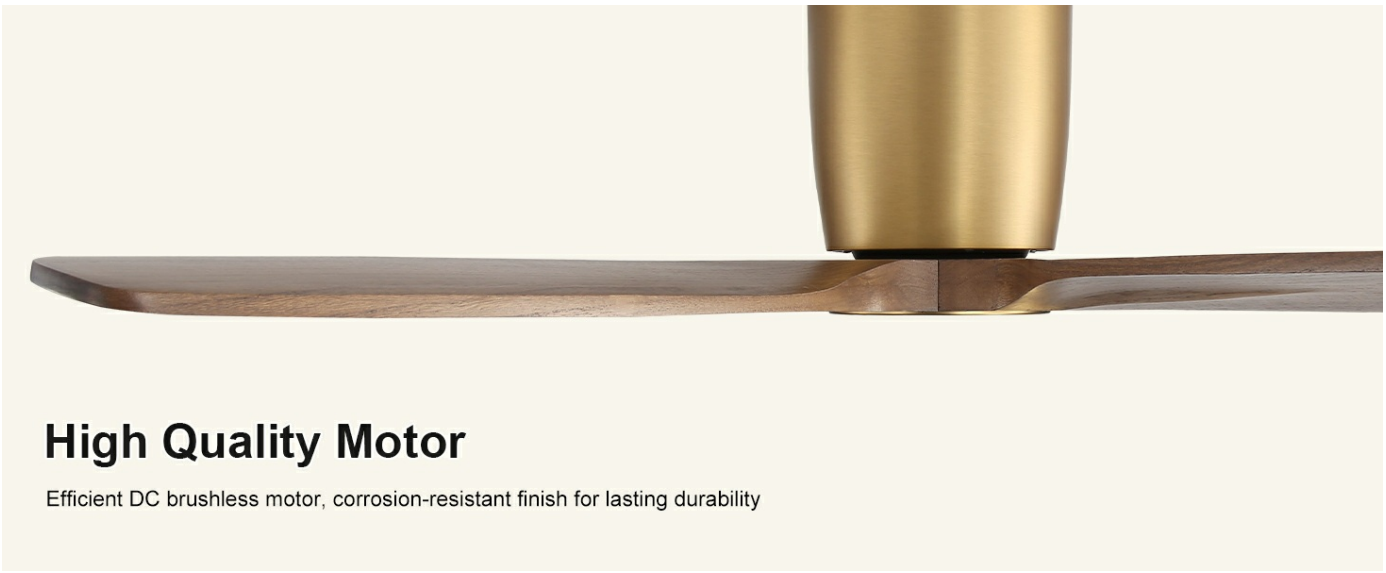


Image: A close-up view of a hand attaching a solid wood blade to the fan motor assembly.

4. Operation

Your WINGBO ceiling fan is controlled by the included remote. Ensure the remote has fresh batteries installed.

4.1 Remote Control Functions

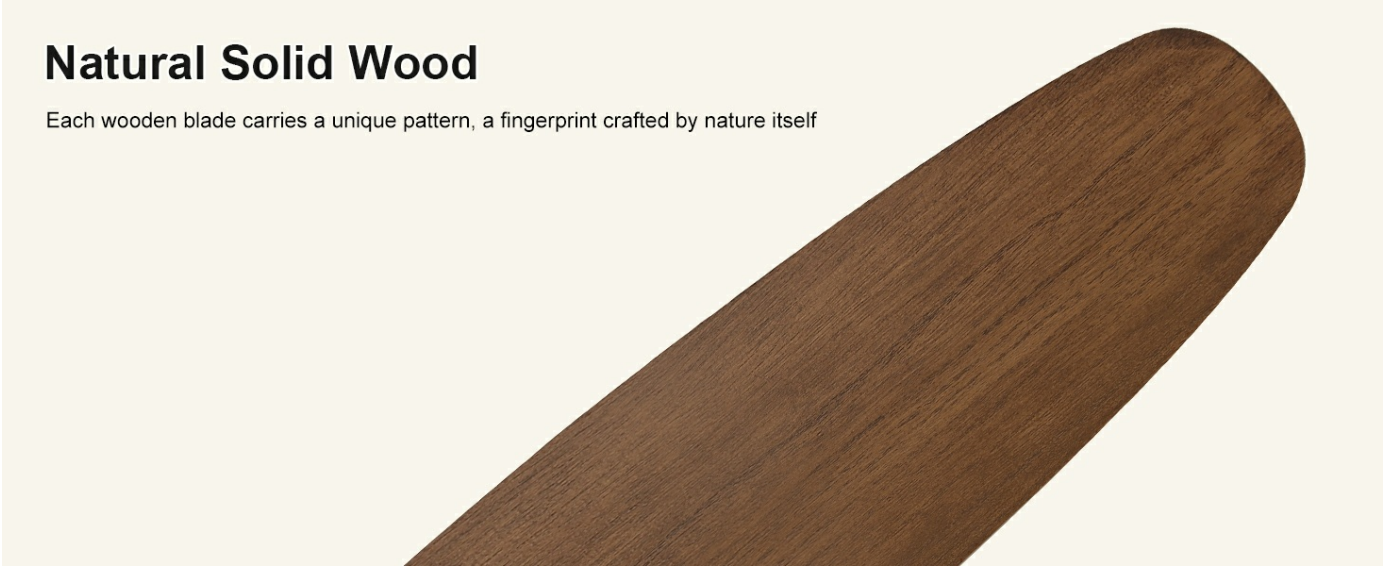


Image: The remote control for the ceiling fan, showing buttons for power, speed, direction, timer, and natural wind mode.

- **Power Button:** Turns the fan ON or OFF.
- **Speed Control:** Adjusts fan speed from 1 (lowest) to 6 (highest).
- **Forward/Reverse Button:** Changes the direction of blade rotation.
- **Timer Function:** Sets the fan to turn off automatically after 1, 4, or 8 hours.
- **Natural Wind Mode:** Simulates natural breezes by varying fan speed.
- **Memory Function:** The fan will recall the last used speed setting when turned back on.

4.2 Reversible DC Motor

The reversible DC motor allows for year-round use:

- **Summer Mode (Counter-clockwise):** Creates a downward airflow for a cooling effect.
- **Winter Mode (Clockwise):** Circulates warm air trapped near the ceiling, helping to distribute heat more evenly.



Image: Illustration showing the fan blades rotating counter-clockwise for summer cooling and clockwise for winter heat circulation.

Video: The WINGBO ceiling fan operating in a living room, showcasing its quiet movement and airflow.

5. Maintenance

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Use a soft, damp cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or solvents.
- **Blade Inspection:** Periodically check the blade screws for tightness. Loose screws can cause wobbling or noise.
- **Dust Removal:** Dust the fan regularly to prevent buildup, which can affect performance and motor life.

6. Troubleshooting

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power supply, loose wiring, remote control issue	Check circuit breaker, ensure all wires are connected securely, replace remote batteries.
Fan makes noise	Loose screws, unbalanced blades, motor issue	Tighten all screws, ensure blades are properly installed, contact support if motor noise persists.
Fan wobbles	Loose mounting bracket, unbalanced blades	Ensure mounting bracket is secure, check blade balance and tightness.
Remote control not working	Dead batteries, receiver interference	Replace remote batteries, ensure no obstructions between remote and receiver.

7. Specifications

Feature	Detail
Brand	WINGBO
Model Number	SYCF5415
Product Dimensions	54"D x 54"W x 11.22"H
Color	Gold and Wood
Electric Fan Design	Ceiling Fan
Power Source	DC
Style	Modern
Room Type	Bedroom, Covered Outdoor, Dining Room, Kitchen, Living Room
Special Feature	5 Blades
Mounting Type	Flush Mount
Controller Type	Remote Control
Number of Speeds	6
Wattage	40 watts
Material	Wood
Blade Material	Wood

Feature	Detail
Motor Type	Brushless DC
Indoor Outdoor Usage	Indoor, Outdoor (Covered)

8. Warranty and Support

This WINGBO ceiling fan comes with a**2-year after-sales warranty**. If any part of the ceiling fan is damaged or you require assistance, please contact WINGBO customer support.

For further assistance or to report issues, please refer to the contact information provided with your purchase documentation or visit the official WINGBO website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GL7KPDXC

More documents and user manuals: **https://manuals.plus/**