Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Zilvok 600/P8

Zilvok 61-Key Portable Electronic Digital Piano Instruction Manual

Model: **600/P8** | Brand: **Zilvok**

Introduction

Thank you for choosing the Zilvok 61-Key Portable Electronic Digital Piano. This instrument is designed for beginners and offers a wide range of features to enhance your musical learning experience. This manual provides essential information for the safe and effective use of your new digital piano. Please read it thoroughly before operating the device and retain it for future reference.

Safety Information

- **Power Source:** Use only the specified power adapter or 4 AA batteries. Ensure the voltage matches the device requirements.
- **Water and Moisture:** Do not expose the piano to water or excessive moisture. Avoid using it near bathtubs, sinks, or in damp environments.
- **Heat Sources:** Keep the piano away from heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Cleaning:** Clean only with a dry cloth. Do not use liquid cleaners or aerosol sprays.
- **Ventilation:** Do not block any ventilation openings. Ensure proper airflow around the device.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Children:** This product is suitable for beginners, including children, but adult supervision is recommended during use, especially when connecting power or accessories.

Package Contents

Please check that all items listed below are included in your package:

- Zilvok 61-Key Portable Electronic Digital Piano
- Power Adapter
- Microphone
- Instruction Manual (this document)

Note: 4 AA batteries are not included and must be purchased separately if battery operation is desired.

Product Overview

Familiarize yourself with the main components and controls of your Zilvok digital piano.



Figure 1: Overview of the Zilvok 61-Key Portable Electronic Digital Piano, highlighting its practical functions such as stereo sound quality, 61 standard keys, 16 tones, 16 rhythms, dual power supply, 10 demo songs, double horn speakers, and microphone input.



Figure 2: Detailed view of the control panel, showing buttons for Tone, Rhythm, Demo, Program, Record, Playback, Volume, Tempo, and various input/output jacks including power, microphone, and headphone ports.

Key Features:

- **61 Standard Keys:** Provides a full range for learning and playing.
- **Built-in Dual Speakers:** Delivers clear stereo sound.
- **Microphone Input:** Allows for singing along or recording vocals.
- **100 Tones:** A variety of instrument sounds to choose from.
- **100 Rhythms:** Accompaniment styles for diverse musical genres.
- **10 Demo Songs:** Pre-recorded melodies for listening and learning.
- **Recording & Playback Function:** Capture and review your performances.
- **Chord Functions:** Single-finger and multi-finger chord modes for simplified accompaniment.
- **Dynamic Sound Effects:** Sustain, Vibrato, and Echo for expressive playing.
- **Dual Power Supply:** Operates with included power adapter or 4 AA batteries (not included).

Setup

1. Powering the Keyboard

Your Zilvok digital piano can be powered in two ways:

1. **Using the AC Power Adapter:**
    a. Locate the DC 9V power input jack on the rear panel of the piano.
    b. Connect the included power adapter to this jack.
    c. Plug the other end of the adapter into a standard electrical outlet.
2. **Using Batteries:**
    a. Locate the battery compartment on the underside of the piano.
    b. Open the compartment cover.
    c. Insert 4 new AA batteries, ensuring correct polarity (+/-).
    d. Close the battery compartment cover securely.

    Note: Remove batteries if the piano will not be used for an extended period to prevent leakage.

Once powered, slide the **POWER** switch to the "ON" position, located on the left side of the control panel.

2. Connecting Accessories

1. **Microphone:**
    a. Plug the included microphone into the **MIC IN** jack on the rear panel.
    b. Adjust the microphone volume using the dedicated control if available, or the main volume.
2. **Headphones:**
    a. For private practice, connect standard 3.5mm headphones to the **PHONES** jack on the rear panel.
    b. Connecting headphones will mute the built-in speakers.



Figure 3: Rear panel connections, including the DC 9V power input, microphone input, and headphone output. Dimensions of the keyboard are also shown.

Operating Instructions

1. Basic Playback

- Turn on the power using the **POWER** switch.
- Adjust the main volume using the **VOLUME +/-** buttons.
- Press the keys to play. The default sound is usually a piano tone.

2. Selecting Tones (Voices)

- Press the **TONE** button.
- Use the number buttons (0-9) or the **+/-** buttons to select a tone from the available 100 tones. The selected tone number will be displayed on the LED screen.
- Refer to the tone list printed on the piano's panel for specific instrument sounds.



Figure 4: The control panel showing the "Tones" section, indicating the variety of instrument sounds available for selection.

3. Selecting Rhythms (Accompaniments)

- Press the **RHYTHM** button.
- Use the number buttons (0-9) or the**+/-** buttons to select a rhythm from the available 100 rhythms. The selected rhythm number will be displayed.
- Press **START/STOP** to begin or end the rhythm.
- Adjust the rhythm tempo using the**TEMPO +/-** buttons.

4. Using Demo Songs

The piano includes 10 pre-recorded demo songs for enjoyment and learning.

- Press the **DEMO A** or **DEMO B** button to start playing a demo song.
- Press the button again to stop the demo song.
- Use the **+/-** buttons to cycle through the available demo songs.

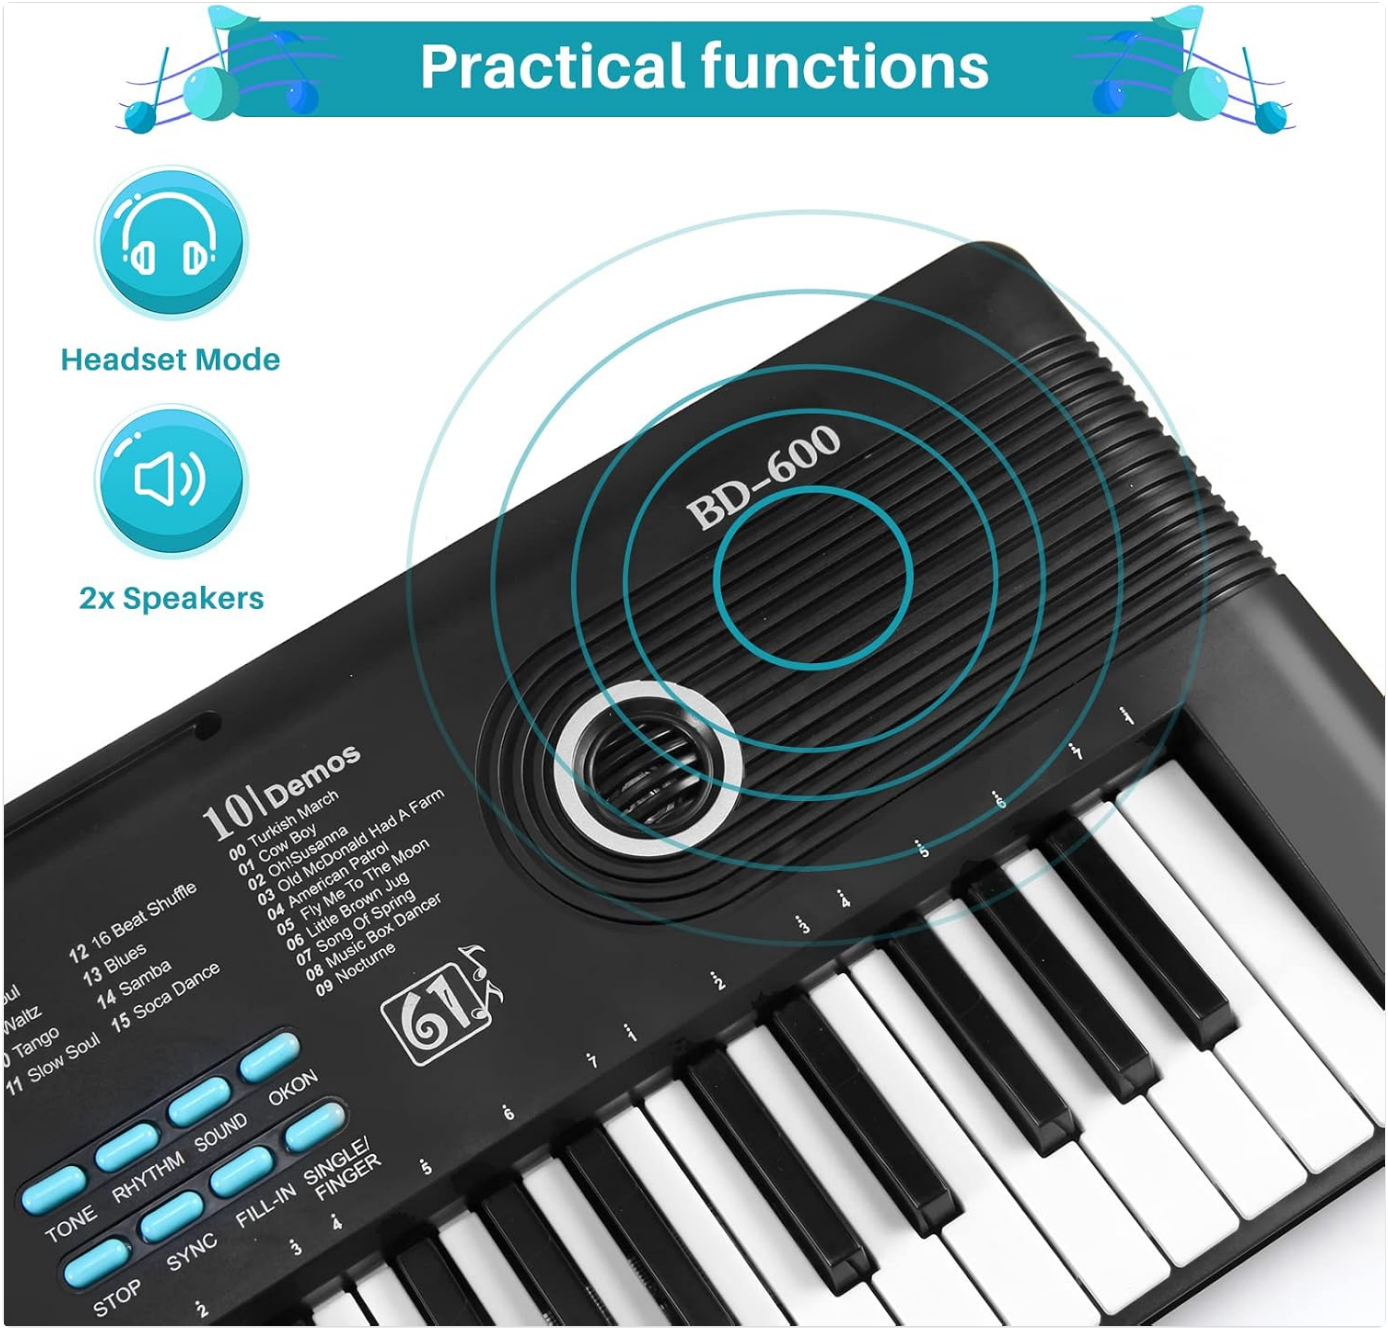


Figure 5: Close-up of the piano's control panel, highlighting the list of 10 demo songs and the location of the dual speakers.

5. Recording and Playback

The recording function allows you to capture your performances.

- Press the **RECORD** button to start recording. The LED display may indicate "REC".
- Play your desired melody.
- Press **PLAY** to stop recording and immediately play back your recorded performance.
- Press **PLAY** again to replay the recorded track.

6. Chord Functions

The piano supports simplified chord playing:

- **Single-Finger Chord:** Press the **SINGLE/FINGER** button. Play a single key in the lower range of the keyboard to generate a full chord.
- **Multi-Finger Chord:** Press the **SINGLE/FINGER** button again to switch to multi-finger chord mode. Play multiple keys in the lower range to form chords.

- Press the **SINGLE/FINGER** button a third time to turn off the chord function.

7. Dynamic Sound Effects

- **Sustain:** Press the **SUSTAIN** button to add a lingering effect to notes. Press again to turn off.
- **Vibrato:** Press the **VIBRATO** button to add a slight pitch variation to notes. Press again to turn off.
- **Echo:** Press the **ECHO** button to add a reverberation effect. Press again to turn off.

Maintenance

- **Cleaning:** Wipe the surface of the piano with a soft, dry cloth. Do not use abrasive cleaners, solvents, or waxes, as they may damage the finish.
- **Storage:** When not in use, store the piano in a cool, dry place away from direct sunlight and extreme temperatures. If storing for a long period, remove batteries.
- **Handling:** Handle the piano with care. Avoid dropping it or subjecting it to strong impacts.

Troubleshooting

Problem	Possible Cause	Solution
No power	Power switch is OFF. Power adapter not connected or faulty. Batteries are dead or incorrectly inserted.	Slide **POWER** switch to ON. Check adapter connection and power outlet. Try new batteries or ensure correct polarity.
No sound	Volume is too low. Headphones are connected. Speaker malfunction.	Increase volume using **VOLUME +/-**. Disconnect headphones. Contact customer support if speakers are faulty.
Microphone not working	Microphone not properly connected. Microphone volume too low. Faulty microphone.	Ensure microphone is fully inserted into **MIC IN** jack. Increase main volume. Test with another microphone if possible.
Keys not responding	Power issue. Internal malfunction.	Check power supply. Turn off and on again. If problem persists, contact customer support.

Specifications

Brand	Zilvok
Model Number	600 / P8
Number of Keys	61
Tones	100
Rhythms	100

Demo Songs	10
Special Features	Built-in Dual Speakers, Microphone Input, Recording/Playback, Chord Functions
Power Supply	DC 9V Power Adapter (included) or 4 x AA Batteries (not included)
Material	ABS Plastic
UPC	763300672765

Warranty Information

The manufacturer provides a limited warranty for this product. Specific warranty terms and conditions, including duration and coverage, are typically provided with your purchase documentation or can be obtained directly from the manufacturer. Please retain your proof of purchase for warranty claims.
For detailed warranty information, please refer to the documentation included in your product packaging or visit the official Zilvok website.

Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact Zilvok customer support or your retailer. Have your model number (600/P8) and proof of purchase ready when contacting support.
For the most up-to-date support information, please visit the official Zilvok website.

© 2026 Zilvok. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GLFYM7RB

More documents and user manuals: **https://manuals.plus/**