Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Gurexl B0GMQVTJ5P

Gurexl 5-Tier Arched Display Cabinet User Manual

Model: B0GMQVTJ5P

1. Introduction

Thank you for choosing the Gurexl 5-Tier Arched Display Cabinet. This manual provides essential information for the safe assembly, operation, and maintenance of your new display cabinet. Please read these instructions carefully before use and retain them for future reference.

2. Safety Information

To ensure safe use and prevent damage, please observe the following:

- **Assembly:** Always follow the assembly instructions precisely. Ensure all parts are securely fastened before use.
- **Stability:** This cabinet is designed to be freestanding. For added stability and to prevent tipping, especially in households with children or pets, consider securing the cabinet to a wall using appropriate anti-tip hardware (not included, but recommended).
- **Weight Capacity:** Do not exceed the maximum weight capacity of**40 lbs (18 kg)** per shelf. Overloading can cause structural failure and injury.
- **Glass Handling:** Tempered glass is strong but can break if subjected to sharp impacts. Handle glass components with care during assembly and use.
- **Electrical Components:** The RGB LED lighting system and motion sensor are electrical components. Do not expose them to water or excessive moisture. Ensure the power supply is disconnected before any maintenance or cleaning.
- **Placement:** Place the cabinet on a level, stable surface. Avoid placing it in direct sunlight or near heat sources to prevent material degradation.

3. Package Contents

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Cabinet Frame Components (metal and wood parts)
- Glass Shelves (2 adjustable)

- Glass Doors (with push-to-open mechanism)
- RGB LED Light Strips
- Motion Sensor Module
- Power Adapter
- Assembly Hardware (screws, connectors, etc.)
- Assembly Instructions Manual

4. Setup and Assembly

Assembly is required for this product. Please follow the detailed step-by-step instructions provided in the separate assembly manual included in your package. A general overview of key steps is provided below:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Frame:** Connect the main frame components according to the diagrams in the assembly manual. Ensure all screws are tightened securely.
3. **Install Glass Panels and Doors:** Insert the fixed glass panels and attach the push-to-open glass doors. Test the door mechanism for smooth operation.
4. **Place Shelves:** Position the adjustable glass shelves at your desired height. Ensure they are seated firmly on their supports.
5. **Install LED Lighting and Motion Sensor:** Adhere the RGB LED light strips to the designated areas within the cabinet. Connect them to the motion sensor module and then to the power adapter.
6. **Connect Power:** Plug the power adapter into a suitable electrical outlet.



Adjustable glass shelves allow for customized display configurations.



Details of the cabinet's features, including the light control panel, arched top, and sturdy legs.

5. Operating Instructions

5.1. Motion Sensor LED Lights

The cabinet is equipped with an automatic LED lighting system featuring a motion sensor:

- **Automatic Activation:** The lights will automatically turn on when motion is detected within approximately 2.5 meters (8.2 feet) of the sensor.
- **Automatic Deactivation:** The lights will turn off automatically after approximately 30 seconds of no detected motion.



The motion sensor automatically activates the LED lights when someone approaches.

5.2. RGB LED Lighting Modes

The integrated RGB LED lighting system offers various modes to customize your display:

- **Control Panel:** A control panel is located on the cabinet to switch between lighting modes and adjust settings.
- **Dynamic Modes:** Choose from 5 dynamic lighting modes, which can include color cycling or fading effects. Speed control may be available for these modes.
- **Static Modes:** Select from 7 static color modes to maintain a single color illumination. Brightness can be adjusted for static modes.



Multiple RGB lighting modes are available, including dynamic and static options with adjustable brightness.

5.3. Push-to-Open Glass Doors

The cabinet features handle-free, push-to-open glass doors for a sleek appearance and easy access:

- **Opening:** Gently press the door inward to release the latch, and the door will spring open slightly.
- **Closing:** Push the door firmly until you hear a click, indicating it is securely latched.



The push-to-open door mechanism allows for easy access to displayed items.

6. Maintenance

Regular maintenance will help keep your Gurexl display cabinet in optimal condition:

- **Cleaning Frame:** Wipe the cabinet frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Cleaning Glass:** Use a glass cleaner and a microfiber cloth to clean the glass doors and shelves. Spray cleaner onto the cloth, not directly onto the glass, to prevent liquid from seeping into crevices.
- **Dusting:** Regularly dust the interior and exterior surfaces to prevent buildup.
- **Electrical Components:** Ensure the power is disconnected before cleaning near the LED lights or motion sensor. Use a dry, soft cloth for these areas.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.


7. Troubleshooting

If you encounter issues with your display cabinet, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
LED lights do not turn on.	Power adapter not plugged in; loose connection; motion sensor obstructed or faulty.	Check if the power adapter is securely plugged into the outlet and the cabinet. Ensure all light strip connections are firm. Clear any obstructions from the motion sensor.
Motion sensor not responding.	Sensor obstructed; incorrect sensitivity setting (if adjustable); faulty sensor.	Ensure the sensor is clear of obstructions. If your model has sensitivity settings, adjust them. Contact support if the issue persists.
Glass doors do not close properly.	Latch mechanism obstructed; door misaligned; debris in the closing mechanism.	Check for any objects blocking the latch. Inspect door hinges for misalignment and adjust if possible. Clean any debris from the push-to-open mechanism.
Cabinet feels wobbly.	Uneven floor; loose assembly hardware.	Ensure the cabinet is on a level surface. Adjust any leveling feet if present. Retighten all assembly screws. Consider using anti-tip hardware.

8. Specifications

Feature	Detail
Brand	Gurexl
Model	B0GMQVTJ5P
Color	Black
Material	Glass, Metal (Frame)
Product Dimensions (D x W x H)	12.99" x 29.52" x 68.89" (33cm x 75cm x 175cm)
Number of Shelves	7 (including 2 adjustable glass shelves)
Weight Capacity per Shelf	40 lbs (18 kg)
Lighting	RGB LED Lights (5 dynamic, 7 static modes)
Sensor	Motion Sensor (2.5m detection range, 30s auto-off)
Door Type	Push-to-Open Glass Doors
Assembly Required	Yes

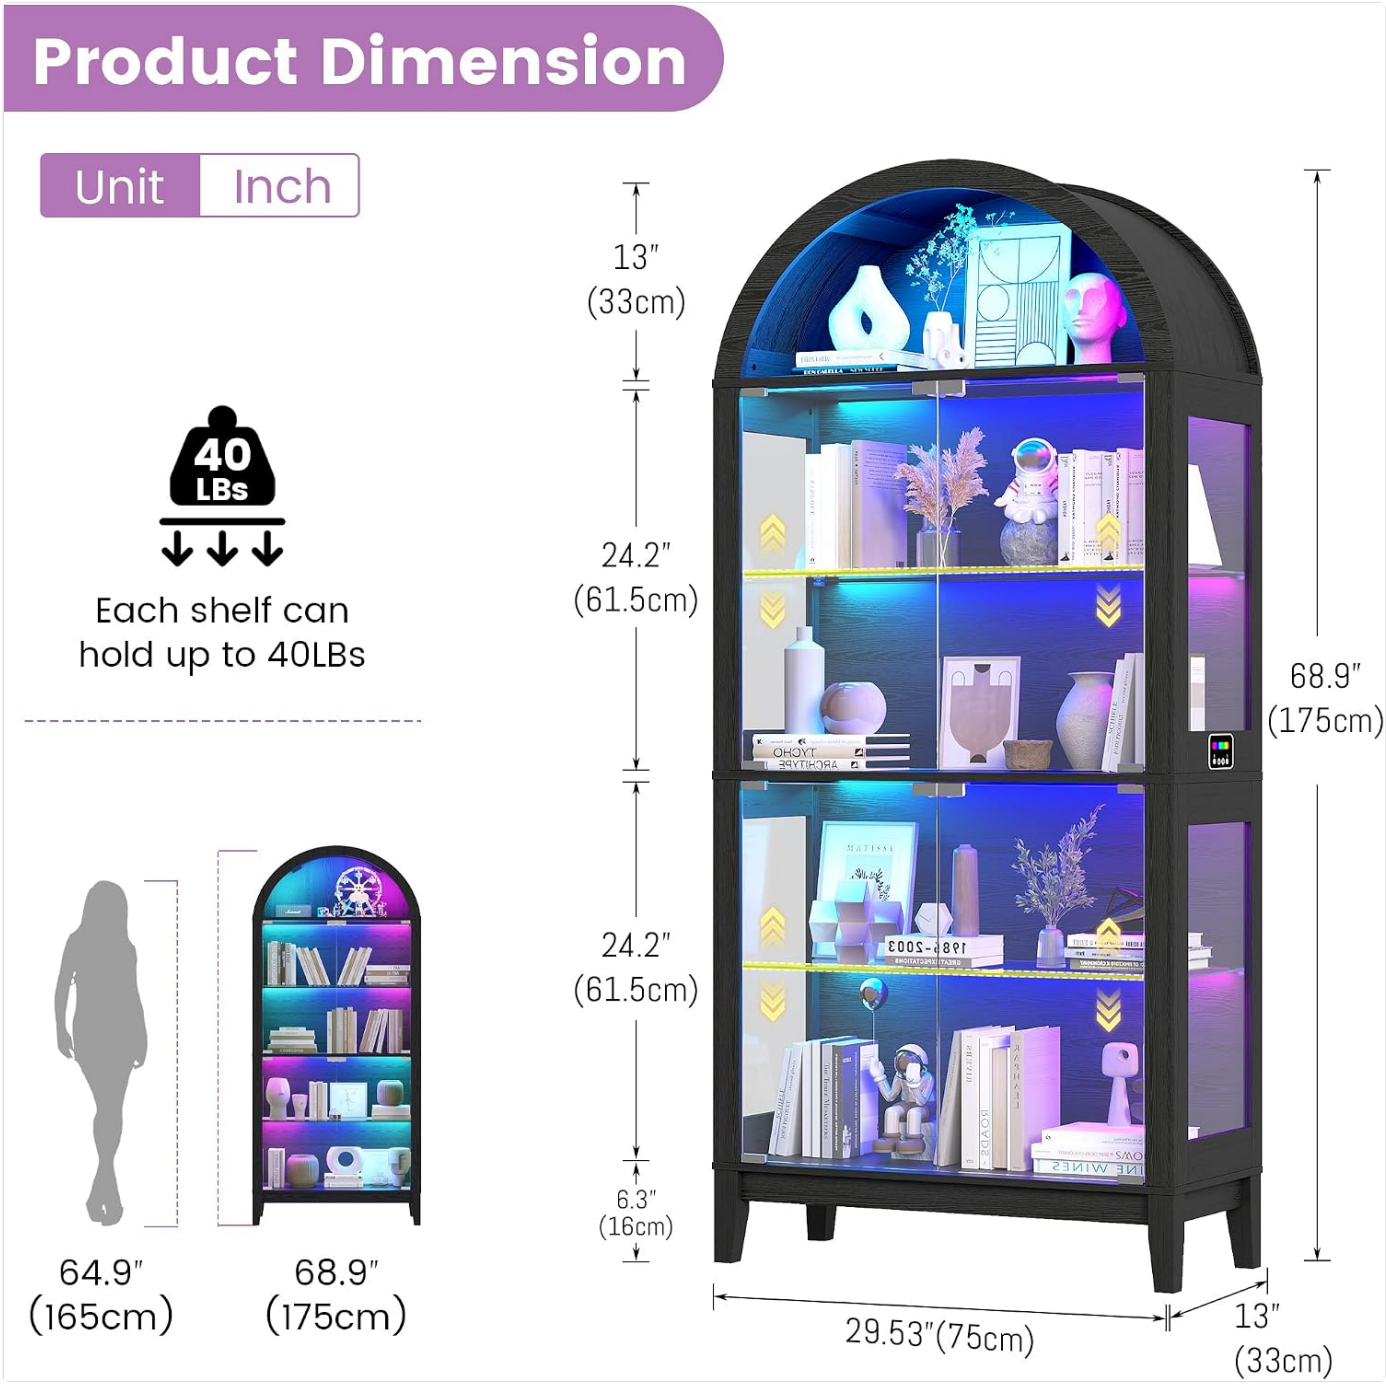

Detailed product dimensions and shelf weight capacity.

9. Warranty and Support

For warranty information, please refer to the documentation included with your product at the time of purchase. If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Gurexl customer support. You can often find support contact details on the manufacturer's website or through your retailer.
For more information about Gurexl products, visit theGurexl Store.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GMQVTJ5P

More documents and user manuals: **https://manuals.plus/**