Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TriPole KW57

TriPole KW57 Rechargeable Desk Fan User Manual

Model: KW57

Introduction

Thank you for choosing the TriPole KW57 Rechargeable Desk Fan. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new fan. Please read it thoroughly before use and retain it for future reference.



The TriPole KW57 desk fan, designed for personal cooling, shown in a typical office setting.

Important Safety Instructions

- Always ensure the fan is placed on a stable, flat surface to prevent tipping.
- Do not insert fingers or any objects into the fan grille when it is operating.
- Keep the fan away from water or other liquids. Do not use in wet environments.
- Do not block the air intake or outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental

capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Use only the provided USB-C cable for charging.
- Turn off the fan and unplug it before cleaning or when not in use for extended periods.
- Do not attempt to disassemble or repair the fan yourself. Contact customer support for assistance.


Package Contents

Please check the package for the following items:

- TriPole KW57 Rechargeable Desk Fan
- USB-C Charging Cable
- User Manual (this document)

Product Overview

The TriPole KW57 is a compact and portable desk fan featuring a brushless motor, 4-speed settings, an LED digital display, and a night light function. It is designed for personal cooling in various indoor and outdoor settings.

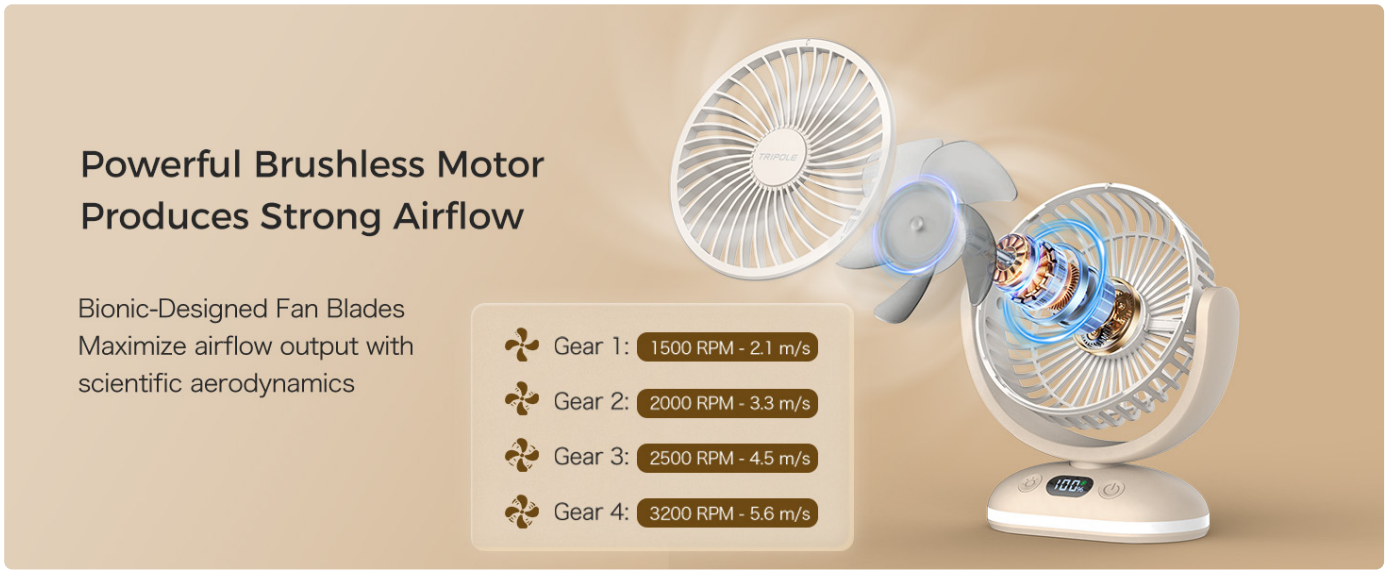

Internal components and airflow capabilities of the TriPole KW57 fan.

Key Features:

- **4 Adjustable Fan Speeds:** From a gentle breeze to a strong airflow (up to 5.6m/s).
- **4000mAh Rechargeable Battery:** Provides 5-31 hours of runtime on a single charge.
- **Digital Display:** Shows real-time battery percentage.
- **3-Level Night Light:** Soft warm glow for ambient lighting.
- **Adjustable Airflow Angle:** Fan head tilts 90° upward and 30° downward.
- **Quiet Operation:** Noise level below 25dB.
- **Safety Lock Button:** Prevents accidental activation.



The safety lock button located on the back of the fan base.

Setup

Initial Charging

1. Before first use, fully charge the fan.
2. Connect the provided USB-C cable to the charging port on the back of the fan.
3. Plug the other end of the USB-C cable into a compatible USB power adapter (not included) or a computer USB port.
4. The digital display will show the battery percentage, indicating charging progress. A full charge takes approximately 3.5 hours.
5. Once fully charged (100% displayed), disconnect the charging cable.



The fan's digital display indicates battery level and charging status.

Operating Instructions

Power On/Off and Fan Speed Adjustment

1. Ensure the safety lock button on the back of the fan is in the "ON" position.

2. Press the power button (usually the rightmost button on the front base) once to turn on the fan at Speed 1. The digital display will show "F1".
3. Press the power button repeatedly to cycle through fan speeds: F1 → F2 → F3 → F4.
4. To turn off the fan, press the power button after F4, or press and hold the power button for 2 seconds at any speed.

Night Light Function

1. Press the light button (usually the leftmost button on the front base) once to turn on the night light at Level 1. The digital display will show "L1".
2. Press the light button repeatedly to cycle through brightness levels: L1 → L2 → L3.
3. To turn off the night light, press the light button after L3, or press and hold the light button for 2 seconds at any brightness level.



The fan's night light function provides ambient illumination for sleeping or relaxation.

Adjusting Airflow Angle

The fan head can be manually tilted to direct airflow. It can be adjusted 90° upward and 30° downward from its central position. Gently push or pull the fan head to the desired angle.



Adjust the fan head to direct cool air precisely where needed.

Portability and Versatility

The compact size and long battery life make the TriPole KW57 suitable for various applications:

- **Desk Use:** Provides personal cooling in offices or study areas.
- **Bedroom:** Quiet operation and night light are ideal for sleeping.
- **Travel:** Easily fits into bags for use in hotels, cruises, or camping.
- **Outdoor Activities:** Offers cooling during picnics or other outdoor events.



The TriPole KW57 fan is versatile for various personal cooling needs.

Your browser does not support the video tag.

Official video demonstrating the features and portability of the TriPole KW57 desk fan.

Maintenance

Cleaning the Fan

Regular cleaning helps maintain optimal performance and extends the lifespan of your fan.

1. Ensure the fan is turned off and unplugged from any power source.
2. To remove the front mesh cover, gently twist it counter-clockwise until it unlocks, then pull it off.
3. Rinse the mesh cover under running water to remove dust and debris. Allow it to dry completely before reattaching.
4. Wipe the fan blades with a soft, damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
5. Once the blades and cover are dry, align the cover with the fan body and twist clockwise to lock it back into place.



Step-by-step guide for cleaning the fan's removable cover and blades.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted. Safety lock is engaged.	Charge the fan fully. Ensure the safety lock button on the back is in the "ON" position.
Fan does not charge.	Charging cable is not properly connected. Faulty cable or adapter.	Ensure the USB-C cable is securely connected to both the fan and the power source. Try a different USB-C cable or power adapter.
Weak airflow.	Fan speed is too low. Fan grille or blades are dirty.	Increase the fan speed. Clean the fan grille and blades as per maintenance instructions.

Problem	Possible Cause	Solution
Night light does not turn on.	Battery is depleted.	Charge the fan fully.
Unusual noise during operation.	Obstruction in fan blades. Loose parts.	Turn off and unplug the fan. Carefully check for any obstructions and remove them. If the issue persists, contact customer support.

Specifications

Feature	Detail
Brand	TriPole
Model Name	KW57
Power Source	Battery Powered (4000mAh)
Number of Speeds	4
Noise Level	25 dB
Wattage	5 watts
Voltage	5 volts
Max Air Speed	18.4 feet/second (5.6 m/s)
Product Dimensions (D x W x H)	2.5" x 5.5" x 6.5"
Item Weight	11.2 ounces
Material	Acrylonitrile Butadiene Styrene
Special Features	Adjustable Tilt, LED Light, Lightweight, Portable, Quiet Operation

Warranty and Support

Warranty Information

The TriPole KW57 Rechargeable Desk Fan comes with a standard manufacturer's warranty. Please refer to the product packaging or contact your retailer for specific warranty terms and conditions.

Customer Support

If you encounter any issues or have questions regarding your TriPole KW57 fan that are not addressed in this manual, please contact our customer support team for assistance. You can typically find contact information on the product packaging or the official TriPole website.

© 2026 TriPole. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GQZC1W2Q

More documents and user manuals: **https://manuals.plus/**