Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Aoxun G30067BE1210+G55008BE50

Aoxun 10x12 Outdoor Gazebo with LED Lights Instruction Manual

Model: G30067BE1210+G55008BE50 | Brand: Aoxun

1. Introduction

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Aoxun 10x12 Outdoor Gazebo. Please read this manual thoroughly before installation and use to ensure proper setup and safe operation. Keep this manual for future reference.

Figure 1: Aoxun 10x12 Outdoor Gazebo with LED Lights.

2. Safety Information

Always follow these safety guidelines to prevent injury or damage to the gazebo:

- Ensure all components are securely fastened during assembly.
- Do not assemble the gazebo in strong winds or adverse weather conditions.
- Regularly inspect the frame and canopy for wear, damage, or loose connections.
- Clear snow accumulation from the roof to prevent collapse.
- Keep open flames and heat sources away from the canopy fabric.
- Properly anchor the gazebo to the ground to prevent wind uplift.

3. Package Contents

Verify that all parts are present before beginning assembly. Refer to the included parts list for specific component identification.

- Steel Frame Components (legs, beams, roof supports)
- Main Canopy Fabric
- Top Canopy Fabric (Ventilated Double Roof)
- Mosquito Netting Panels
- Privacy Screen Curtains
- 50FT LED Hanging Lights (with 15 sockets, 16 shatterproof LEDs + 1 spare)
- Assembly Hardware (bolts, nuts, washers, expansion bolts, windproof ropes)
- J-shaped Hooks (2)
- Corner Rings (4)
- Instruction Manual

4. Setup Instructions

Assembly typically requires two or more people. Follow the step-by-step diagrams provided in your physical manual for detailed visual guidance.

4.1 Site Preparation

Choose a level area for installation. Ensure adequate clearance around the gazebo for stability and access.

4.2 Frame Assembly

1. Assemble the main leg posts and connect them using the horizontal beams.
2. Attach the roof support structure to the main frame.
3. Ensure all bolts are tightened securely, but do not overtighten until the entire frame is assembled.

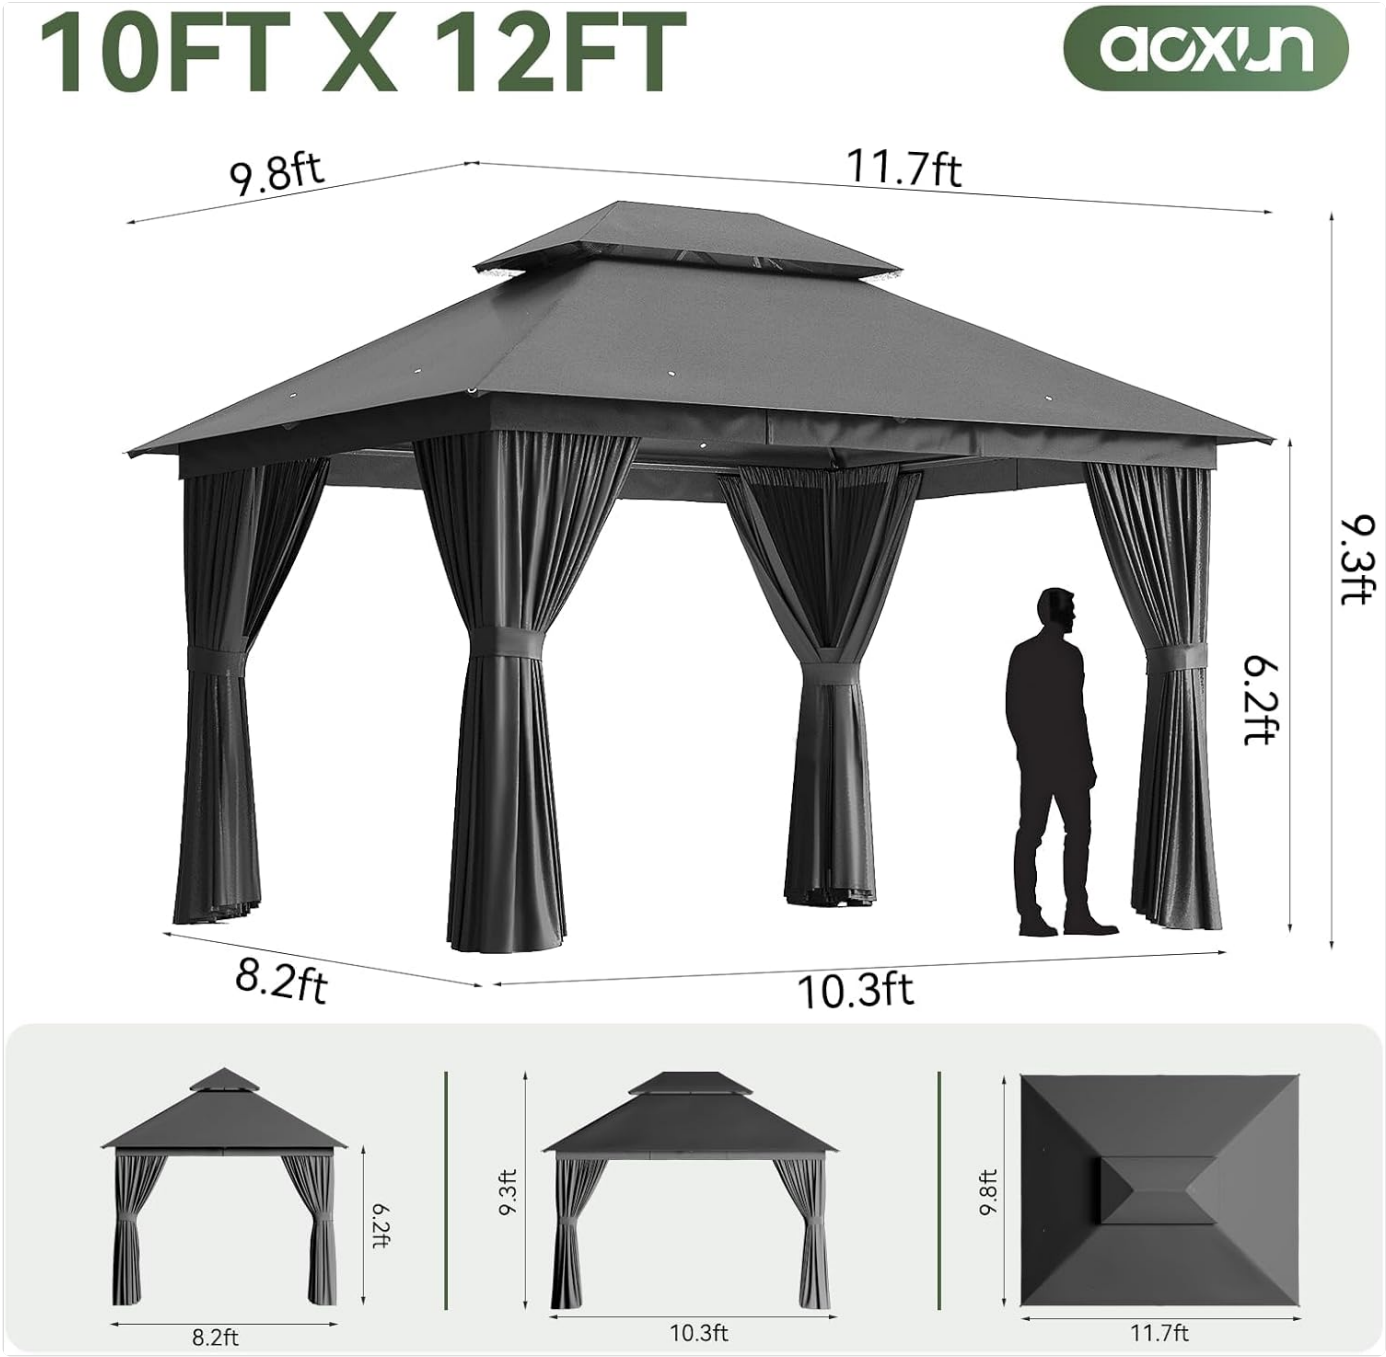

Figure 2: Gazebo Dimensions (10ft x 12ft).

4.3 Canopy and Fabric Installation

1. Carefully spread the main canopy fabric over the assembled roof frame. Secure it according to the manual's instructions, ensuring a snug fit.
2. Install the top canopy fabric, aligning it with the main canopy for proper ventilation.
3. Attach the mosquito netting and privacy curtains to the double track system. Ensure they slide smoothly.

Figure 3: Product Details - Water Leakage Holes, Velcro Straps, and Stable Frame Fixation.

4.4 Anchoring the Gazebo

Secure the gazebo to the ground using the provided anchoring hardware. For concrete surfaces, use expansion bolts. For soft ground, use anchoring stakes and windproof ropes.

Figure 4: Wind Resistance for Different Installations.

4.5 LED Light Installation

Hang the 50FT LED string lights using the integrated corner rings and J-shaped hooks on the gazebo frame. Ensure the power source is accessible and protected from moisture.

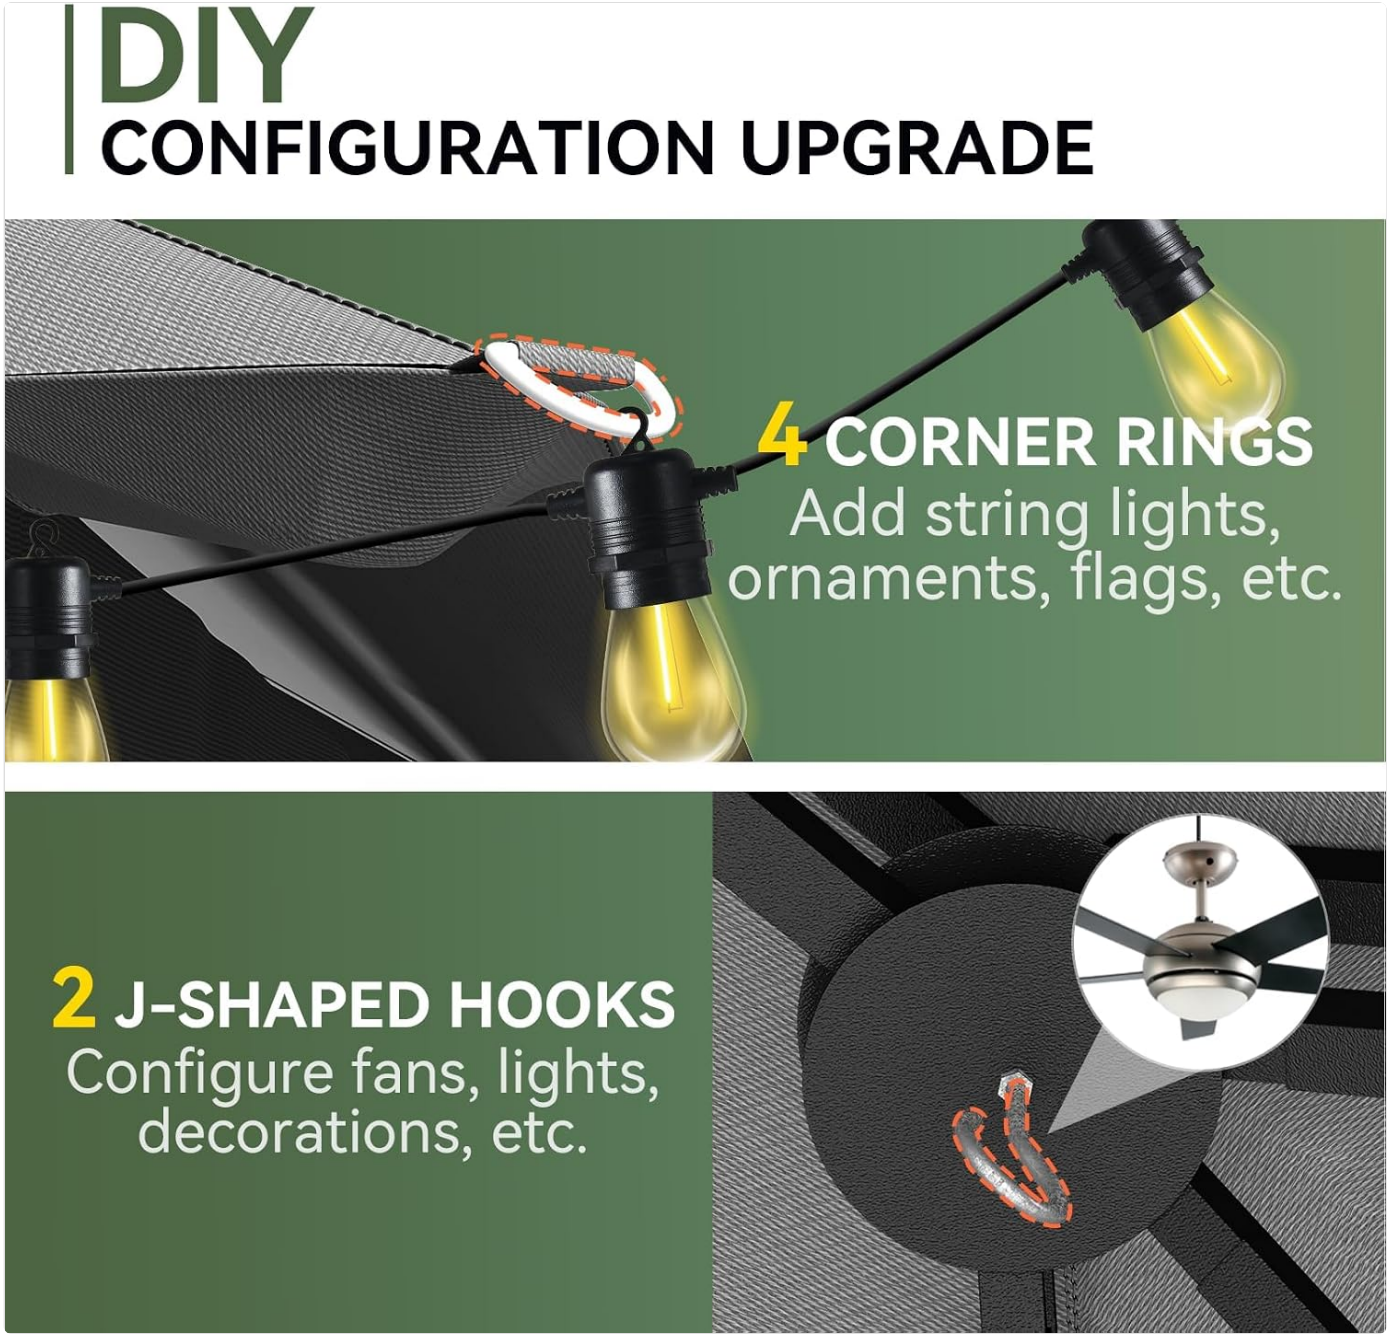

Figure 5: DIY Configuration Upgrade - Corner Rings and J-shaped Hooks.

5. Operating Instructions

5.1 LED String Lights

The LED string lights offer multiple lighting modes and a timer function. They can be charged via USB or solar power.

- **Lighting Modes:** Dynamic, Short Flash, Quick Flash, Intermittent Quick Flash, Slow Breathing, Fast Breathing, Rhythm, Steady On.
- **Timer Function:** 3, 5, or 8-hour options.
- **Charging Modes:** USB (approx. 4 hours for full charge), Solar (approx. 8 hours for full charge).
- **Battery Life:** Up to 16 hours on a full charge.

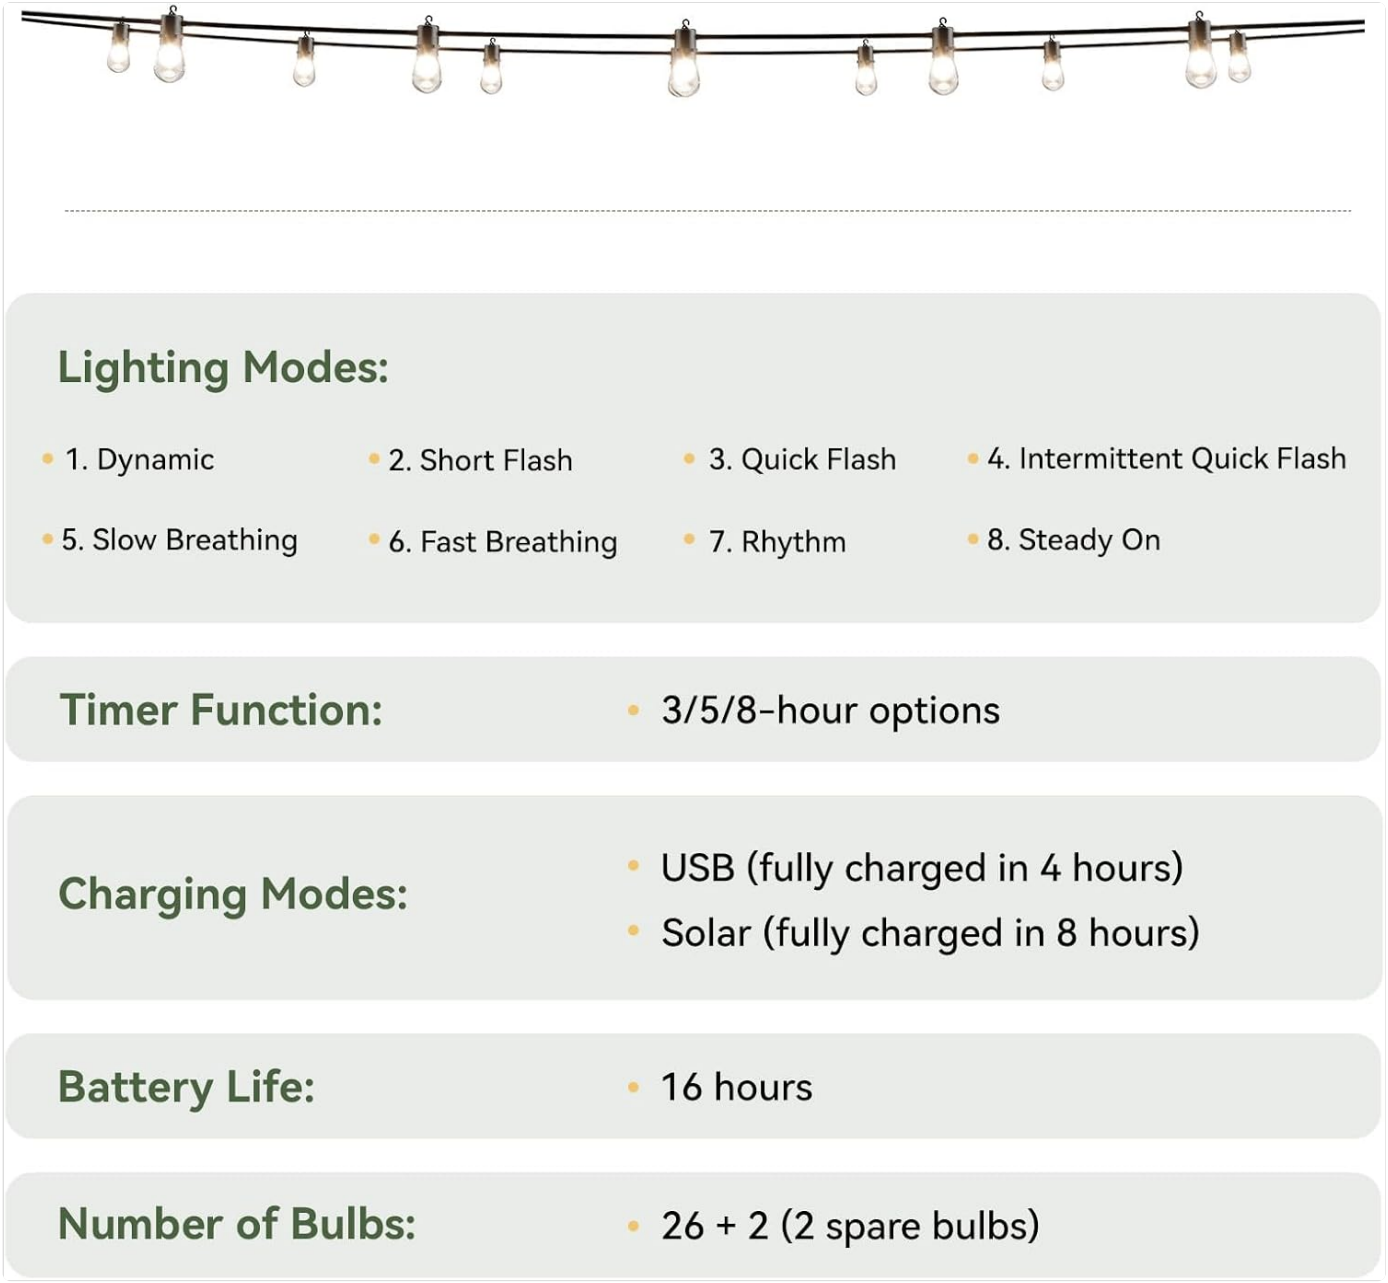

Figure 6: LED String Light Operating Details.

5.2 Mosquito Netting and Privacy Curtains

The gazebo features a double track design, allowing independent adjustment of the mosquito netting and privacy curtains. Slide them open or closed as needed for ventilation, insect protection, or privacy.

Figure 7: Mosquito-Proof Outdoor Space.

6. Maintenance

Regular maintenance will extend the life of your gazebo.

- **Cleaning:** Clean the canopy fabric with mild soap and water. Rinse thoroughly and allow to air dry completely before storage. Do not use harsh chemicals.
- **Frame Inspection:** Periodically check all frame connections for tightness. Tighten any loose bolts. Inspect the powder coating for chips or rust and touch up as needed.
- **Fabric Care:** Ensure the canopy is taut to prevent water pooling, especially after rain. The roof features leakage holes for drainage.
- **Winter Storage:** In areas with heavy snow or extreme weather, it is recommended to remove the canopy and store it indoors to prevent damage.

7. Troubleshooting

Problem	Possible Cause	Solution
Water pooling on roof	Canopy not taut; excessive rainfall	Ensure canopy is stretched tightly during installation. The roof has drainage holes to mitigate pooling.
Gazebo unstable in wind	Improper anchoring; extreme wind conditions	Verify anchoring stakes or expansion bolts are correctly installed. Use windproof ropes. Disassemble in extreme weather.
LED lights not working	Battery low; faulty connection; solar panel obstructed	Charge lights via USB or ensure solar panel receives direct sunlight. Check all connections.
Mosquito netting/curtains snag	Debris in track; misaligned panels	Clean tracks. Realign panels to ensure smooth movement.

8. Specifications

Feature	Detail
Brand	Aoxun
Model Number	G30067BE1210+G55008BE50
Product Dimensions (L x W x H)	145"L x 120"W x 111"H (approx. 12.08ft x 10ft x 9.25ft)
Frame Material	Aluminum, Powder-coated Steel
Canopy Material	Waterproof Polyester Fabric (UV-resistant UPF 50+)
Color	Gray
Item Weight	50 Pounds
Wind Resistance	Up to Level 7 (31-38 mph)
Load Capacity	Up to 300 LBS (structural stability)
Water Resistance Level	Waterproof (Water Pressure Resistance 1500mL)
Assembly Required	Yes
LED Lights	50FT string lights, 15 sockets, 16+1 shatterproof LEDs, USB/Solar charging, 8 modes, timer

Figure 8: Structural Stability and Load Capacity.

9. Warranty and Support

This product is covered by a standard return policy. For specific warranty details or to inquire about optional protection plans, please refer to your purchase documentation or contact the seller directly.

- **Return Policy:** Typically 30 days from purchase.
- **Protection Plans:** Optional 3-Year Protection Plan and Complete Protect monthly plan may be available for purchase separately.
- **Customer Support:** For assistance with assembly, missing parts, or product issues, please contact Aoxun Direct through your purchase platform or visit the Aoxun Store.

© 2026 Aoxun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GR636JXM

More documents and user manuals: **https://manuals.plus/**