Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Coinmit B0GR8F7Q3M

Coinmit 16-inch Plug-in LED Picture Light User Manual

Model: B0GR8F7Q3M

1. Introduction

Thank you for purchasing the Coinmit 16-inch Plug-in LED Picture Light. This light is designed to illuminate your artwork, photographs, or displays with adjustable brightness and color temperature. It features a rotatable and extendable head for precise lighting control and can be operated via a remote control or an in-line cord switch.

Please read this manual carefully before installation and use to ensure proper operation and safety.

2. Package Contents

- 1 x Coinmit 16-inch LED Picture Light (with integrated plug-in cord)
- 1 x Remote Control (AAA batteries not included)
- 1 x Mounting Hardware Kit (screws, wall anchors)
- 1 x User Manual

3. Safety Instructions

- Ensure the power is off before installation or maintenance.
- This product is for indoor use only. Do not expose to water or high humidity.
- Do not attempt to disassemble or modify the light fixture.
- Keep the light away from flammable materials.
- Use only the provided mounting hardware or suitable alternatives for secure installation.
- Do not look directly into the LED light source for extended periods.
- Dispose of batteries according to local regulations.

4. Setup and Installation

Follow these steps to install your picture light securely:

1. **Prepare the Mounting Location:** Choose a suitable location above your artwork. Ensure there is a power outlet within reach of the 6.6-foot power cord.
2. **Mark Drilling Points:** Hold the mounting bracket against the wall at the desired height. Use a pencil to mark the positions for the two mounting holes.

3. **Drill Holes:** Drill two holes at the marked positions. If installing into drywall, insert the plastic wall anchors.
4. **Secure Mounting Bracket:** Align the mounting bracket with the drilled holes and secure it to the wall using the provided screws.
5. **Attach Light Fixture:** Carefully attach the light fixture to the secured mounting bracket. Ensure it is firmly in place.
6. **Plug In:** Plug the power cord into a standard electrical outlet.
7. **Adjust Light Angle:** Adjust the light head to illuminate your artwork as desired. The fixture can rotate 90° up/down, 360° left/right, and extend from 5.5 to 8.7 inches from the wall.

Figure 4.1: Installation Diagram. This image illustrates the components involved in mounting the picture light, including the light bar, adjustable arm, wall bracket, power cord with in-line switch, and plug. It shows how the bracket attaches to the wall and the light fixture connects to the bracket.

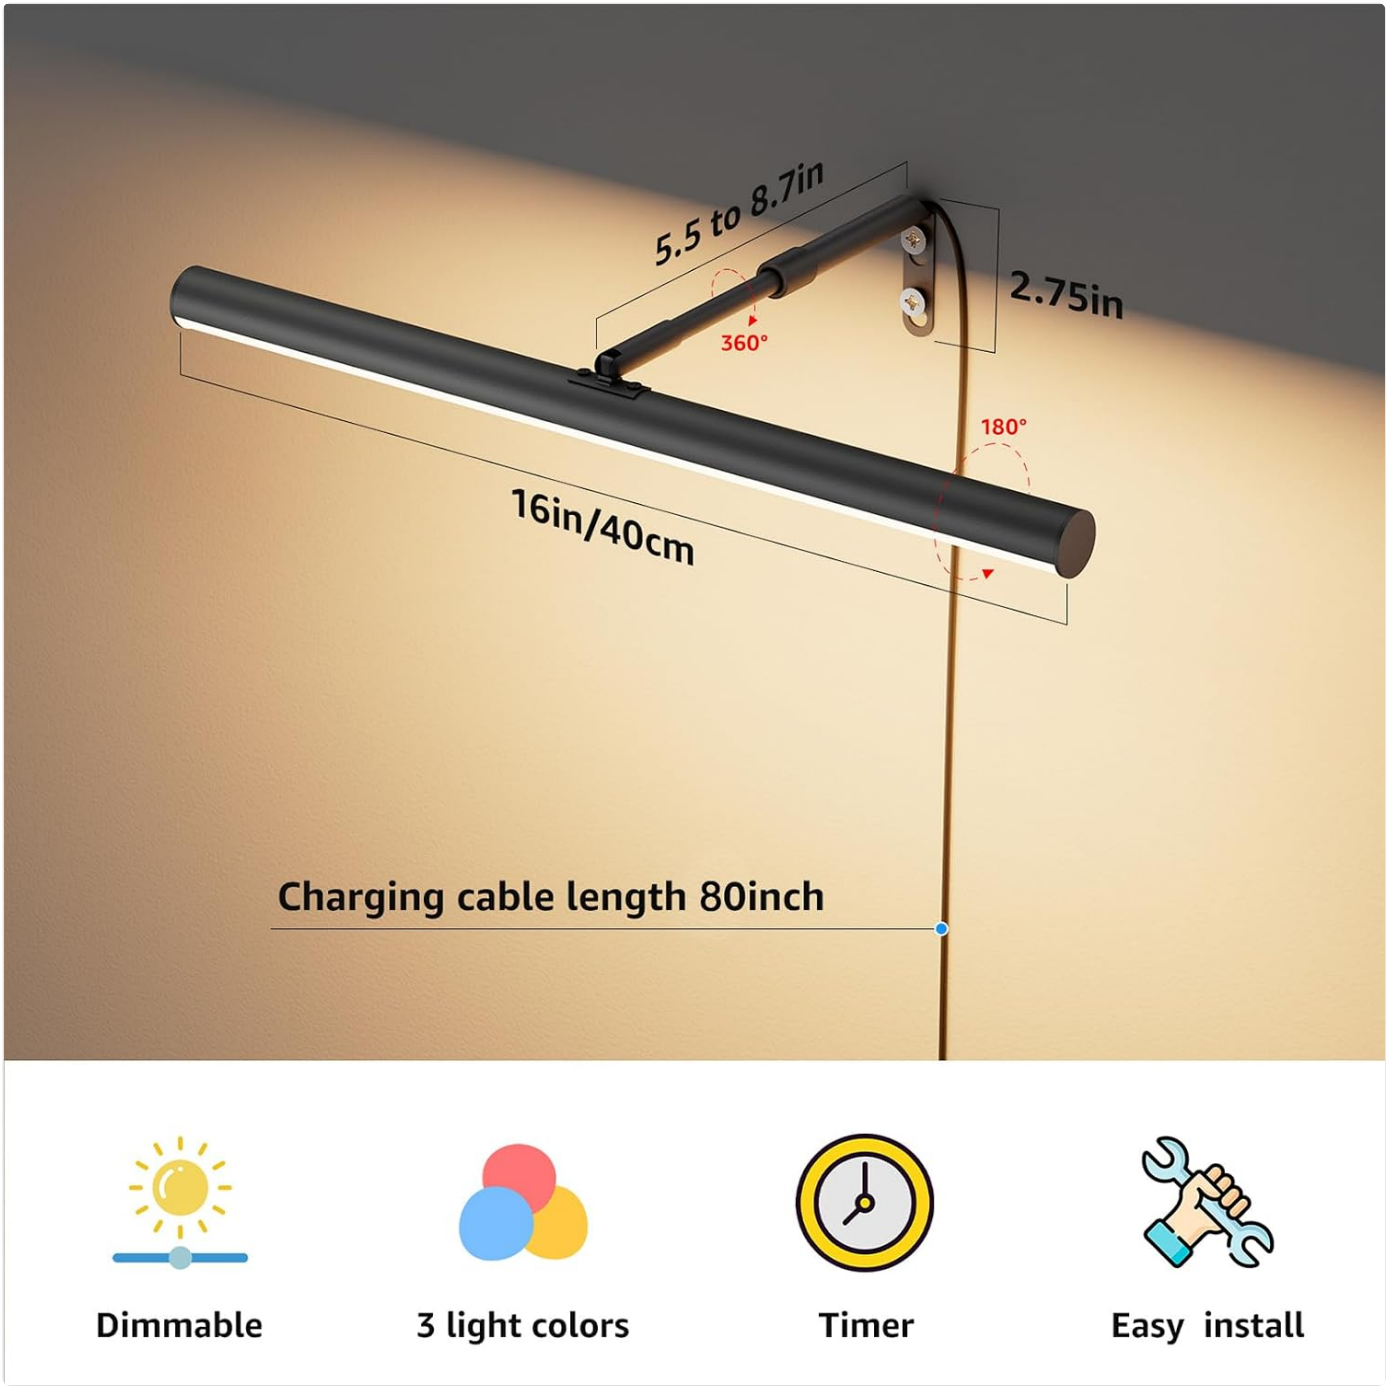


Figure 4.2: Product Dimensions and Adjustability. This image displays the overall length of the light (16 inches/40cm), the extension range from the wall (5.5 to 8.7 inches), and the rotation angles (360° horizontal, 180° vertical). The charging cable length is also indicated as 80 inches.

5. Operating Instructions

Your Coinmit picture light can be controlled using the included remote control or the in-line cord switch.

5.1 Remote Control Operation

Before using the remote control, insert 2 AAA batteries (not included) into the battery compartment.

- **ON/OFF:** Press the **ON** button to turn the light on, and the**OFF** button to turn it off.
- **Brightness Adjustment:**
  - Press **30%**, **70%**, or **100%** for preset brightness levels.
  - Press **+"** or **-"** for incremental brightness adjustments.
  - Press and hold **+"** or **-"** for stepless brightness control.
- **Color Temperature Adjustment:**
  - Press **W** for Warm Light.
  - Press **C** for Cool Light.
  - Press **CW** for Cool Warm Light (Neutral White).
- **Timer Function:** Press **1H**, **2H**, or **4H** to set the light to automatically turn off after 1, 2, or 4 hours, respectively.
- **Setup Button:** Refer to the remote control's specific instructions for pairing or advanced settings if applicable (usually not required for basic operation).

5.2 Cord Switch Operation

The in-line cord switch provides basic control:

- **Power Button:** Press to turn the light ON/OFF.
- **Brightness/Color Temperature Cycle:** Repeatedly press the power button to cycle through different brightness levels and color temperatures.



Figure 5.1: 2-Way Control Options. This image displays the remote control with its various buttons for power, brightness adjustment (percentage and stepless), color temperature selection (Warm, Cool, Cool Warm), and timer settings. It also shows the simple in-line button control on the power cord.

5.3 Adjusting the Light Head

The light head offers flexible positioning to perfectly illuminate your display:

- **Vertical Rotation:** The light bar can be rotated 90° up and down to direct light precisely.
- **Horizontal Rotation:** The arm connecting the light bar to the base can rotate 360° left and right.
- **Extension:** The fixture's front-to-back length can be extended from 5.5 inches to 8.7 inches from the wall, allowing for optimal distance from your artwork.

6. Maintenance

- **Cleaning:** Ensure the light is unplugged before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- **Bulb Replacement:** The LED light source is integrated and not user-replaceable.
- **Remote Control Batteries:** Replace AAA batteries in the remote control when its range decreases or it stops responding.

7. Troubleshooting

Problem	Possible Cause	Solution
Light does not turn on.	• Not plugged in. • Power outlet not working. • Cord switch is off.	• Ensure the light is securely plugged into a working outlet. • Test the outlet with another device. • Press the cord switch or remote ON button.
Remote control not working.	• Batteries are dead or incorrectly inserted. • Remote is too far from the light. • Obstruction between remote and light.	• Replace batteries with new AAA batteries, ensuring correct polarity. • Move closer to the light. • Remove any obstructions.
Light flickers or dims unexpectedly.	• Loose connection. • Power supply issue.	• Check all connections. Unplug and re-plug the light. • Try plugging into a different outlet. • If the problem persists, contact customer service.

8. Specifications

Model	B0GR8F7Q3M
Power	5 Watts
Length	16 inches (40 cm)
Color Temperature	3 adjustable settings (Warm, Cool, Neutral White)
Dimmable	Yes (stepless and preset levels)
Power Cord Length	6.6 feet (approx. 80 inches)
Material	Metal
Color	Black
Control Method	Remote Control, In-line Cord Switch
Adjustability	90° vertical rotation, 360° horizontal rotation, 5.5-8.7 inch extension

9. Warranty and Support

This Coinmit picture light is backed by a**3-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use.

If you have any questions, concerns, or require assistance with your product, please do not hesitate to contact our customer service team. Please refer to your purchase documentation for specific contact details or visit the Coinmit brand store on Amazon: Coinmit Store.

Please have your model number (B0GR8F7Q3M) and purchase date ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GR8F7Q3M

More documents and user manuals: **https://manuals.plus/**