Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

AirMyFun 93242T

AirMyFun Inflatable Water Slide (Model 93242T) User Manual

Comprehensive instructions for setup, operation, and maintenance.

1. Introduction

Thank you for choosing the AirMyFun Inflatable Water Slide. This 10-in-1 multifunctional water park is designed for children's outdoor play, featuring double slides, a climbing wall, basketball hoops, water cannons, and a splash pool. This manual provides essential information for safe and proper assembly, operation, and maintenance of your inflatable water park. Please read all instructions carefully before use and retain this manual for future reference.



Image 1.1: The AirMyFun 10-in-1 Inflatable Water Park, showcasing its various features in a backyard setting.

2. Important Safety Information

WARNING: Failure to follow these instructions may result in serious injury or death.

- Adult supervision is required at all times. Never leave children unattended.
- Ensure the inflatable unit is securely anchored to the ground using all provided stakes.
- Place the unit on a soft, level surface, free from sharp objects, rocks, or debris.
- Keep the blower unit away from water and ensure it is placed on a dry surface.
- Do not use in high winds or severe weather conditions.
- Maximum weight capacity: 693 lbs. Maximum number of players: 7.
- Ensure children are appropriately dressed for water play and remove shoes, glasses, and sharp objects before entering.
- Do not allow children to climb on walls or netting not designed for climbing.

- Always slide feet first.
- Regularly inspect the unit for damage, tears, or punctures. Do not use if damaged.
- Keep pets away from the inflatable unit.



Image 2.1: Illustration highlighting the durable Oxford fabric, reinforced stitching, raised handrails, armrests, and mesh guardrail for safety.

3. Package Contents

Verify that all items listed below are included in your package:

- 1 x Inflatable Water Park Unit
- 1 x 750W Air Blower
- 4 x Blower Stakes
- 11 x Water Park Stakes
- 1 x Hammer
- 1 x Storage Bag
- 2 x Pipe Clamps
- 1 x Water Hose
- 4 x Repair Kits (with 12 repair patches)
- 1 x User Manual
- 1 x Reminder Card
- 1 x Coil
- 2 x Water Blasters
- 2 x Basketballs
- 1 x Air Pump
- 4 x Ring Toss Rings



Image 3.1: Visual representation of all items included in the AirMyFun Inflatable Water Park package.

4. Setup Instructions

1. **Choose a Location:** Select a flat, level, and clear area in your backyard, free from sharp objects, rocks, or debris. Ensure there is sufficient clearance around the inflatable unit.
2. **Unfold the Water Park:** Lay the inflatable water park flat on the chosen surface.



Image 4.1: Step-by-step visual guide for setting up the inflatable water park, including unfolding, connecting the blower, securing with stakes, and connecting water pipes.

3. **Connect the Blower:** Attach the powerful 750W air blower to the inflation tube of the water park. Ensure the connection is secure to prevent air leakage.
4. **Inflate the Unit:** Plug in the blower and turn it on. The water park will inflate in approximately 1-2 minutes. Ensure the blower remains on continuously during use.
5. **Secure with Stakes:** Use the provided water park stakes to firmly anchor the inflatable unit to the ground at all designated points. Use the blower stakes to secure the blower.
6. **Connect Water Hose (for wet use):** If using as a water park, connect a standard garden hose to the designated water inlet on the inflatable unit. Use the provided pipe clamps to secure the connection.
7. **Prepare Accessories:** Inflate the basketballs using the air pump. Place the ring toss rings and water blasters in their respective areas.



Image 4.2: A child safely climbing the inflatable wall, demonstrating the secure design.

5. Operating Instructions

5.1 Wet Use (Water Park)

- Ensure the water hose is securely connected and turn on the water supply.
- Allow the splash pool to fill to a safe depth.
- The water bucket will automatically fill and tip, providing a fun splash.
- Water cannons can be operated by children for interactive play.
- Always supervise children to ensure safe sliding and play in the water.

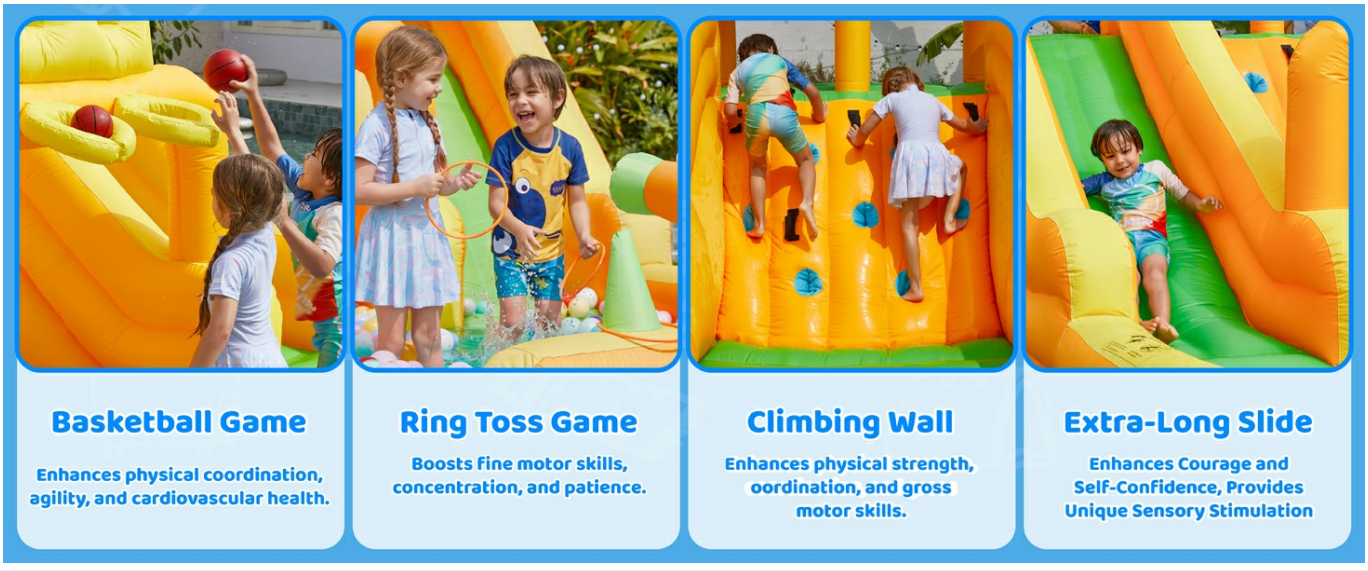


Image 5.1: Diagram illustrating the versatility of the water park for both wet and dry use.

5.2 Dry Use (Bounce House)

- Detach the water hose from the unit.

- Ensure the splash pool area is dry before allowing children to play.
- The unit functions as a bounce house with climbing, sliding, and basketball activities.

5.3 Features Overview

- **Double Slides:** Children can slide down the two extra-long slides.
- **Climbing Wall:** Provides a fun challenge for children to reach the top.
- **Basketball Hoops:** Two hoops for basketball play with the included balls.
- **Water Cannons:** Dual water cannons for interactive water play.
- **Ring Toss:** Engage in ring toss games with the provided rings.
- **Splash Pool:** A large pool area for splashing and cooling off.



Image 5.2: Detailed diagram highlighting all 10 features of the AirMyFun Water Park, including water bucket, sprinkles, climbing wall, extra-long slides, basketball hoops, large deep pool, dual water cannons, and ring toss.

Your browser does not support the video tag.

Video 5.1: Official product video demonstrating children enjoying the various features of the AirMyFun 10-in-1 Inflatable Water Slide, including sliding, climbing, and water play.

6. Maintenance

6.1 Cleaning

- After each use, especially with water, drain all water from the splash pool.
- Wipe down all surfaces with a damp cloth and mild soap solution.
- Rinse thoroughly with clean water to remove any soap residue.
- Ensure the unit is completely dry before storage to prevent mold and mildew.

6.2 Drying and Storage

- To dry, leave the blower running for an additional 30-60 minutes after draining water, or until the unit is completely dry.
- Once dry, turn off the blower and allow the unit to deflate completely.
- Fold the unit neatly and secure it with the provided straps.
- Store the inflatable water park and all accessories in the storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.

6.3 Repairs

- Use the provided repair kits for small punctures or tears.
- Clean the damaged area, apply adhesive (not included, typically), and firmly press a patch over the hole.
- Allow sufficient drying time before re-inflating.
- For large damages, contact customer support.

7. Troubleshooting

Problem	Possible Cause	Solution
Unit does not inflate fully.	Blower not connected securely, air leaks, or blower not powered.	Ensure blower is securely attached and powered on. Check for open zippers or large tears and seal them.
Water leaks from hose connection.	Hose not tightened, or pipe clamps not used.	Tighten hose connection. Use provided pipe clamps to secure the hose.
Unit deflates slowly during use.	Small punctures or blower not running continuously.	Ensure blower is continuously powered. Inspect for small holes and repair with patches.

8. Specifications

Feature	Detail
Model Number	93242T
Dimensions (L x W x H)	208.6" x 137" x 118.1"
Maximum Weight Recommendation	693 Pounds
Maximum Number of Players	7
Blower Power	750W
Material	Durable 840D+420D Oxford Fabric
UPC	627179761053



Image 8.1: Diagram detailing the dimensions of the AirMyFun Inflatable Water Park and recommended age/weight limits.

9. Warranty and Support

For warranty information, please refer to the documentation included with your purchase or contact AirMyFun customer support directly. Keep your purchase receipt as proof of purchase.

Customer Support: For assistance with product setup, operation, or troubleshooting, please visit the official AirMyFun website or contact their customer service department. Contact details are typically found on the product packaging or the reminder card.

© 2024 AirMyFun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GRH1HZKP

More documents and user manuals: **https://manuals.plus/**