ORDA Keyboard Case for Samsung Galaxy Tab S10+/S9+/S9 FE+/S8+/S7+/S7 FE 12.4-inch

ORDA Keyboard Case User Manual

For Samsung Galaxy Tab S10+/S9+/S9 FE+/S8+/S7+/S7 FE 12.4-inch

Introduction

Thank you for choosing the ORDA Keyboard Case. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new keyboard case, designed to enhance your Samsung Galaxy Tab experience. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

Compatibility

This keyboard case is specifically designed for the following Samsung Galaxy Tab 12.4-inch models:

- Samsung Galaxy Tab S10+ Plus 12.4 inch (2024)
- Samsung Galaxy Tab S9+ Plus/S9 FE+ Plus 12.4 inch (2023)
- Samsung Galaxy Tab S8+ Plus 12.4 inch (2022)
- Samsung Galaxy Tab S7 FE (5G) 12.4 inch (2021)
- Samsung Galaxy Tab S7+ Plus 12.4 inch (2020)

Note: Tablet and S Pen are not included with the keyboard case.

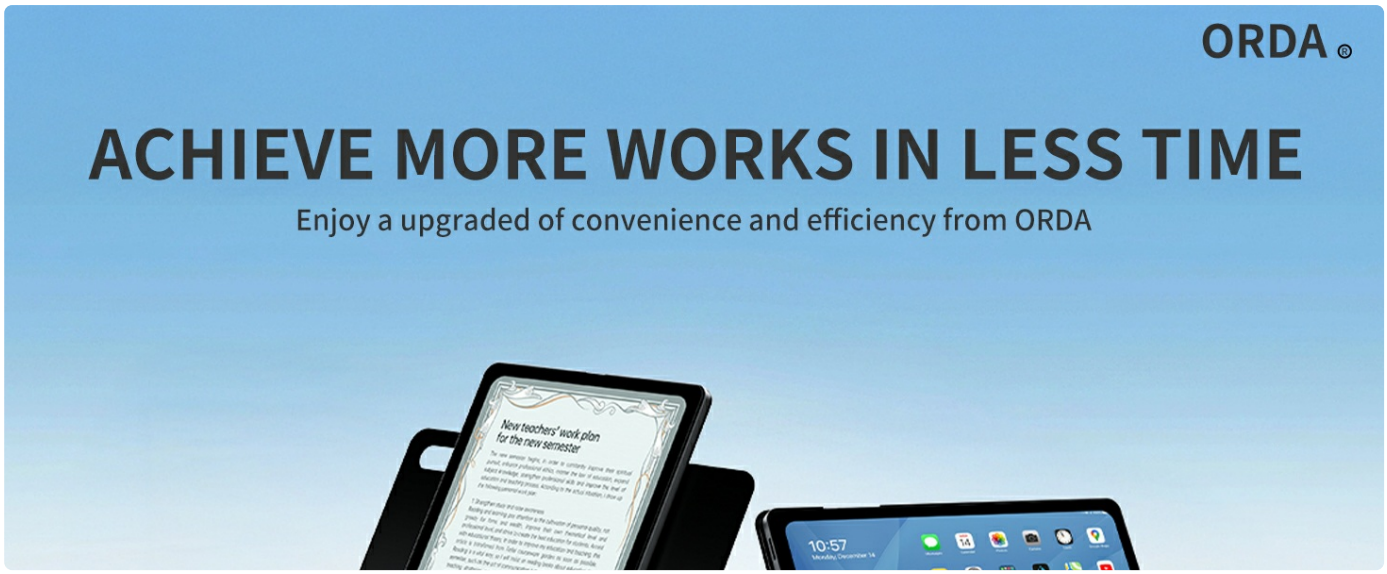


Image: Compatibility chart for ORDA Keyboard Case, highlighting supported 12.4-inch Samsung Galaxy Tab models and excluding smaller models.

Package Contents

Please verify that all items are present in your package:

- 1 x 12.4" Keyboard Case
- 1 x Detachable Back Case
- 1 x USB Cable (Type-C)
- 1 x User Manual
- 1 x Quick Guide



Image: Contents of the ORDA Keyboard Case package, including the keyboard, detachable case, USB cable, and documentation.

Setup Instructions

1. Attaching Your Tablet

1. Ensure your Samsung Galaxy Tab is clean and free of debris.
2. Align the detachable back case with your tablet and gently press to secure it. The case provides full-body protection.

3. Place the tablet (with the back case attached) onto the magnetic stand of the keyboard. The strong magnetic attachment will secure the tablet in place.



Image: Demonstrates how to magnetically attach the tablet to the keyboard case for secure placement.

2. Bluetooth Pairing

1. Turn on the keyboard by sliding the power switch (usually located on the side or front of the keyboard). The indicator light will flash.
2. On your Samsung Galaxy Tab, go to **Settings** > **Connected devices** > **Bluetooth**.
3. Enable Bluetooth and search for available devices.
4. Select **"ORDA Keyboard"** (or similar name) from the list of devices.
5. Follow any on-screen prompts to complete the pairing process. The indicator light on the keyboard will stop flashing once successfully paired.

3. Charging the Keyboard

To charge the keyboard, connect the provided USB-C cable to the charging port on the keyboard and to a USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate during charging and turn off when fully charged.



Image: The keyboard's USB-C charging port and information on battery life.

Operating Instructions

1. Basic Keyboard Use

The keyboard features a standard QWERTY layout with scissor-switch keys for comfortable and quiet typing. Simply type as you would on a laptop.

2. Multi-Touch Trackpad

The integrated multi-touch trackpad supports various gestures for enhanced navigation and control:

- **Single Tap:** Left-click.

- **Two-Finger Tap:** Right-click.
- **Two-Finger Scroll:** Scroll up/down or left/right.
- **Pinch to Zoom:** Use two fingers to zoom in or out.
- **Three-Finger Swipe Up:** Switch between open applications.
- **Three-Finger Swipe Down:** Go to the home screen.



Image: Detailed view of the precision multi-touch trackpad and supported gestures.

3. AI Key Access

The dedicated AI key provides instant access to AI assistance (e.g., Bixby or Gemini). Tap the key and enter your queries for quick responses and task management.

4. Multiple View Modes

The magnetic stand allows for flexible viewing angles and modes:

- **Raised Screen View:** Position the tablet for an ergonomic posture, ideal for extended typing or viewing.

- **Portrait Mode:** Detach the tablet and reattach it in portrait orientation for video calls, reading, or specific applications.



Image: The keyboard case supporting the tablet in a raised screen view for ergonomic use.

5. Samsung DeX & Tablet Mode

This keyboard case is compatible with Samsung DeX mode, transforming your tablet into a laptop-like experience for enhanced productivity. Easily switch between DeX mode and standard tablet mode as needed. A dedicated row of shortcut keys allows for quick adjustments to backlight brightness, volume control, and multimedia functions.

6. Backlight Control

The keyboard features 7-color backlighting with 3 adjustable brightness levels. Use the dedicated backlight shortcut keys to cycle through colors and brightness settings.

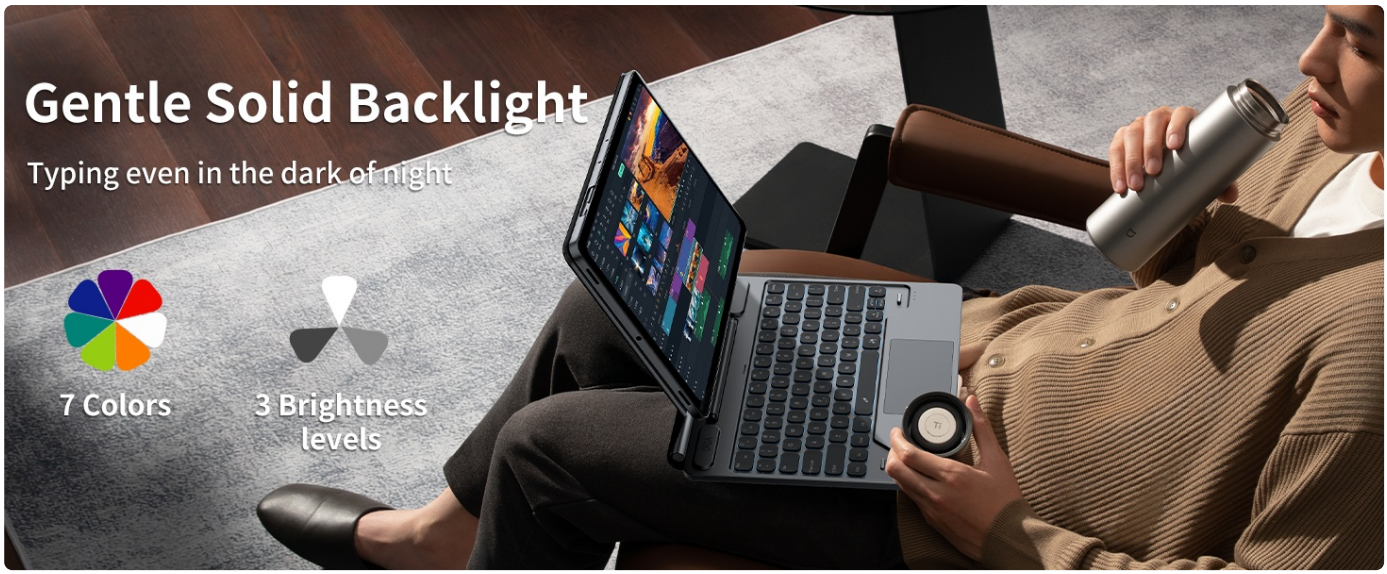


Image: The keyboard's gentle solid backlight feature with 7 colors and 3 brightness levels.

7. S Pen Holders

The case includes two convenient S Pen storage solutions:

- **Built-in Magnetic Holder:** Located within the keyboard for easy access and secure storage.
- **Cut-out Slot:** On the back cover, designed for charging and safe-keeping of your S Pen.



Image: The built-in magnetic holder for the S Pen on the keyboard case.

Maintenance

1. Cleaning

To clean the keyboard case, gently wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the surface. Ensure the keyboard is powered off before cleaning.

2. Battery Care

To prolong battery life, avoid fully discharging the keyboard frequently. Charge the keyboard regularly, especially if it will not be used for an extended period. Store the keyboard in a cool, dry place.

Troubleshooting

Problem	Solution

Problem	Solution
Keyboard not pairing via Bluetooth.	• Ensure the keyboard is powered on and fully charged. • Make sure Bluetooth is enabled on your tablet. • Forget the device on your tablet's Bluetooth settings and try pairing again. • Restart both the keyboard and your tablet.
Keys are not responding.	• Check if the keyboard is powered on and successfully paired. • Ensure the keyboard battery is not depleted. • Try reconnecting the Bluetooth connection.
Trackpad not working.	• Ensure the trackpad is enabled (if there's a dedicated toggle). • Check Bluetooth connection. • Clean the trackpad surface.
Backlight not working or changing.	• Ensure the keyboard is powered on. • Use the dedicated backlight shortcut keys to adjust settings. • Check battery level.

Specifications

Feature	Detail
Brand	ORDA
Compatible Devices	Samsung Galaxy Tab S10+/S9+/S9 FE+/S8+/S7+/S7 FE 12.4-inch
Connectivity Technology	Bluetooth (USB-C for charging)
Keyboard Description	Integrated, Scissor-switch keys
Special Feature	Detachable Case, Multi-Touch Trackpad, Backlit Keyboard, AI Key, Magnetic Stand, Dual S Pen Holders
Material	Plastic
Power Source	USB power (Rechargeable Battery)
Keyboard Layout	QWERTY
Working Time (with backlight)	Approx. 10 hours
Working Time (without backlight)	Approx. 250 hours

Feature	Detail
Charging Time	Approx. 3.5 hours
Standby Time	Approx. 800 hours

Product Demonstration Video



Video: A demonstration of the ORDA Keyboard Case, showing how to attach the tablet, use the keyboard and trackpad, and switch between different viewing modes. This video highlights the product's functionality and ease of use.

Warranty and Support

Warranty Information

ORDA products are manufactured with high-quality standards. For specific warranty details, please refer to the warranty card included in your product packaging or visit the official ORDA website. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support

If you encounter any issues or have questions regarding your ORDA Keyboard Case, please contact our customer support team. Contact information can typically be found on our official website or in the quick guide provided with your product.
For online support, visit: ORDA Store on Amazon

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question