Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

BassBloom Roar 3

BassBloom Roar 3 Portable Bluetooth Speaker Instruction Manual

Introduction

Thank you for choosing the BassBloom Roar 3 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read these instructions carefully before use.



Image: Two individuals enjoying music with their BassBloom Roar 3 speakers on a beach.

What's in the Box

Upon unboxing your BassBloom Roar 3 speaker, please verify that all the following items are included:

- BassBloom Roar 3 Portable Bluetooth Speaker
- 50cm Charging Cable
- 50cm AUX Line
- User Manual



Image: The BassBloom Roar 3 speaker and its accessories laid out, including the charging cable, AUX cable, and user manual.

Unboxing Video

Your browser does not support the video tag.

Video: An unboxing demonstration of the BassBloom Roar 3 Speaker, showing the contents and initial impressions.

Product Overview

Familiarize yourself with the various buttons and ports on your BassBloom Roar 3 speaker for seamless operation.

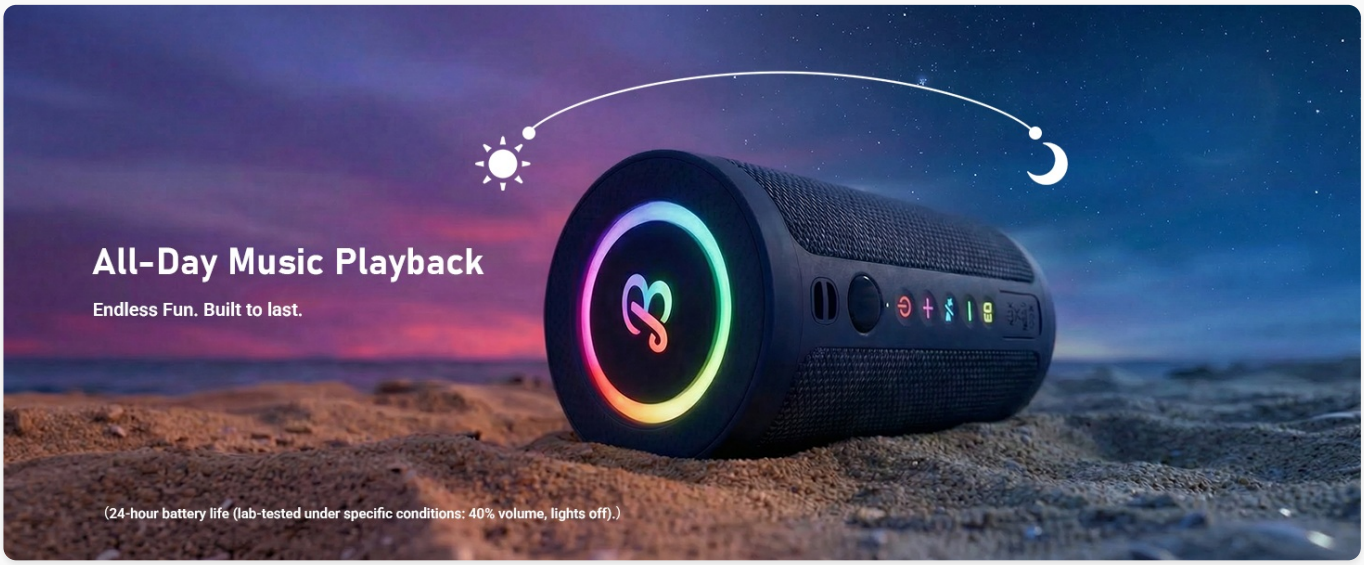


Image: A close-up view of the speaker's control panel, detailing each button's function.

Button Functions:

- **Power Button:** Press and hold for 2 seconds to Power On/Off. Press and hold for 10 seconds to Restart.
- **'+' Button:** Press for 2 seconds for Next Track. Press once for Volume Up.
- **'-' Button:** Press for 2 seconds for Previous Track. Press once for Volume Down.
- **Play/Pause Button:** Press once to Play/Pause, Answer/Hang up calls. Press and hold for 3 seconds to Forcefully Disconnect Bluetooth.
- **Light Show Button:** Press once to cycle through RGB light modes. Press twice to turn off the lights.

- **EQ Button:** Press once to switch between EQ modes. Press twice for TWS disconnection/connection.

Ports:

The speaker features multiple connectivity options:

- **3.5mm AUX Input:** For wired audio connection.
- **TF Card Slot:** For playing music directly from a memory card.
- **USB Port:** For USB playback.
- **USB-C Charging Port:** For charging the speaker.



Image: A detailed view of the speaker's input and charging ports.

Setup

Initial Charging

Before first use, fully charge your BassBloom Roar 3 speaker. Connect the provided USB-C charging cable to the speaker's charging port and a compatible USB power adapter (not included). The LED display will indicate charging status.

Powering On/Off

- To power on, press and hold the Power button for 2 seconds.
- To power off, press and hold the Power button for 2 seconds.

Bluetooth Pairing

1. Ensure the speaker is powered on and the Bluetooth indicator light is flashing, indicating it's in pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "BassBloom Roar 3" from the list of devices.
4. Once connected, the Bluetooth indicator light will become solid.

Operating Instructions

Volume Control

- Press the '+' button once to increase volume.
- Press the '-' button once to decrease volume.

Track Control

- Press and hold the '+' button for 2 seconds to skip to the next track.
- Press and hold the '-' button for 2 seconds to go to the previous track.

Play/Pause & Call Handling

- Press the Play/Pause button once to play or pause music.
- During an incoming call, press the Play/Pause button once to answer.
- During a call, press the Play/Pause button once to hang up.

Mode Switching

Press the Power button twice to cycle through available input modes (Bluetooth, AUX, TF Card, USB).

TWS (True Wireless Stereo) Pairing

You can pair two BassBloom Roar 3 speakers together for a true stereo sound experience.

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker, press the EQ button twice. It will enter TWS pairing mode.
3. The speakers will automatically connect to each other. A confirmation tone will sound once paired.
4. Connect your device to one of the paired speakers via Bluetooth. Both speakers will now play audio in stereo.
5. To disconnect TWS, press the EQ button twice on either speaker.

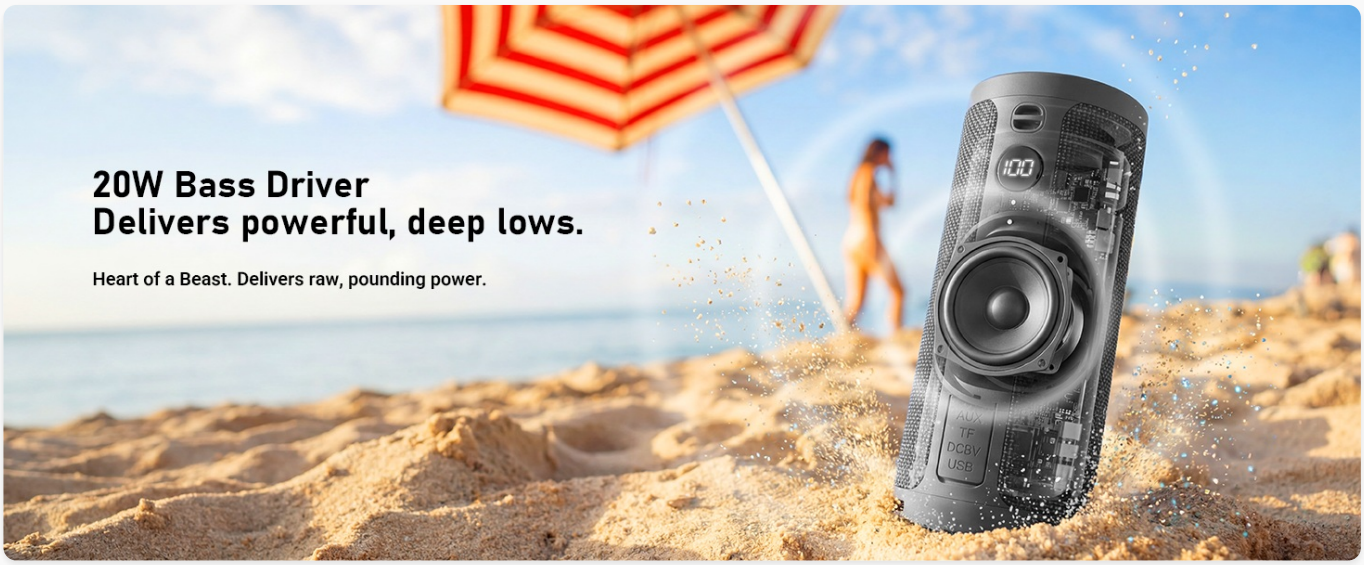


Image: Two BassBloom Roar 3 speakers connected wirelessly for stereo sound.

RGB Lighting Modes

Enhance your listening experience with customizable RGB lighting effects.

- Press the Light Show button once to cycle through different RGB light modes (Cycle, Pulse, Blink, Vary, Circle).
- Press the Light Show button twice to turn off the lights.



Image: The speaker showcasing its dynamic RGB lighting effects.

EQ Modes

The BassBloom Roar 3 offers dual EQ modes to tailor your audio experience.

- Press the EQ button once to switch between modes.
- Choose between crisp, clear vocals or enhanced, punchy bass, depending on your preference and music genre.

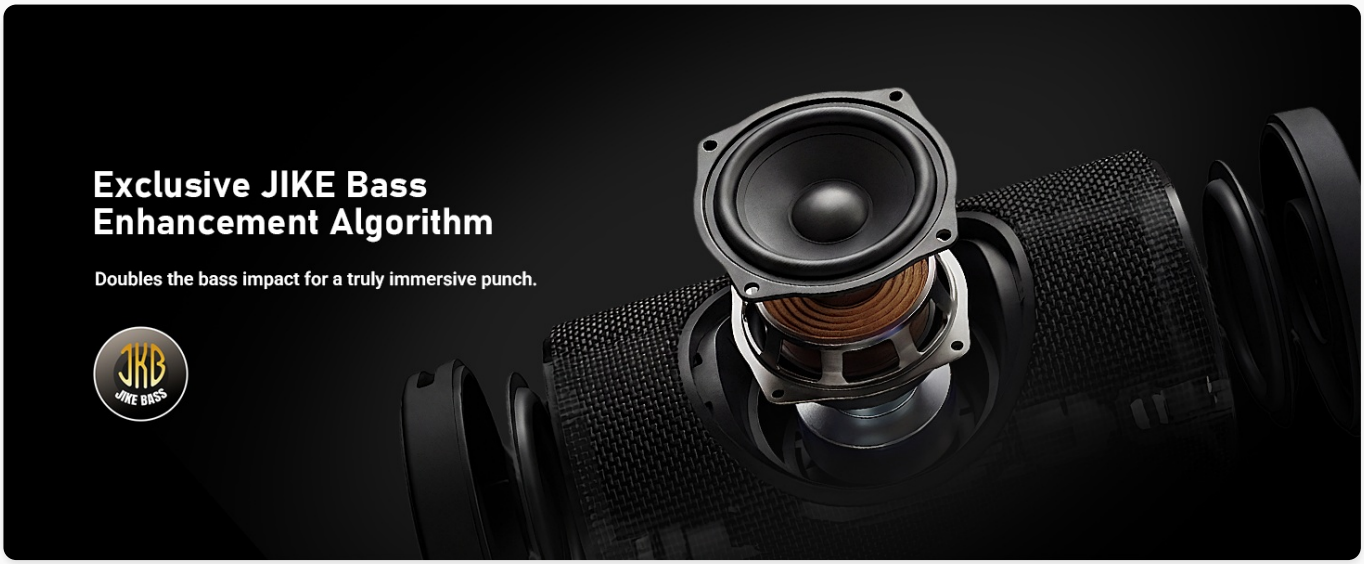


Image: A user interacting with the EQ button on the speaker.

Charging and Battery

The BassBloom Roar 3 is equipped with a 2400mAh battery, providing up to 24 hours of playtime (at 50% volume with lights off).

LED Power Display

The speaker features a clear LED percentage display, allowing you to monitor the battery level accurately.



Image: The LED battery display showing a full charge.

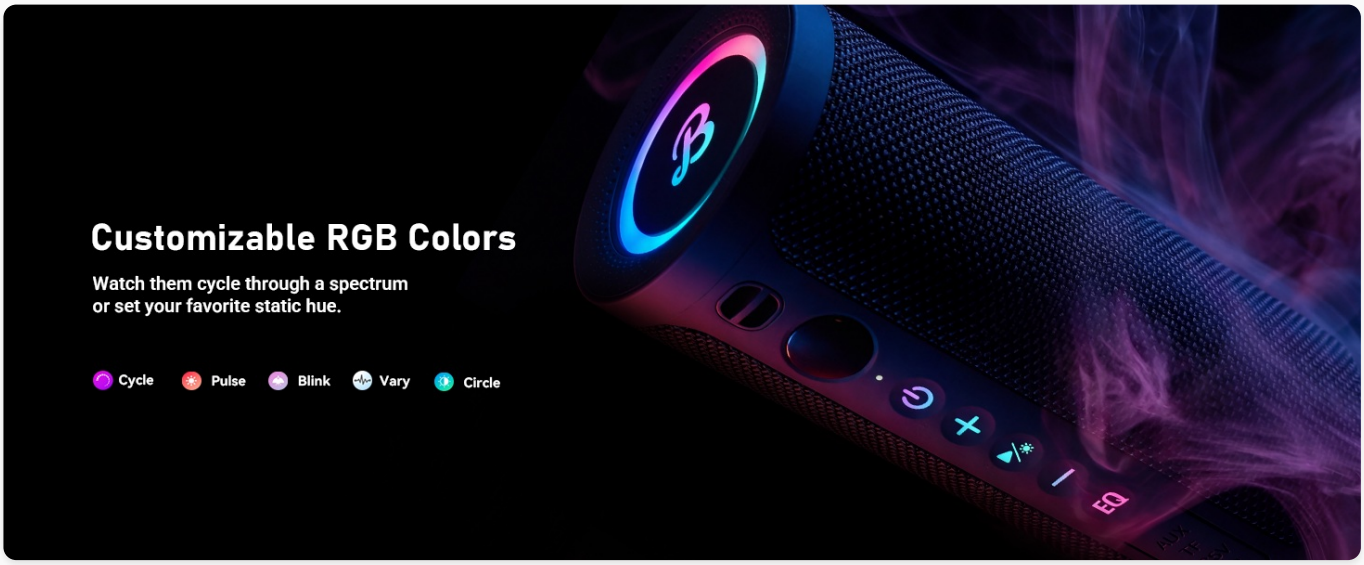


Image: The speaker in an outdoor setting, emphasizing its long battery life.

Waterproof Information

The BassBloom Roar 3 features an IPX6 waterproof rating, making it resistant to powerful water jets from spills, splashes, or rain. It can be rinsed under a faucet.

Note: This speaker is not intended for submersion in water or other liquids.



Image: The speaker enduring water splashes, highlighting its waterproof design.

Maintenance

To ensure the longevity and optimal performance of your BassBloom Roar 3 speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, damp cloth to wipe the speaker's surface. Avoid abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** After exposure to water, ensure the charging port and other openings are dry before charging or connecting cables.
- **Battery Care:** For long-term storage, charge the battery to approximately 50% every few months to prevent deep discharge.

Troubleshooting

If you encounter any issues with your BassBloom Roar 3 speaker, refer to the following common solutions:

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect to a power source and try again. If unresponsive, press and hold the Power button for 10 seconds to restart.
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode (flashing Bluetooth indicator). Turn off and on your device's Bluetooth. Move the speaker closer to your device. Disconnect any previously paired devices.
No sound or low volume.	Check volume levels on both the speaker and your connected device. Ensure the speaker is not muted. Check if the correct input mode is selected.
TWS pairing fails.	Ensure both speakers are fully charged and not connected to any other Bluetooth device. Place them close to each other and try TWS pairing again.
RGB lights not working.	Press the Light Show button to cycle through modes or turn them on.

Specifications

Detailed technical specifications for the BassBloom Roar 3 Portable Bluetooth Speaker:

- **Brand:** BassBloom
- **Model Name:** BassBloom ROAR 3
- **Model Number:** Roar 3
- **Speaker Maximum Output Power:** 30 Watts
- **Connectivity Technology:** Bluetooth
- **Bluetooth Version:** 5.4
- **Bluetooth Range:** 10 Meters
- **Audio Output Mode:** Stereo
- **Speaker Type:** Portable Speaker
- **Additional Features:** Display, LED Light, Portable, Stereo Pairing, Waterproof
- **Control Method:** Touch
- **Speaker Size:** 52 Millimeters
- **Water Resistance Level:** IPX6 Waterproof
- **Battery Average Life:** 24 Hours (at 50% volume, lights off)
- **Battery Capacity:** 2400 Milliamp Hours
- **Signal-to-Noise Ratio:** 80 dB
- **Item Dimensions (D x W x H):** 7"D x 3"W x 3"H
- **Compatible Devices:** Laptop, Smartphone, Tablet
- **Audio Driver Type:** Dynamic Driver
- **Audio Driver Size:** 52 Millimeters

Product Dimensions

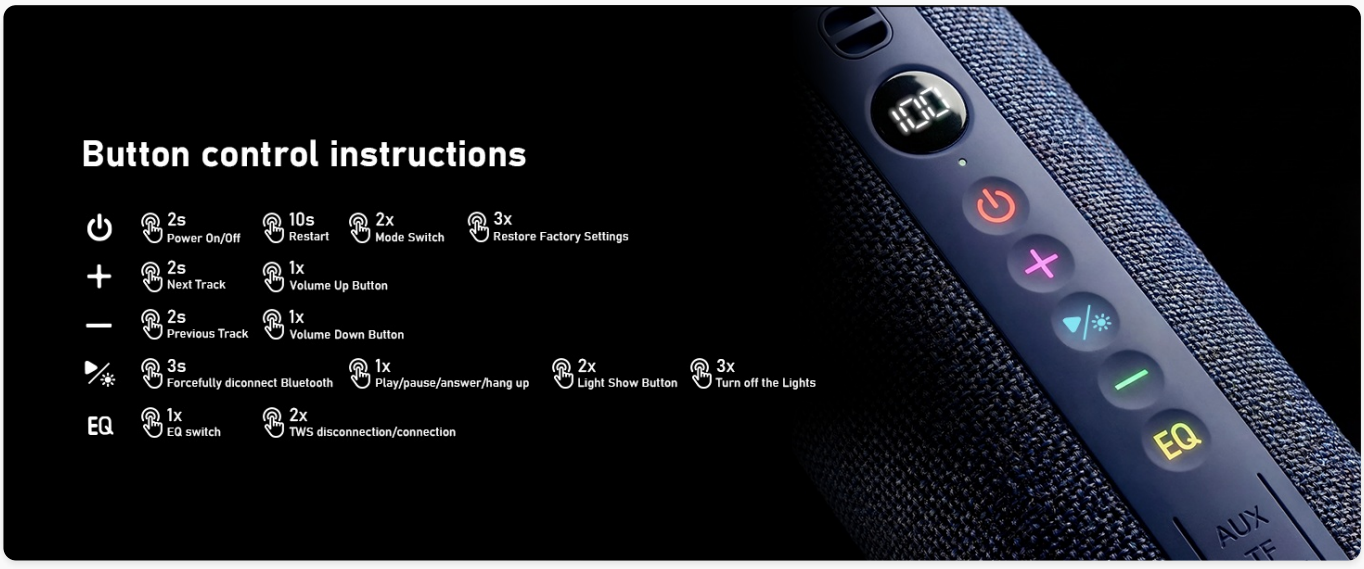


Image: Visual representation of the speaker's physical dimensions.

Warranty and Support

The BassBloom Roar 3 Portable Bluetooth Speaker comes with a manufacturer's warranty provided by BassBloom. For specific warranty details, please refer to the documentation included with your product or visit the official BassBloom website.

For technical support, troubleshooting assistance, or any product-related inquiries, please contact BassBloom customer service through their official channels. Contact information can typically be found on the product packaging or the

brand's website.

Product Overview Video

Your browser does not support the video tag.

Video: A comprehensive overview of the BassBloom Roar 3 Speaker, highlighting its features and capabilities.

© 2026 BassBloom. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GS99FG9P

More documents and user manuals: **https://manuals.plus/**