Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Brother MFC-J1360DW

Brother MFC-J1360DW Color Inkjet All-in-One Wireless Printer User Manual

Model: MFC-J1360DW

1. Product Overview

The Brother MFC-J1360DW is a compact, wireless all-in-one inkjet printer designed for home offices and small workspaces. This device offers 3-in-1 functionality: printing, copying, and scanning. It features fast print speeds, automatic two-sided printing, and a 1.8-inch color display for easy navigation. Wireless connectivity and mobile printing support enhance its versatility.



Image 1.1: Front view of the Brother MFC-J1360DW printer with paper loaded in the tray and output. The control panel is visible.

Key Features:

- **3-in-1 Functionality:** Print, Copy, and Scan.
- **Wireless Connectivity:** Supports Wi-Fi and mobile printing via the Brother Mobile Connect App.
- **1.8" Color Display:** For intuitive navigation and setup.
- **Automatic Two-Sided Printing:** Helps conserve paper.
- **Paper Handling:** 150-sheet adjustable paper tray and a 20-sheet automatic document feeder (ADF).
- **Fast Print Speeds:** Up to 16 ppm black and 9 ppm color.
- **High Resolution:** Printing up to 1200 x 6000 dpi.

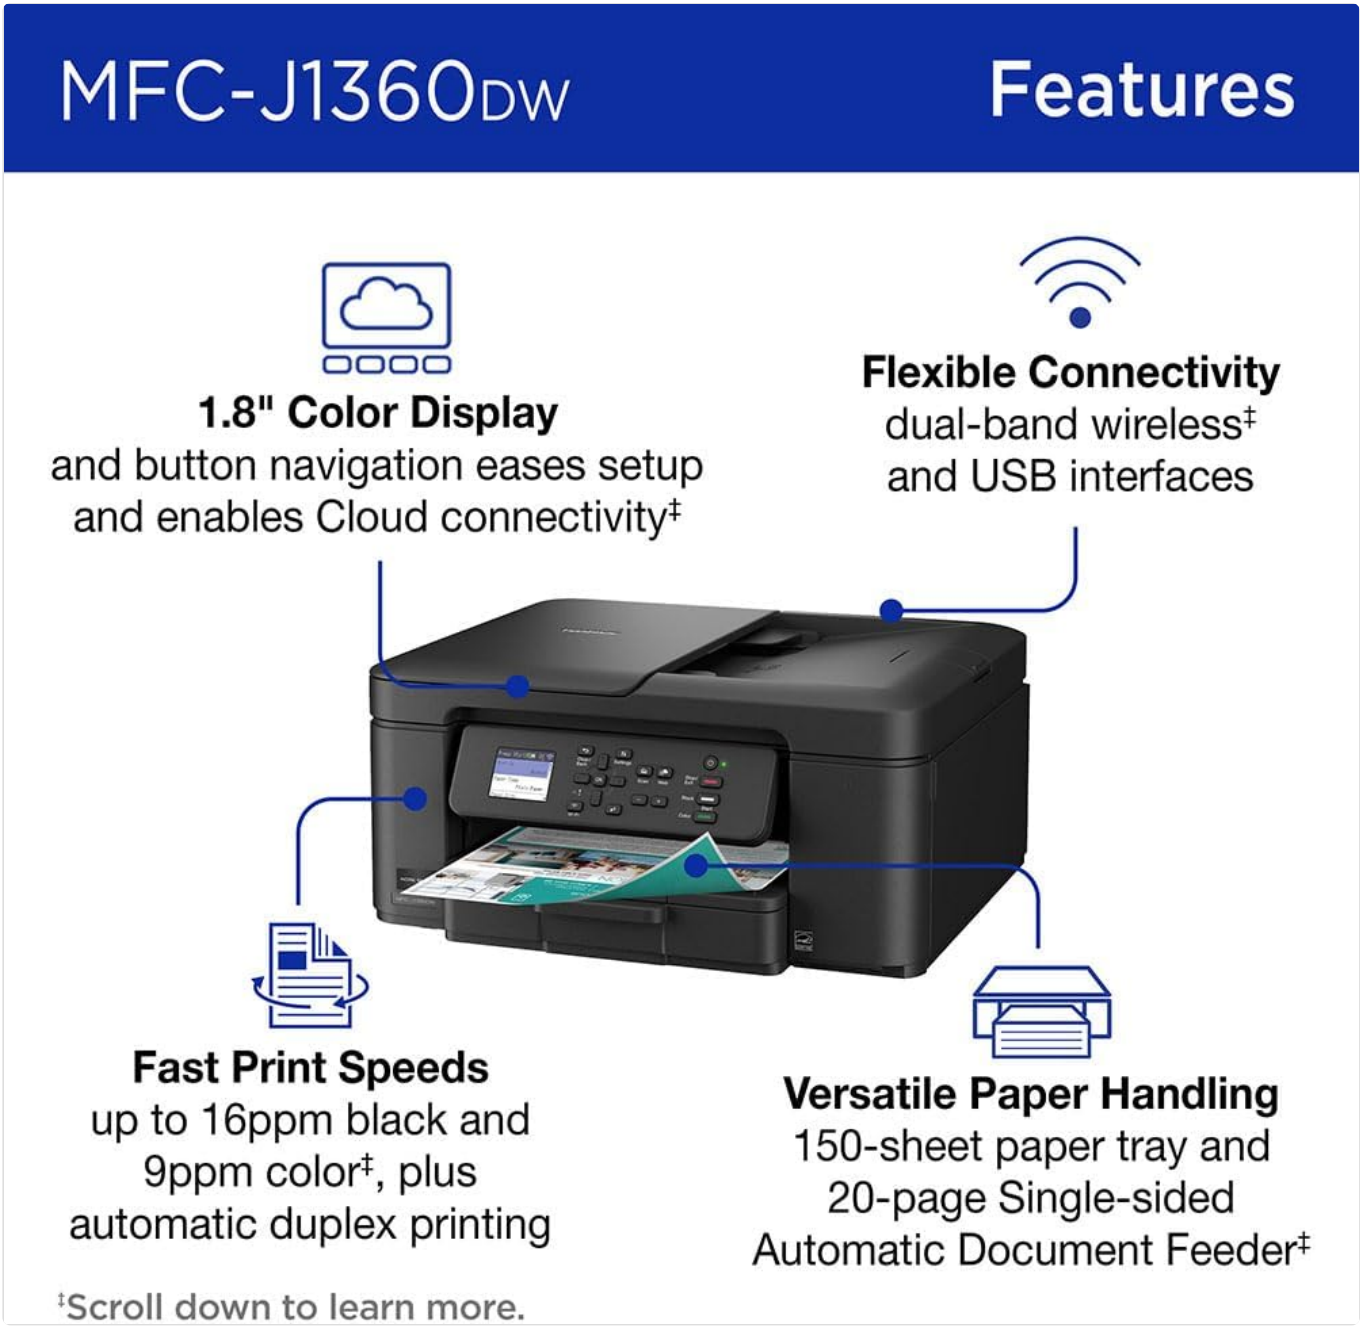


Image 1.2: Diagram highlighting key features of the MFC-J1360DW, including the 1.8" color display, flexible connectivity, fast print speeds, and versatile paper handling.

2. Setup Guide

2.1 Unpacking the Printer

Carefully remove the printer from its packaging. Ensure all protective tapes and packing materials are removed from the exterior and interior of the printer. Retain the packaging for future transportation if needed.

2.2 Contents of the Box

Verify that the following items are included:

- Brother MFC-J1360DW All-in-One Printer
- Set of Starter Ink Cartridges (Black, Cyan, Magenta, Yellow)
- Telephone Line Cord
- Power Cord

- Quick Setup Guide and other documentation



Image 2.1: Illustration of the printer's dimensions, included documentation, and starter ink cartridges.

2.3 Power Connection

1. Connect the power cord to the AC inlet on the printer.
2. Plug the other end of the power cord into a standard AC outlet.
3. Press the power button to turn on the printer.

2.4 Ink Cartridge Installation

1. Open the ink cartridge cover.
2. Unpack each ink cartridge.
3. Insert each cartridge into its corresponding slot, matching the color. Push until it clicks into place.
4. Close the ink cartridge cover. The printer will initiate an ink charging process.

2.5 Loading Paper

1. Pull out the paper tray completely.

2. Adjust the paper guides to fit the paper size.
3. Load paper into the tray, print side down. Do not overfill.
4. Gently push the paper tray back into the printer.
5. Confirm the paper size and type on the printer's display.

2.6 Initial Network Setup (Wireless)

1. On the printer's 1.8" color display, navigate to the "Network" or "Wi-Fi" settings.
2. Select "Setup Wizard" or "WLAN Setup".
3. The printer will search for available networks. Select your network (SSID) from the list.
4. Enter your network password (network key) using the display's keypad.
5. Confirm the connection. A successful connection will be indicated on the display.

2.7 Software Installation

For full functionality, install the printer drivers and software on your computer. Visit the official Brother support website for the latest drivers compatible with your operating system. Follow the on-screen instructions during installation.

3. Operating Instructions

3.1 Printing from a Computer

1. Open the document or image you wish to print on your computer.
2. Select "Print" from the application's menu (e.g., File > Print).
3. Choose "Brother MFC-J1360DW" as your printer.
4. Adjust print settings such as paper size, orientation, number of copies, and print quality. For automatic two-sided printing, select the duplex option in the printer properties.
5. Click "Print".

3.2 Mobile Printing (Brother Mobile Connect App)

The Brother Mobile Connect App allows you to print, scan, and manage your printer from your smartphone or tablet.

1. Download and install the Brother Mobile Connect App from your device's app store.
2. Ensure your mobile device is connected to the same Wi-Fi network as your printer.
3. Open the app and follow the on-screen instructions to add your MFC-J1360DW printer.
4. Select the desired function (Print, Scan, Copy) within the app and follow the prompts.



Image 3.1: A user interacting with the Brother Mobile Connect App on a smartphone, with the MFC-J1360DW printer in the background.

3.3 Copying Documents

1. Place the document face down on the scanner glass or face up in the Automatic Document Feeder (ADF).
2. On the printer's control panel, press the "Copy" button or select "Copy" from the display menu.
3. Use the arrow keys or number pad to specify the number of copies.
4. Adjust settings like copy quality, zoom, or paper type if necessary.
5. Press "Start" (Black or Color) to begin copying.

3.4 Scanning Documents

1. Place the document face down on the scanner glass or face up in the ADF.
2. On the printer's control panel, press the "Scan" button or select "Scan" from the display menu.
3. Choose your desired scan destination (e.g., Scan to PC, Scan to Email, Scan to Cloud).
4. Follow the on-screen prompts to configure scan settings (e.g., resolution, file type).
5. Press "Start" to begin scanning. The scanned document will be sent to the selected destination.

3.5 Faxing Documents

The MFC-J1360DW supports fax functionality. Before sending a fax, ensure the telephone line cord is connected to the printer's LINE jack and a wall jack.

1. Place the document face down on the scanner glass or face up in the ADF.
2. On the printer's control panel, press the "Fax" button or select "Fax" from the display menu.
3. Enter the recipient's fax number using the number pad.
4. Press "Start" (Black or Color) to send the fax.

4. Maintenance

4.1 Replacing Ink Cartridges

When an ink cartridge is low or empty, a message will appear on the printer's display. Use genuine Brother ink cartridges for optimal performance and to prevent damage to your printer.

1. Open the ink cartridge cover.
2. Press the release lever for the empty cartridge and remove it.
3. Unpack a new genuine Brother ink cartridge.
4. Insert the new cartridge into its correct slot until it clicks.
5. Close the ink cartridge cover.



Image 4.1: Display of genuine Brother ink cartridges, emphasizing their exclusive compatibility and performance.

4.2 Cleaning the Printer

- **Exterior:** Wipe the exterior of the printer with a soft, lint-free cloth.
- **Scanner Glass:** Clean the scanner glass and the white plastic backing with a soft, lint-free cloth dampened with glass cleaner.
- **Print Head:** If print quality degrades (e.g., streaks, missing colors), perform a print head cleaning from the printer's maintenance menu.

4.3 Clearing Paper Jams

If a paper jam occurs, the printer display will show an error message. Follow the on-screen instructions or these general steps:

1. Turn off the printer and unplug the power cord.
2. Open the paper tray and any access covers.
3. Carefully pull out any jammed paper in the direction of the paper path. Avoid tearing the paper.
4. Check all areas where paper might be jammed, including the rear access cover.
5. Close all covers, plug in the power cord, and turn on the printer.

5. Troubleshooting

This section addresses common issues you might encounter with your MFC-J1360DW printer.

5.1 Printer Not Printing

- **Check Power:** Ensure the printer is turned on and properly connected to a power outlet.
- **Check Connection:** Verify the USB cable is securely connected or the Wi-Fi connection is active.
- **Check Ink Levels:** Ensure ink cartridges are not empty.
- **Paper Jam:** Clear any paper jams.
- **Printer Status:** Check the printer's display for error messages.

5.2 Poor Print Quality

- **Ink Levels:** Low ink can affect print quality. Replace cartridges if needed.
- **Print Head Cleaning:** Perform a print head cleaning cycle from the printer's maintenance menu.
- **Paper Type:** Ensure you are using the correct paper type and quality for your print settings.
- **Alignment:** Perform a print head alignment from the printer's maintenance menu.

5.3 Wireless Connection Issues

- **Router Proximity:** Ensure the printer is within range of your wireless router.
- **Network Settings:** Re-run the wireless setup wizard on the printer.
- **Router Reboot:** Try restarting your wireless router.
- **Firewall:** Ensure your computer's firewall is not blocking communication with the printer.

For more detailed troubleshooting, refer to the comprehensive documentation available on the official Brother support website.

6. Specifications

Feature	Specification
Model Name	MFC-J1360DW
Functions	Print, Copy, Scan, Fax
Printing Technology	Inkjet
Connectivity	USB, Wi-Fi
Max Print Speed (Black)	16 ppm
Max Print Speed (Color)	9 ppm
Print Resolution (Max)	1200 x 6000 dpi
Duplex Printing	Automatic
Paper Tray Capacity	150 sheets
Automatic Document Feeder (ADF)	20 sheets
Display	1.8" Color Display
Item Dimensions (D x W x H)	13.5"D x 15.35"W x 7.19"H
Item Weight	16.8 Pounds
Compatible Devices	PC

7. Warranty Information

The Brother MFC-J1360DW printer is covered by a **Brother Limited Warranty**. For specific terms, conditions, and duration of your warranty, please refer to the warranty documentation included with your product or visit the official Brother support website.

Purchasing from a Brother USA AUTHORIZED retailer ensures you receive the full USA warranty coverage.

8. Support and Contact

For further assistance, technical support, or to download the latest drivers and software, please visit the official Brother support website. You can also find FAQs and additional troubleshooting guides there.

The Brother Mobile Connect App also provides support features and allows for convenient management of your printer.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GSH6W9VJ

More documents and user manuals: **https://manuals.plus/**