Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

OEARE B0GSYQJ8L3

OEARE Portable Air Conditioner User Manual

Model: B0GSYQJ8L3

1. Important Safety Instructions

Please read all instructions carefully before using this appliance and retain for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug from the outlet when not in use, before cleaning, or before moving.
- Keep the appliance away from heat sources, direct sunlight, and flammable materials.
- Do not operate with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is for indoor use only.
- Do not block air inlets or outlets.
- Keep out of reach of children.

2. Product Overview

The OEARE Portable Air Conditioner is a 3-in-1 unit combining air conditioning (with water and ice pack), humidifier (with water), and cooling fan functions. It features multiple modes, speeds, and a large water tank for extended operation.



Figure 2.1: 3-in-1 Functionality (Fan, Humidifier, Air Cooler)

The unit operates as a normal fan without water, a humidifier when water is added, and an air cooler when both water and ice packs are used. It draws in hot air, passes it through a cooling medium, and expels cold air.

3. Setup and Installation

3.1 Unpacking

- Carefully remove the appliance from its packaging.
- Check for any damage during transit. If damaged, do not operate and contact customer support.
- Ensure all accessories, including the remote control and 4 ice packs, are present.

3.2 Placement

Place the air conditioner on a flat, stable surface. This unit is designed for freestanding use and does not require any window kits, hoses, or drilling for installation.



Figure 3.1: Placement and Power Connection (No Hose, Drilling, or Window Required)

3.3 Filling the Water Tank

The unit features a 6L water tank with an upper and lower double water tank structure. It comes with 4 ice packs for enhanced cooling.

1. **Prepare Ice Packs:** Place the included ice packs in a freezer until completely frozen.
2. **Access Bottom Tank:** The bottom water tank is removable for easy cleaning and ice pack placement. Carefully pull out the bottom tank.
3. **Place Ice Packs:** Place the frozen ice packs into the bottom water tank.
4. **Fill Top Tank:** Open the lid on the top of the unit to access the top water tank. Slowly pour clean water into the top tank. Do not overfill; adding water too quickly may cause overflow.
5. **Reinsert Bottom Tank:** Ensure the bottom tank is securely reinserted into the unit.



Figure 3.2: Steps for Using the Cooling Function



Figure 3.3: Large Water Tank and Ice Pack System

4. Operating Instructions

The unit can be operated via the top control panel or the included remote control.

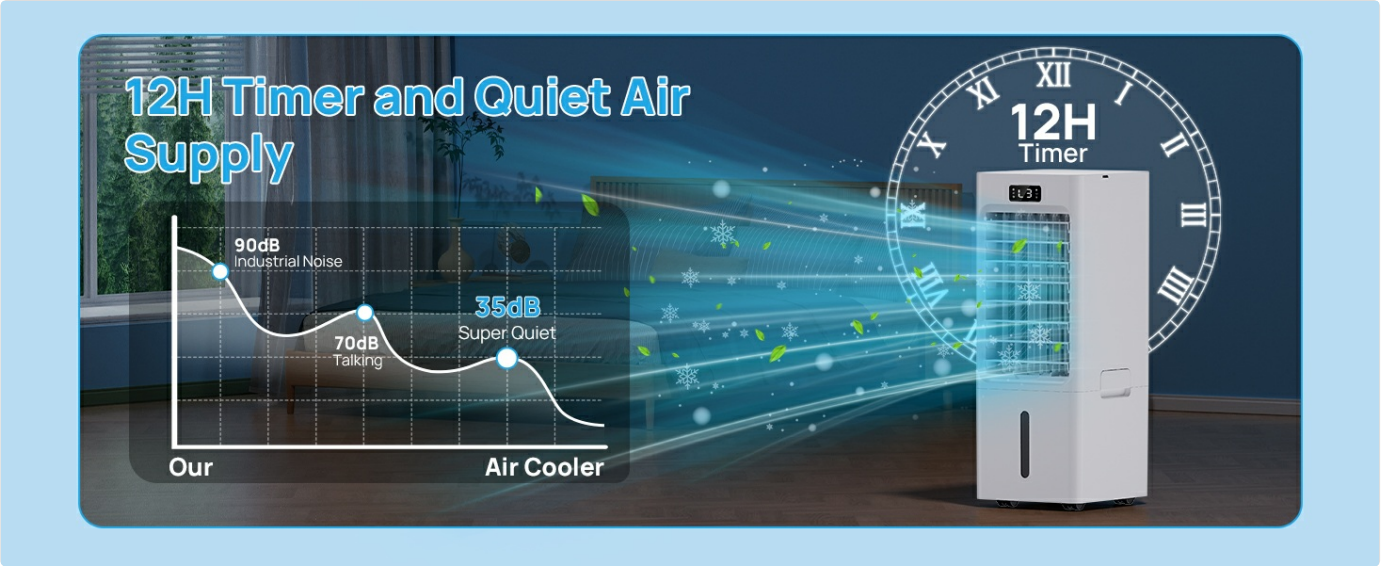


Figure 4.1: Control Panel and Remote Control

4.1 Power On/Off

- Press the **POWER** button on the control panel or remote control to turn the unit on or off.

4.2 Adjusting Wind Speed

The unit offers 3 wind speeds: Low, Medium, and High.

- Press the **SPEED** button repeatedly to cycle through the available wind speeds.

4.3 Selecting Operating Mode

Choose from 4 wind feeling modes: Normal, Natural, Sleep, and Cooling.

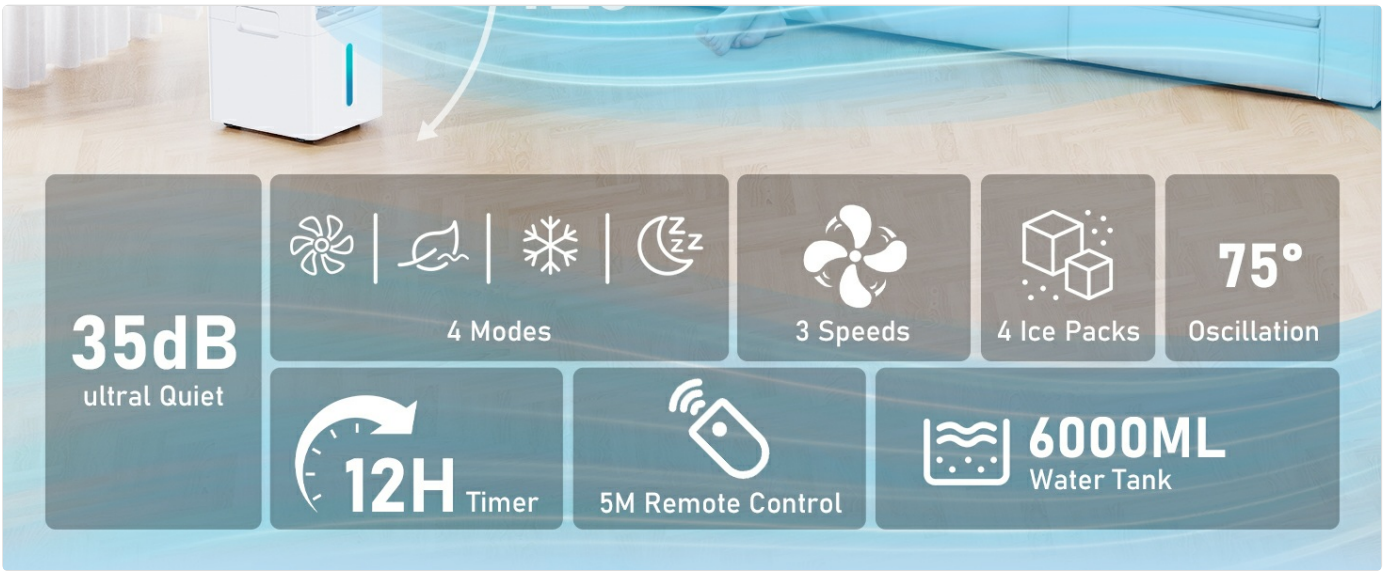


Figure 4.2: 4 Modes and 3 Wind Speeds

- Press the **MODE** button repeatedly to select the desired operating mode.
- **Normal Mode:** Provides continuous strong wind.
- **Natural Mode:** Simulates a gentle breeze.
- **Sleep Mode:** Operates quietly for undisturbed sleep.
- **Cooling Mode:** Activates the evaporative cooling function (requires water and ice packs).

4.4 Oscillation Function

The unit features automatic oscillation for wide air distribution.



Figure 4.3: Wide Air Supply with Auto Oscillation

- Press the **SWING** button to activate or deactivate the automatic oscillation feature. The unit provides 120-degree up and down adjustability.

4.5 Timer Function

Set the unit to automatically turn off after a specified period, up to 12 hours.

- Press the **TIMER** button repeatedly to set the desired operating duration. The timer can be set in 1-hour increments.

4.6 Display Control

To avoid light disturbance, especially at night, the display can be turned off.

- **From Unit:** Press and hold the **FAN** button on the device.
- **From Remote:** Briefly press the **DISPLAY** button on the remote control.



Figure 4.4: Low Noise Operation and Closable Screen

5. Maintenance

Regular maintenance ensures optimal performance and longevity of your air conditioner.

5.1 Cleaning the Water Tank

The bottom water tank is removable for easy cleaning.

1. Unplug the unit from the power outlet.
2. Carefully pull out the bottom water tank.
3. Empty any remaining water.
4. Clean the tank with a mild detergent and water. Rinse thoroughly.
5. Allow the tank to air dry completely before reinserting.



Figure 5.1: Detachable and Washable Components (Bladeless Design)

5.2 General Cleaning

- Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no water enters the internal electrical components.

5.3 Storage

- Before storing, ensure the water tank is empty and clean.
- Store the unit in a cool, dry place, away from direct sunlight and extreme temperatures.

6. Troubleshooting

If you encounter issues with your OEARE Portable Air Conditioner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Unit does not turn on	No power supply; Power cord not properly plugged in	Check power outlet; Ensure power cord is securely plugged in
No cool air / Air is not cold enough	Water tank empty; Ice packs not frozen or used; Cooling mode not activated; Room temperature too high for evaporative cooling effectiveness	Fill water tank; Ensure ice packs are frozen and placed in tank; Select Cooling Mode; Evaporative coolers are most effective in dry climates. For very humid conditions, cooling effect may be limited.
Weak airflow	Air inlets/outlets blocked; Fan speed set too low	Clear any obstructions; Increase fan speed setting
Unusual noise	Unit not on a flat surface; Internal component issue	Place unit on a stable, flat surface; If noise persists, contact customer support
Remote control not working	Batteries depleted; Obstruction between remote and unit	Replace remote control batteries; Ensure clear line of sight to the unit's receiver

If the problem persists after attempting these solutions, please contact customer support.

7. Specifications

Detailed technical specifications for the OEARE Portable Air Conditioner.

Feature	Specification
Brand	OEARE
Model Number	B0GSYQJ8L3
Mounting Type	Freestanding
Color	Off White
Controls Type	Remote, On-unit Panel
Recommended Use	Personal cooling for small rooms or offices
Form Factor	Personal
Number of Speeds	3 (Low, Medium, High)
Operation Modes	4 (Normal, Natural, Sleep, Cooling)
Water Tank Capacity	6 Liters (6000ML)

Feature	Specification
Timer	12-Hour
Noise Level	Approximately 35dB
Oscillation	Automatic, 120-degree up and down adjust
Power Cord Length	5 ft
Dimensions (Approx.)	59.5 cm (Height) x 25 cm (Width) x 21 cm (Depth)

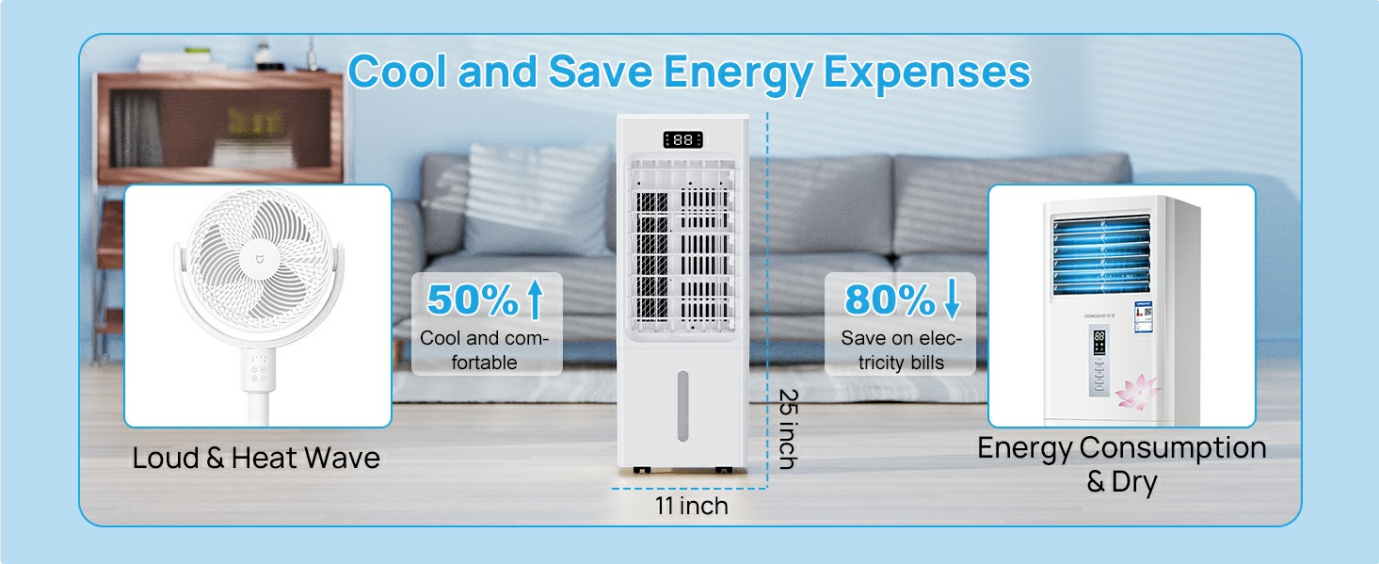


Figure 7.1: Product Dimensions

© 2026 OEARE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GSYQJ8L3

More documents and user manuals: **https://manuals.plus/**