Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

roborock WD6Y6A

Roborock F25 Steam Wet Dry Vacuum Mop User Manual

Model: WD6Y6A

1. Introduction

Thank you for choosing the Roborock F25 Steam Wet Dry Vacuum Mop. This appliance is designed to provide efficient and thorough cleaning for various hard floor surfaces using a combination of powerful vacuuming, mopping, and high-temperature steam. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your device.

Please read this manual carefully before operating the product and retain it for future reference.

2. What's in the Box

Verify that all components are present upon unboxing:

- Wet Dry Vacuum Cleaner
- Charging Dock
- Power Cord
- Extra Filter
- Maintenance Brush
- Floor Cleaning Solution
- Extra Roller



Figure 2.1: Included Components

3. Setup

3.1 Assembly

1. Insert the handle into the main body of the vacuum until it clicks securely into place.
2. Place the charging dock on a flat surface near a power outlet.
3. Connect the power cord to the charging dock and plug it into a wall outlet.

3.2 Initial Charging

Before first use, fully charge the vacuum. Place the vacuum on the charging dock. The display will indicate charging status. A full charge typically takes several hours.

3.3 Filling Water Tanks

- **Clean Water Tank:** Remove the clean water tank, fill it with clean tap water up to the MAX line. For enhanced cleaning, add the recommended Roborock floor cleaning solution. Do not overfill.
- **Dirty Water Tank:** Ensure the dirty water tank is empty before starting a cleaning cycle.

4. Operating Instructions

4.1 Powering On/Off

Press the power button on the handle to turn the vacuum on or off. The display screen will activate upon power-on.

4.2 Cleaning Modes

The Roborock F25 Steam offers four cleaning modes for various needs:

- **Steam Mode:** Utilizes 356°F high-temperature steam for deep cleaning and sanitization, ideal for sticky messes and stubborn stains.
- **Eco Mode:** Energy-efficient mode for lighter cleaning tasks and extended runtime.
- **Auto Mode:** Automatically adjusts suction power and water flow based on detected dirt levels.
- **Sponge Mode:** Specific mode for delicate surfaces or when minimal moisture is desired.

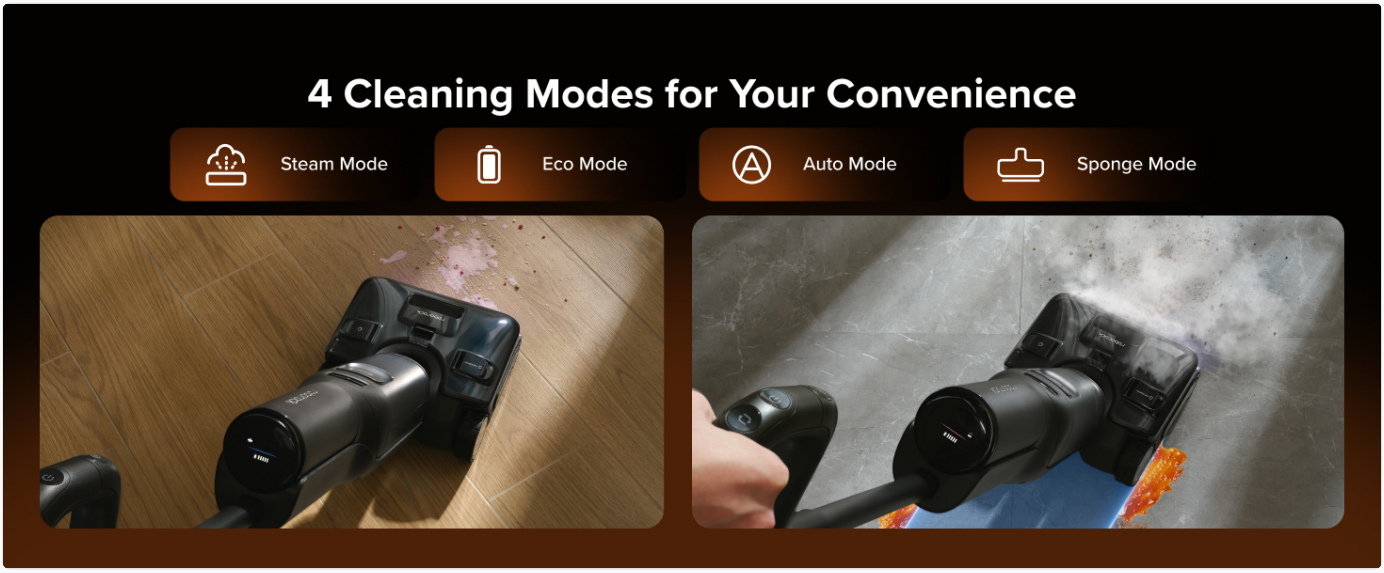


Figure 4.1: Four Cleaning Modes

4.3 High-Temperature Steam Cleaning

The VaporFlow Technology delivers consistent 356°F steam to effectively loosen and remove tough messes like kitchen grease, food spills, and dried stains without harsh chemicals. Steam activates in approximately 60 seconds.



Figure 4.2: Steam Cleaning in Action

4.4 Powerful Vacuum and Mop Function

Experience a comprehensive clean with 25,000 Pa suction power, capable of picking up pet hair, muddy paw prints, food debris, dust, and liquid spills simultaneously. The JawScrapers anti-tangle technology minimizes hair wrap on the roller brush.



Figure 4.3: Vacuuming and Mopping Performance

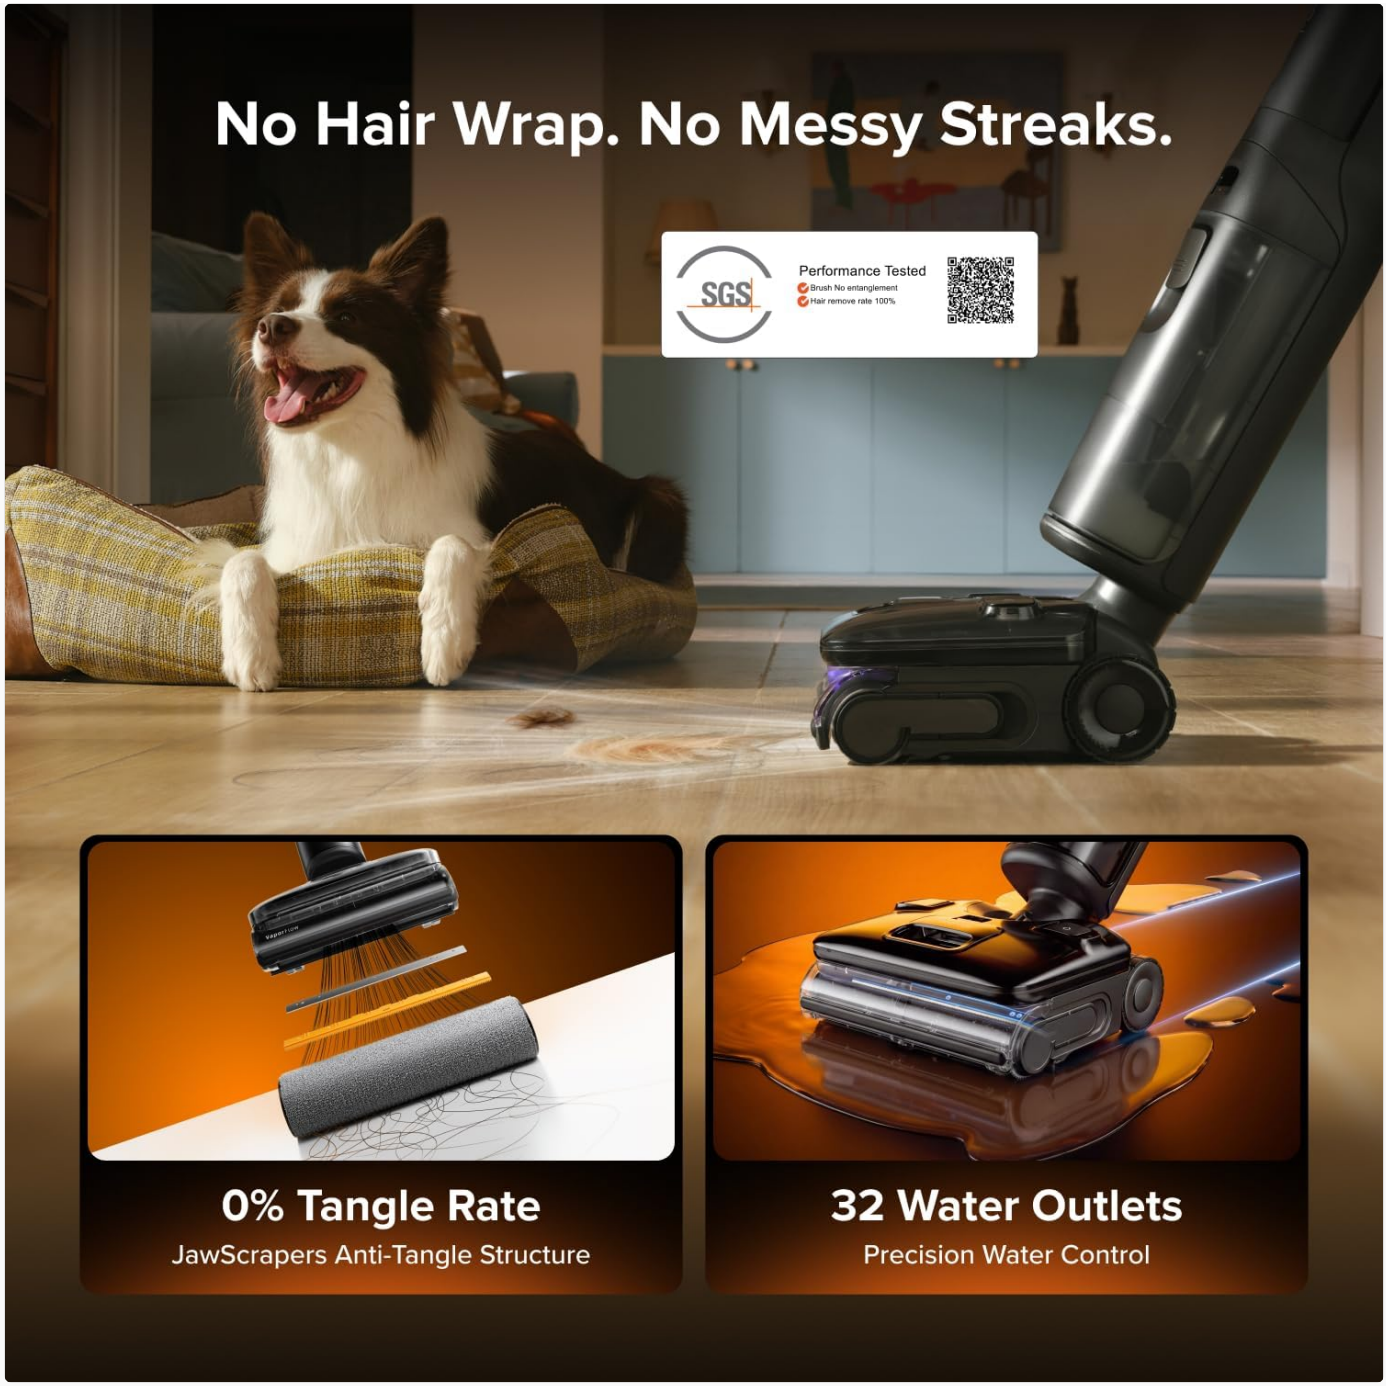


Figure 4.4: Anti-Tangle and Water Control Features. For more details on SGS certification, visit SGS Certification.

4.5 Extended Runtime

The F25 Steam provides up to 80 minutes of runtime on a single charge, covering up to 7104 sqft. The large 1000 ml clean water tank reduces the need for frequent refills during extensive cleaning sessions.



Figure 4.5: Runtime and Water Tank Capacity

4.6 Smart Features

- **Smart Dirt Detection:** Sensors automatically detect dirt levels and adjust cleaning power for optimal results, saving time and reducing repeat passes.
- **Blue Light Illumination:** A built-in blue light illuminates the cleaning path, revealing hidden dust, pet hair, and debris in dark corners and under furniture for more precise cleaning.
- **Voice Alerts:** Timely voice alerts provide real-time updates on the cleaning status, allowing you to stay informed without constantly checking the device.



Figure 4.6: Smart Dirt Detection



Figure 4.7: Blue Light Illumination

4.7 Maneuverability

- **180° FlatReach Design:** The upgraded 180° FlatReach 2.0 design allows the vacuum to lie completely flat, reaching under beds, sofas, and other low spaces (only 4.9 inches high) while maintaining strong suction.
- **Edge-to-Edge Cleaning:** Designed to clean right up to baseboards and into corners, ensuring fewer missed spots.



Figure 4.8: Edge-to-Edge Cleaning

5. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your Roborock F25 Steam.

5.1 All-in-One Thermal Self-Cleaning System

The integrated self-cleaning system automatically refreshes the roller brush with high-temperature steam and water washing. This process helps to loosen dirt, grease, and pet residue. A subsequent 203°F hot air drying cycle ensures the brush is dry and ready for the next use, preventing odors and bacterial growth.



Figure 5.1: Self-Cleaning System Overview

5.2 Roller and Water Tank Cleaning

For thorough cleaning, it is recommended to manually clean the roller and water tanks once a month. The detachable wet-and-dry separation system simplifies the disposal of solids and liquids from the dirty water tank, reducing clogs and messy cleanups.

Your browser does not support the video tag.

Video 5.1: Routine Maintenance of Roborock F25 Steam Vacuum Mop. This video demonstrates how to clean the roller and water tank.

6. Troubleshooting

If you encounter issues with your Roborock F25 Steam, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
No Power	Battery depleted; not properly docked.	Ensure the vacuum is correctly placed on the charging dock and the power cord is plugged in. Allow to charge fully.
Poor Suction	Dirty water tank full; roller brush tangled; filter clogged.	Empty the dirty water tank. Clean the roller brush and remove any tangled hair. Clean or replace the filter.
Streaks on Floor	Dirty roller brush; excessive cleaning solution; dirty water tank full.	Run the self-cleaning cycle. Reduce the amount of cleaning solution. Empty and clean the dirty water tank.
No Steam	Clean water tank empty; steam nozzle clogged.	Refill the clean water tank. Check for and clear any blockages in the steam nozzle.
Unusual Noise	Foreign object in brush head; damaged roller brush.	Turn off the vacuum and inspect the brush head for obstructions. Remove any foreign objects. If the roller is damaged, replace it.

If the problem persists after attempting these solutions, please contact Roborock Customer Support.

7. Specifications

Feature	Detail
Brand	roborock
Model Name	WD6Y6A
Special Feature	Bagless, Cordless, Headlight, High Power, Wet/Dry
Filter Type	Washable Filter
Surface Recommendation	All floors, Hard Floor, Hardwoods, Bare Floor, Tile, Sealed Wood, Vinyl, Laminate
Power Source	Battery Powered (Lithium-Ion)
Capacity (Clean Water Tank)	1 liters
Runtime	Up to 80 minutes
Voltage	120 volts
Item Weight	12 pounds
Item Dimensions (L x W x H)	12.44"L x 13.89"W x 45"H

8. Warranty Information

The Roborock F25 Steam Wet Dry Vacuum Mop comes with a**1-year limited warranty** covering defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

This warranty does not cover damage caused by misuse, accident, unauthorized modification, or failure to follow the instructions in this manual.

9. Customer Support

For further assistance, technical support, or to inquire about replacement parts, please visit the official Roborock support website or contact their customer service department. Contact details can typically be found on the product packaging or the official Roborock website.

Online resources often include FAQs, video tutorials, and downloadable manuals.

© 2026 Roborock Technology Co. Ltd. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GT4MFVFQ

More documents and user manuals: **https://manuals.plus/**