Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

EROMMY PXWQOT233WH-SD

EROMMY 20x40 FT Outdoor Frame Party Tent with Sidewalls Instruction Manual

Model: PXWQOT233WH-SD

1. Introduction

Thank you for choosing the EROMMY 20x40 FT Outdoor Frame Party Tent with Sidewalls. This manual provides essential information for the safe and correct assembly, operation, and maintenance of your party tent. Please read these instructions carefully before setup and retain them for future reference.
This heavy-duty tent is designed for commercial or recreational purposes, including weddings, parties, events, and as a carport. Its robust construction and high-quality materials ensure durability and protection.

2. Safety Information

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Do not use this tent in extreme weather conditions.
- Take protective measures when wind speeds reach 25 mph or higher. This includes disassembling the tent or ensuring it is securely anchored.
- Ensure all connections are tight and secure before and during use.
- Keep all flame and heat sources away from the tent fabric.
- Always assemble the tent on level ground.
- Do not hang heavy objects from the tent frame.
- Adult supervision is required during assembly and disassembly.

3. Package Contents

Your EROMMY 20x40 FT Party Tent is delivered in 6 boxes. Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

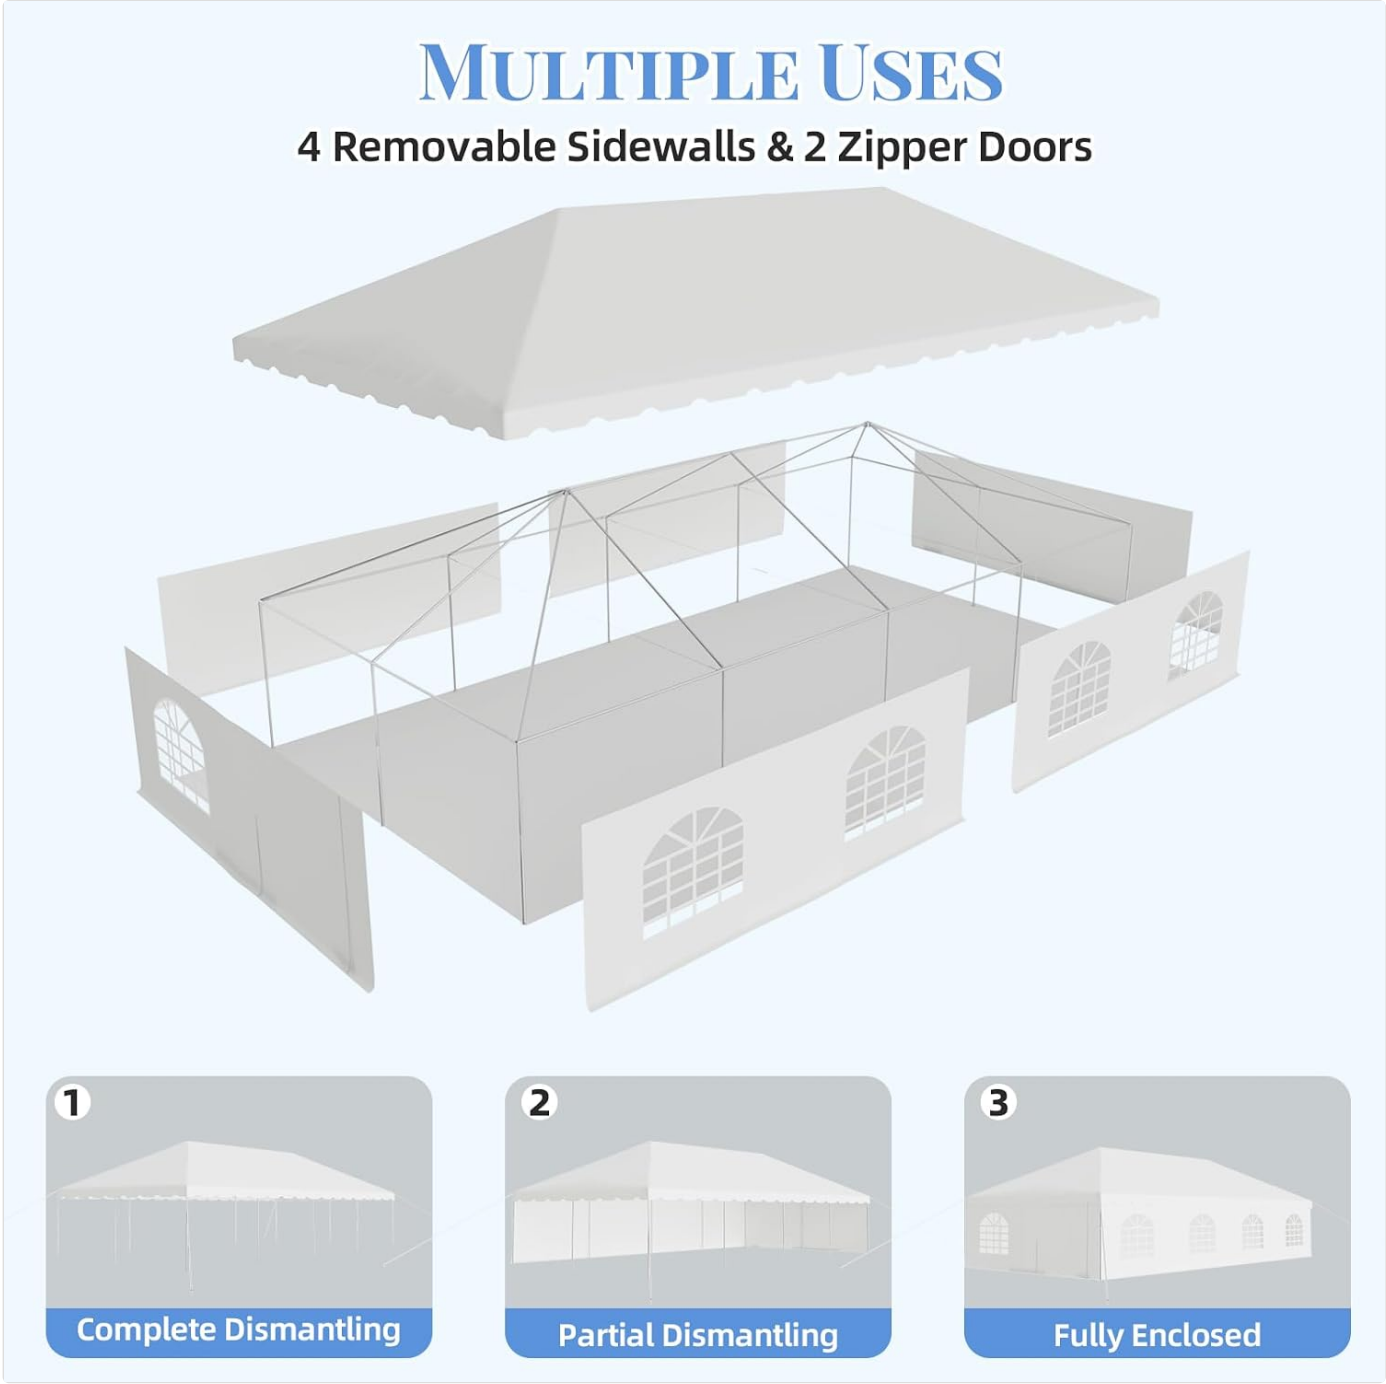


Image: Overview of tent components, including frame parts, canopy, and sidewalls.

Components List:

- Galvanized Steel Frame Pipes (various lengths and types)
- Metal Connectors (1.65" diameter)
- 350GSM PVC Canopy Roof
- Removable Sidewalls (with windows and zipper doors)
- Wind Ropes
- Ground Nails/Stakes
- Base Plates for Poles
- 5 x 600D Oxford Carry Bags
- Assembly Instructions Manual

4. Setup Instructions

Assembly of the EROMMY Party Tent requires at least 4-6 people. Refer to the included assembly video (if available) and the diagrams in this manual for visual guidance.

4.1. Prepare the Site

1. Choose a flat, level area free from overhead obstructions (e.g., tree branches, power lines).
2. Clear the area of any sharp objects or debris that could damage the tent fabric.
3. Ensure adequate space around the tent for securing ropes and stakes.

4.2. Assemble the Frame

Image: Illustration of the reinforced frame structure during assembly.

1. Unpack all frame pipes and connectors. Organize them by type and length.
2. Begin by assembling the base frame on the ground. Connect the horizontal pipes using the appropriate corner and middle connectors.
3. Insert the vertical leg pipes into the base frame connectors. Attach the solid base plates to the bottom of each leg.
4. Construct the roof frame by connecting the roof pipes and ridge poles using the wider 5.9-inch top disc and strengthened corner connections.
5. Carefully lift the roof frame and attach it to the top of the vertical leg pipes. Ensure all connections are fully inserted and secured.
6. Install the diagonal bracing structure to enhance stability.

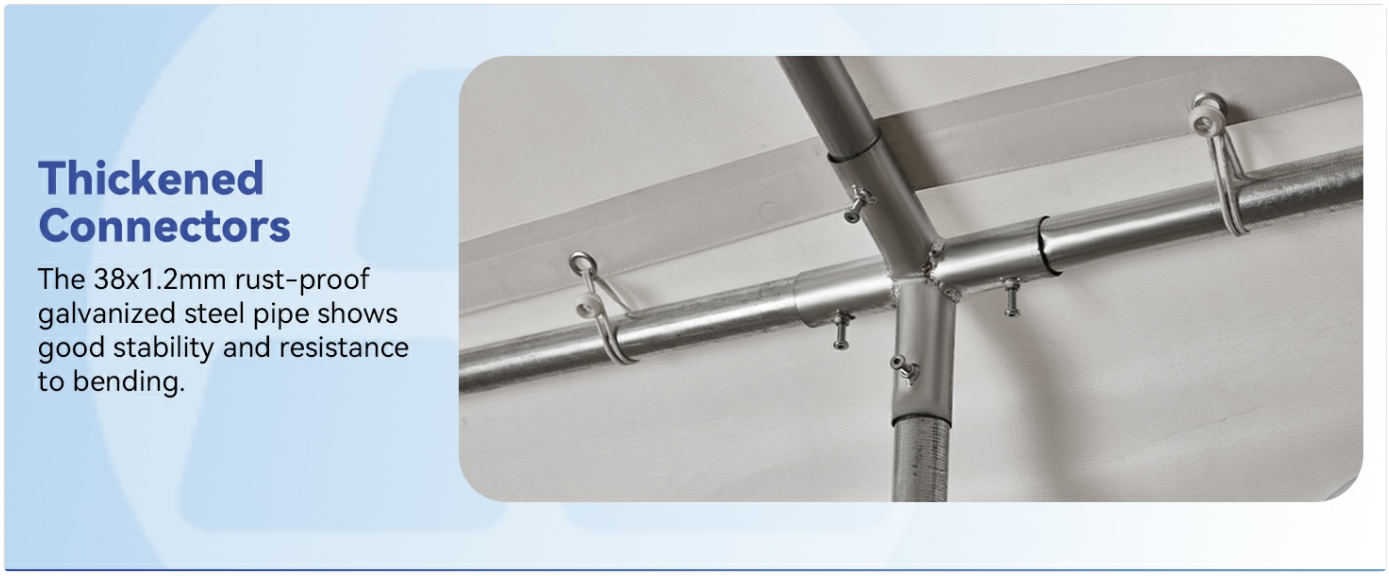


Image: Detail of thickened connectors ensuring frame stability.



Image: Detail of the wider 5.9-inch top disc for secure roof connections.

4.3. Install the Canopy Roof

1. Carefully unfold the PVC canopy roof and drape it over the assembled frame.
2. Align the canopy with the frame, ensuring even overhang on all sides.
3. Secure the canopy to the frame using the integrated straps, hooks, or elastic ball straps. Ensure the canopy is taut to prevent water pooling.
4. Tighten the reinforced steel wire at the top during installation for added stability.

4.4. Attach Sidewalls



Image: Details of Velcro fasteners for sidewalls and roll-up zipper doors.

1. Attach the sidewalls to the tent frame using the Velcro fasteners.
2. Ensure the sidewalls are properly aligned and zipped together where applicable.
3. The tent includes two roll-up zipper doors for easy access.

4.5. Secure the Tent



Image: Components of the wind protection system, including solid base, ground stakes, and thick wire rope.

1. Utilize the wider wind ropes and strong ground nails/stakes to anchor the tent securely to the ground.
2. Ensure all ropes are taut and evenly distributed to provide maximum stability.
3. The L-shaped ground nail reinforcement system provides additional security.

5. Operating Instructions

5.1. General Use

- The tent can be used with or without sidewalls, depending on your event needs and weather conditions.
- Open the zipper doors for entry and exit. Roll them up and secure them with ties for an open entrance.
- Ensure proper ventilation, especially if using heating or cooking equipment inside (maintain safe distances from tent fabric).

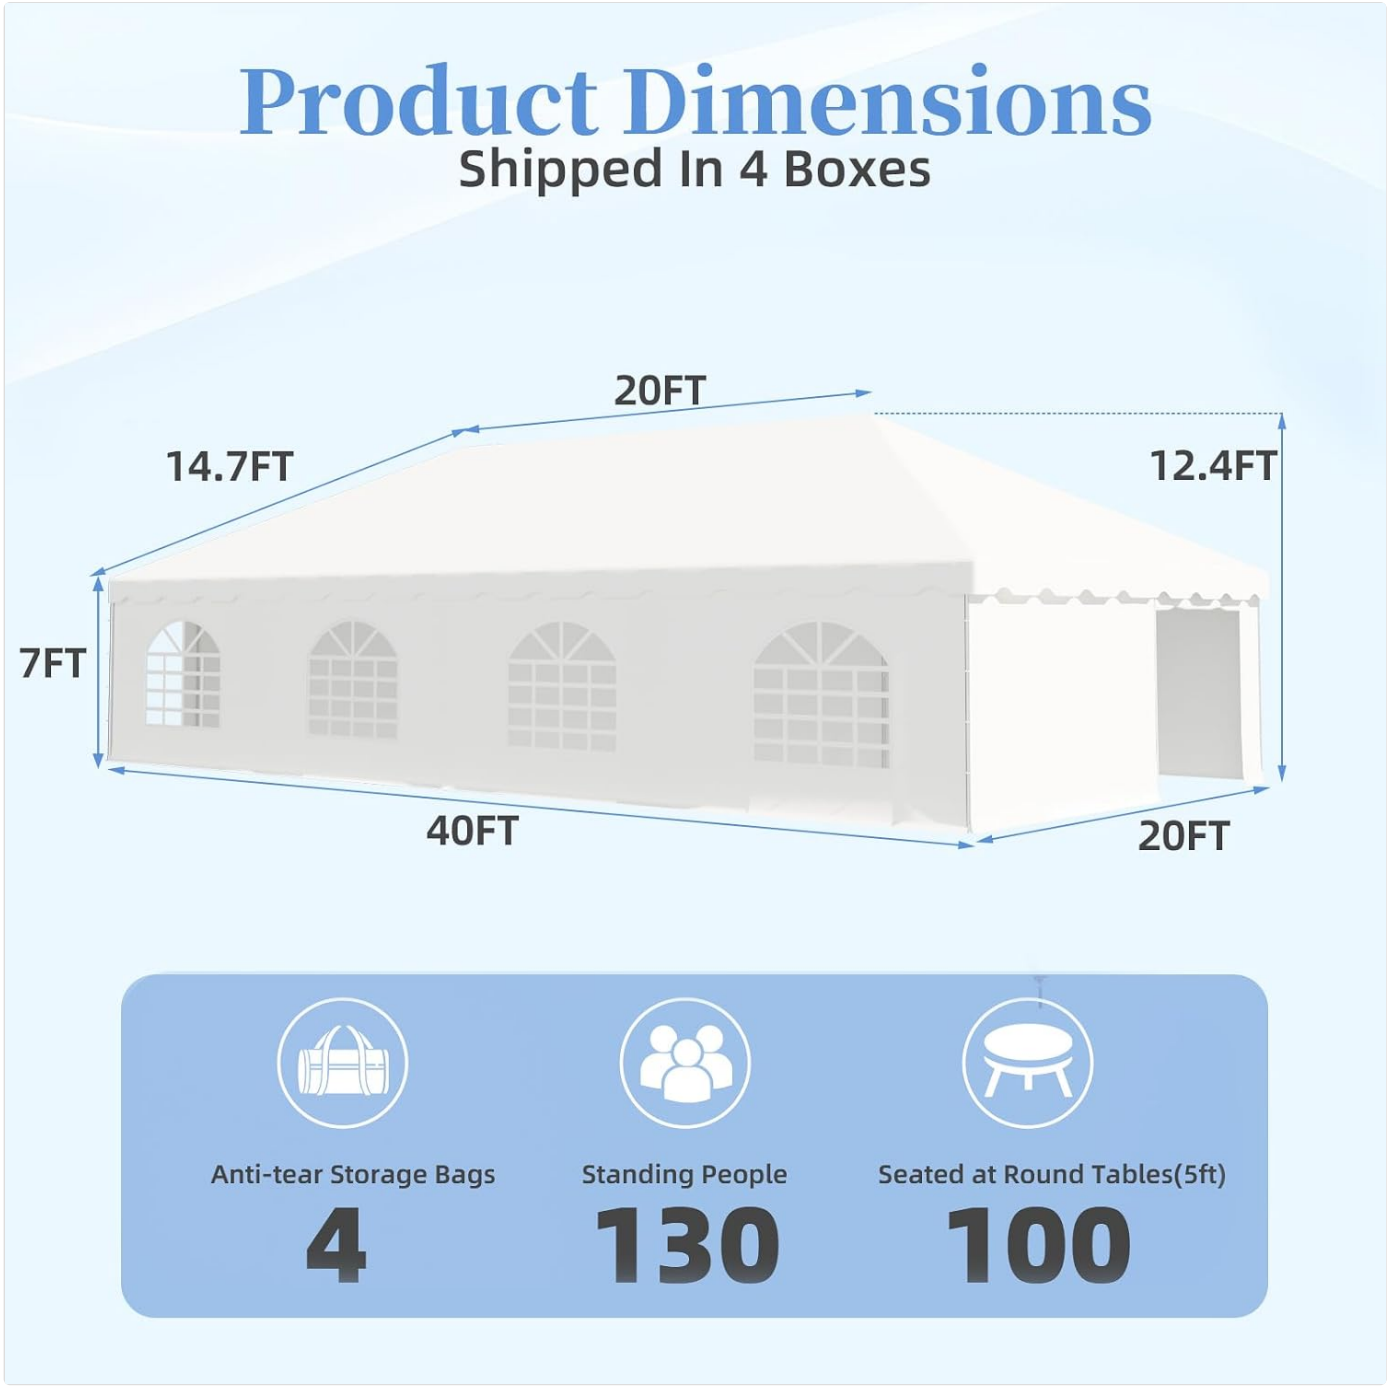


Image: Diagram showing the tent's dimensions (20'x40'x12.7'H) and capacity for approximately 130 standing people or 100 seated at round tables.



Image: The 20x40 FT party tent in use at an outdoor gathering, demonstrating its spacious interior.

6. Maintenance

6.1. Cleaning

- Clean the PVC fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the material.
- Rinse thoroughly with clean water and allow the fabric to air dry completely before storage.
- Wipe down the steel frame with a damp cloth to remove dirt and debris.

6.2. Inspection

- Regularly inspect the frame for any signs of rust, bending, or damage.
- Check the canopy and sidewalls for tears, holes, or excessive wear. Repair minor damage promptly to prevent it from worsening.

- Ensure all ropes, stakes, and connectors are in good condition and functioning correctly.

6.3. Storage

- Before disassembling and storing, ensure all tent components (fabric, frame) are completely dry to prevent mold, mildew, and rust.
- Disassemble the tent in reverse order of assembly.
- Fold the canopy and sidewalls neatly. Store them in the provided 600D Oxford carry bags.
- Store the frame pipes and connectors in a dry, protected area, away from extreme temperatures.

7. Troubleshooting

7.1. Tent Instability

- **Issue:** Tent feels wobbly or unstable.
  Solution: Ensure all frame connections are fully engaged and tightened. Verify that all wind ropes are taut and ground stakes are firmly driven into the ground. Check for level ground.

7.2. Water Pooling on Roof

- **Issue:** Water collects on the canopy roof.
  Solution: The canopy may not be sufficiently taut. Re-adjust the canopy and ensure it is stretched tightly over the frame to allow water to run off. Check that the frame is correctly assembled and not sagging.

7.3. Difficulty with Assembly

- **Issue:** Parts do not fit or assembly is challenging.
  Solution: Double-check the instruction manual and diagrams. Ensure you are using the correct pipes and connectors for each step. Sometimes, a slight rotation of a pipe can help it fit into a connector. If issues persist, contact customer support.

8. Specifications

Feature	Detail
Brand	EROMMY
Model Number	PXWQOT233WH-SD
Product Dimensions (L x W x H)	480"L x 240"W x 148.8"H (40'L x 20'W x 12.4'H)
Floor Area	800 Square Feet
Frame Material	Upgraded Galvanized Steel (1.5" diameter pipes, 1.65" diameter connectors)
Canopy Material	350GSM High-Density PVC Fabric
Water Resistance Level	Waterproof
UV Protection	99% UV-Resistant
Sidewalls	Included, Removable
Color	White

Assembly Required	Yes

9. Warranty and Support

EROMMY products are designed for quality and durability. If you encounter any issues or have questions regarding your party tent, please contact EROMMY customer support.

- **Returns:** This product is eligible for 30-day easy returns. Please refer to the retailer's return policy for details.
- **Customer Support:** For assistance with assembly, missing parts, or product inquiries, please visit the EROMMY store on Amazon or contact their customer service directly.

© 2023 EROMMY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where can I find the instruction manual and assembly diagram for the EROMMY 20x40 party tent, model number PXWQOT233WH?

The instruction manual for the EROMMY 20x40 FT Outdoor Frame Party Tent (Model PXWQOT233WH-SD) is available online. This tent is a large-scale assembly that typically requires 4-6 people. Assembly Overview: Frame

Setup: Begin by...

Read full answer

Open the live page

https://manuals.plus/asin/B0GT9T8BKX

More documents and user manuals: **https://manuals.plus/**