Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LAUSAINT HOME GZPE010-002-WH2

LAUSAINT HOME 20x30 Party Tent Instruction Manual

Model: GZPE010-002-WH2

1. Important Safety Information

Please read and understand all instructions and safety warnings before assembling, using, or disassembling this party tent. Failure to follow these instructions may result in injury or damage to the product.

- **Weather Conditions:** This tent is designed for temporary use in mild weather conditions. Do not use in severe weather, including heavy winds, heavy rain, snow, or thunderstorms. Strong winds can cause the tent to collapse, leading to serious injury or property damage.
- **Anchoring:** Always ensure the tent is securely anchored to the ground using all provided ropes and ground nails. Additional anchoring may be required in certain conditions.
- **Fire Safety:** Keep all flame and heat sources away from the tent fabric. The fabric is not fireproof.
- **Assembly:** Assembly requires at least two adults. Do not attempt to assemble the tent alone. Wear appropriate safety gear, such as gloves, during assembly.
- **Site Selection:** Choose a level, clear area free from overhead obstructions (e.g., power lines, tree branches) and sharp objects on the ground.
- **Children:** Keep children away from the assembly area. Do not allow children to play unsupervised inside or around the tent.
- **Maintenance:** Regularly inspect the tent for any damage or wear. Do not use if any parts are damaged.


2. Package Contents and Components

Verify that all components are present and undamaged before beginning assembly. The tent is shipped in 3 boxes, which may arrive on different days.

Product Details



①Galvanized Steel Pipe

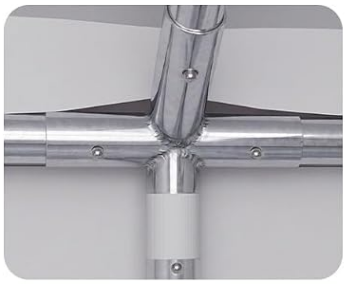


②Strengthened Connector



③High Quality Elastic Ball Traps



④Wind Ropes and Groud Nails

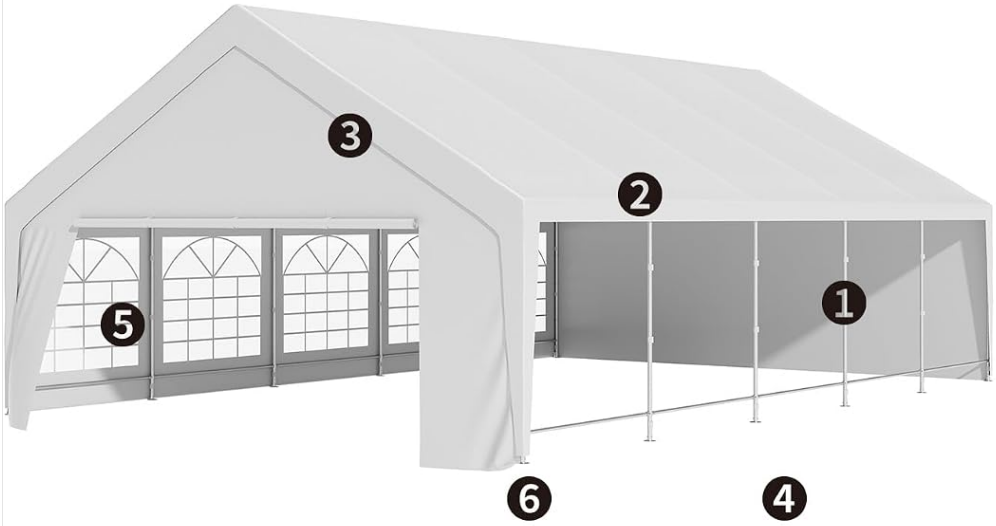



⑤PVC Side Windows



⑥Solid Base Plate

Image: Key components of the LAUSAINT HOME 20x30 Party Tent, including frame parts and securing accessories.

Component List:

- Galvanized Steel Pipes (various lengths for frame structure)
- Strengthened Connectors (for joining steel pipes)
- High Quality Elastic Ball Traps (for securing canopy and sidewalls)
- Wind Ropes and Ground Nails (for anchoring the tent)
- PVC Side Windows (clear panels for light and visibility)
- Solid Base Plates (for stable ground contact)
- 180g PE Canopy Fabric (roof cover)
- 150g PE Sidewall Fabrics (removable side and end panels)
- Dual-zipper Roll-Up Door Panels



Image: Illustration indicating that the tent components are shipped in three separate boxes.

3. Setup Instructions

Assembly typically takes approximately 1 hour with 2 people. Follow these steps carefully for proper installation.



Image: Exploded view of the tent frame and removable sidewalls, illustrating the modular design.

Step-by-Step Assembly:

1. **Unpack and Sort:** Carefully unpack all boxes and lay out all components. Identify each part using the component list.
2. **Assemble the Roof Frame:** Connect the galvanized steel pipes for the roof structure using the strengthened connectors. Ensure all connections are secure.
3. **Attach the Canopy:** Drape the 180g PE canopy fabric over the assembled roof frame. Secure it using the elastic ball traps, ensuring it is taut and evenly distributed.
4. **Assemble the Leg Supports:** Attach the vertical galvanized steel pipes to the roof frame, inserting them into the solid base plates at the bottom.
5. **Raise the Frame:** With at least two people, carefully lift the entire frame into its upright position.
6. **Install Sidewalls:** Attach the 150g PE sidewall fabrics to the frame using the elastic ball traps. The sidewalls are removable, allowing for flexible configurations (fully enclosed, semi-open, or fully open).

7. **Install End Panels/Doors:** Attach the end panels, including the dual-zipper roll-up door panels, to the frame.
8. **Secure the Tent:** Use all provided wind ropes and ground nails to firmly anchor the tent to the ground. Ensure ropes are tensioned correctly to prevent movement in wind.

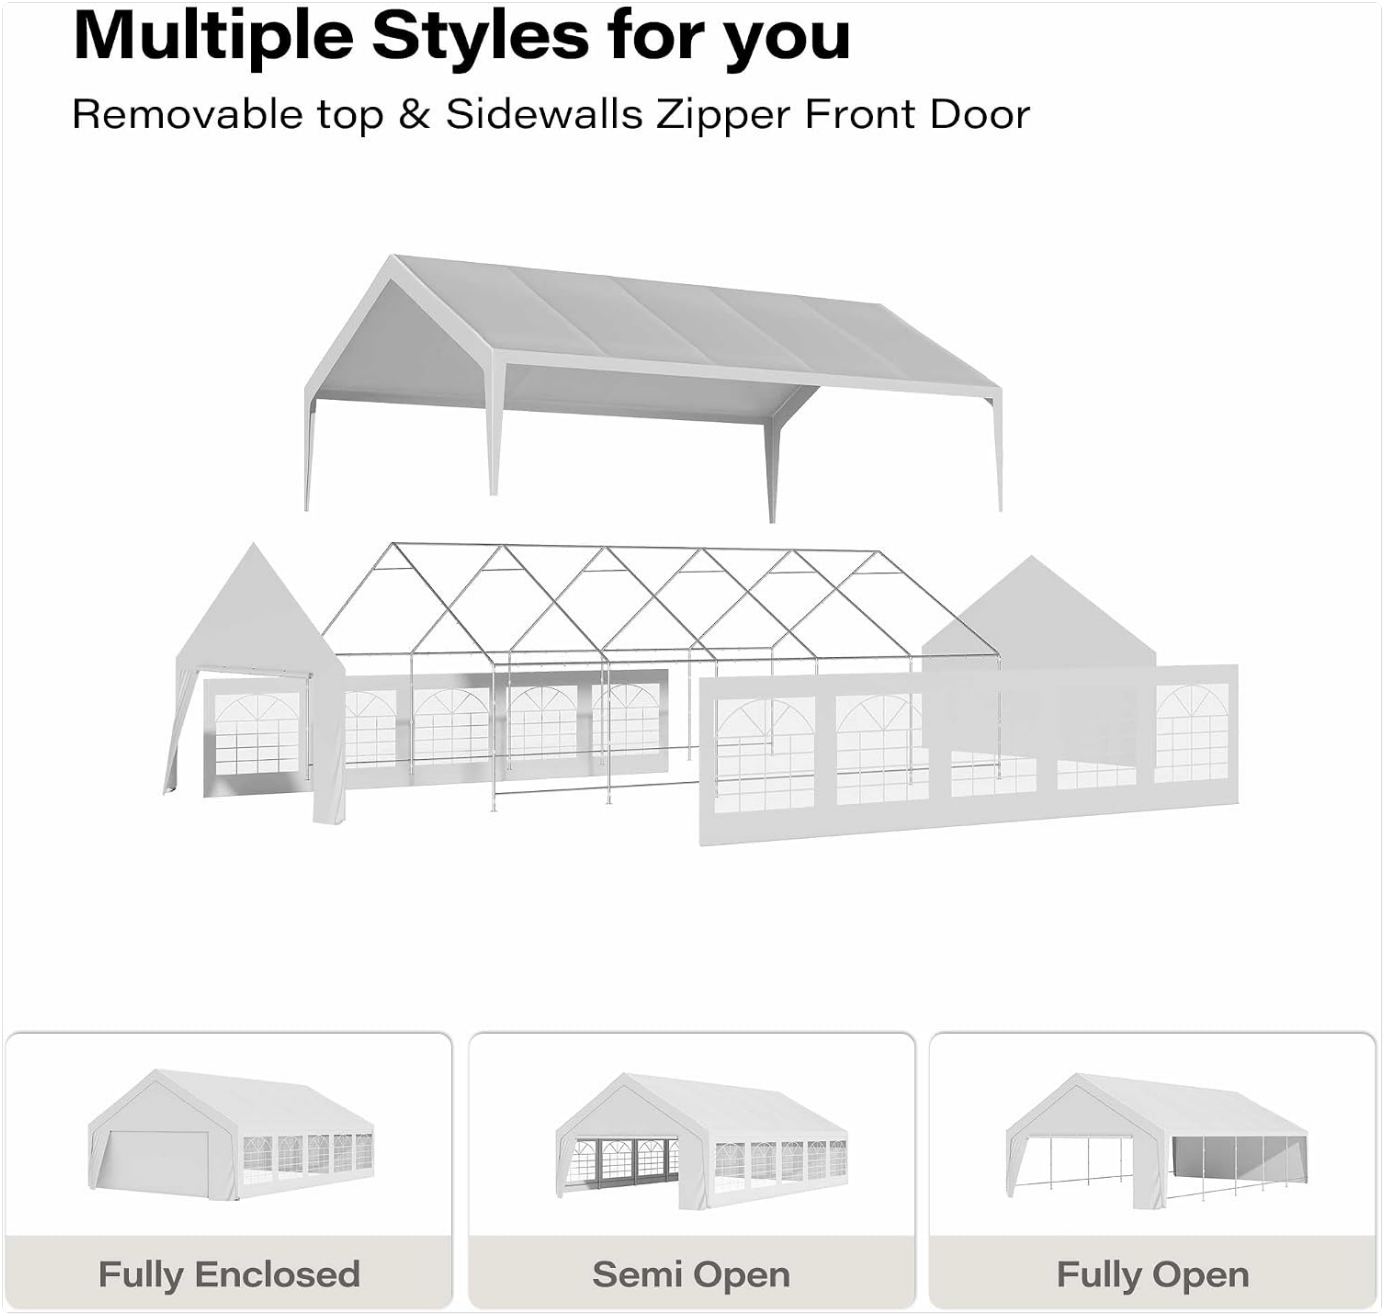


Image: Visual representation of the tent's flexible configurations: fully enclosed, semi-open, and fully open.

4. Operating Instructions

The LAUSAINT HOME Party Tent offers versatile usage options for various events.

Sidewall Configuration:

- **Fully Enclosed:** Attach all sidewalls and end panels for maximum protection from elements and privacy. This configuration is suitable for cooler weather or when a contained space is desired.
- **Semi-Open:** Remove some sidewalls to allow for airflow and partial openness. This is ideal for moderate weather or when a balance of shade and ventilation is needed.
- **Fully Open:** Remove all sidewalls and end panels to create an open canopy structure. This is perfect for hot weather, providing shade without restricting airflow, or for events where an open-air feel is preferred.

Roll-Up Doors:

The end panels feature dual-zipper roll-up doors. Unzip the doors and roll them up, securing them with the integrated tie-down straps to create an entrance or exit. Ensure doors are fully secured when rolled up to prevent flapping in the wind.

Weather Protection:



Image: The tent providing shelter during rain and protection from sun, demonstrating its weather-resistant properties.

- **Waterproof:** The 180g PE canopy and 150g PE sidewalls are waterproof, offering protection from light to moderate rain. In heavy rain, water may accumulate, and it is recommended to monitor and clear any pooling water to prevent damage.
- **UV Protection:** The canopy provides UV50+ sun protection, shielding occupants from harmful ultraviolet rays.

5. Maintenance

Proper maintenance will extend the lifespan of your party tent.

- **Cleaning Fabric:** Clean the canopy and sidewalls with mild soap and water. Do not use harsh detergents, bleach, or abrasive cleaners, as these can damage the fabric's waterproof coating and color. Rinse thoroughly and allow to air dry completely before storage.
- **Cleaning Frame:** Wipe down the galvanized steel frame with a damp cloth to remove dirt and debris. Ensure all metal parts are dry to prevent rust.
- **Inspection:** Before and after each use, inspect all components for signs of wear, tear, rust, or damage. Pay close attention to fabric integrity, zipper functionality, and frame connections. Replace any damaged parts immediately.
- **Storage:** Ensure the tent fabric and frame are completely dry before disassembling and storing. Store all components in a cool, dry place, away from direct sunlight and extreme temperatures. Fold fabric neatly to prevent creases and damage.

6. Troubleshooting

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Tent is unstable or sways in light wind.	Insufficient anchoring; loose frame connections.	Ensure all wind ropes are securely fastened and tensioned. Verify all ground nails are fully inserted. Check that all frame connectors are tightly secured.
Water pooling on the canopy.	Canopy not taut enough; heavy rainfall.	Adjust canopy tension using elastic ball traps to ensure a tight fit. Regularly clear any accumulated water from the canopy during rainfall.
Zippers on sidewalls/doors are sticking.	Dirt or debris in zipper teeth; lack of lubrication.	Clean zipper teeth with a small brush. Apply a silicone-based lubricant or zipper wax to improve movement.
Frame parts do not fit together.	Incorrect part orientation; manufacturing defect.	Double-check the instruction manual for correct part orientation. If parts are clearly defective, contact customer support.

7. Specifications

Feature	Detail
Brand	LAUSAINT HOME
Model Number	GZPE010-002-WH2
Product Dimensions (L x W x H)	240" x 360" x 145" (20ft x 30ft x 12ft)
Floor Area	600 square feet
Capacity	35-60 people seated / up to 100 standing
Frame Material	Galvanized Steel
Canopy Material	180g PE (Polyethylene)
Sidewall Material	150g PE (Polyethylene)

Feature	Detail
Water Resistance Level	Waterproof
UV Protection	UV50+
Color	White
Assembly Time	Approx. 1 hour (with 2 people)
Packaging	Ships in 3 boxes

8. Warranty and Support

Warranty Information:

Specific warranty details for the LAUSAINT HOME 20x30 Party Tent are typically provided at the point of purchase or within the product packaging. Please refer to your purchase documentation or contact the seller directly for comprehensive warranty terms and conditions.

Customer Support:

For any questions, missing parts, or assistance with assembly or troubleshooting, please contact LAUSAINT HOME customer support. You can typically find contact information on the seller's page or the LAUSAINT HOME official website.
LAUSAINT HOME Customer Service: Visit the LAUSAINT HOME Store on Amazon

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GTRNNY1D

More documents and user manuals: **https://manuals.plus/**