Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Aspes AL7205AIDV

Aspes AL7205AIDV 7 kg Front-Load Washing Machine User Manual

Model: AL7205AIDV | Brand: Aspes

Introduction | Setup & Installation | Operating Instructions | Maintenance | Troubleshooting | Specifications | Warranty & Support

1. Introduction

Thank you for choosing the Aspes AL7205AIDV 7 kg Front-Load Washing Machine. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before installation and operation, and keep it for future reference.

1.1 Safety Instructions

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the washing machine.
- Unplug the appliance before cleaning or maintenance.
- Do not wash items that have been cleaned in, washed with, or saturated with combustible or explosive substances.
- Keep pets away from the appliance.

2. Setup & Installation

Proper installation is crucial for the performance and longevity of your washing machine. Follow these steps carefully.

2.1 Unpacking and Removing Transit Bolts

Carefully remove all packaging materials. Before using the machine, it is essential to remove the transit bolts located at the rear of the appliance. These bolts secure the drum during transport and must be removed to prevent damage during operation. Store them for future transport if needed.

2.2 Location and Leveling

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and maintenance. Use a spirit level to check if the machine is perfectly level. Adjust the adjustable feet at the bottom of the machine until it is stable and level. An unlevel machine can cause excessive vibration and noise.

2.3 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks. Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.

2.4 Electrical Connection

Connect the power cord to a grounded electrical outlet. Ensure the voltage and frequency match the specifications of your appliance. Do not use extension cords or adapters.



Figure 1: Front view of the Aspes AL7205AIDV washing machine with the door open, showing the drum and control panel.

3. Operating Instructions

This section guides you through the daily use of your Aspes AL7205AIDV washing machine.

3.1 Control Panel Overview

The intuitive LED display and control knob allow for easy program selection and customization.



Figure 2: Close-up of the control panel, showing the program dial, LED display, and function buttons.

3.2 Loading Laundry

Open the XXL door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. The maximum capacity is 7 kg.

3.3 Adding Detergent and Softener

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent to the main wash compartment and fabric softener to its designated compartment. Refer to your detergent packaging for recommended dosages.

3.4 Program Selection

Turn the program selection knob to choose one of the 14 available programs. The LED display will show the default settings for the selected program. Programs include options for various fabric types, temperatures, and special cycles like:

- **Eco-logic System:** Automatically adjusts water and energy consumption based on load size for optimal

efficiency.

- **Anti-Allergy Steam Program:** Utilizes steam to eliminate allergens and bacteria, ideal for sensitive skin.
- **My Cycle:** Allows you to save and recall your favorite customized wash settings.
- **Delayed Start:** Set the machine to start a cycle at a later time, up to 24 hours.

3.5 Starting a Wash Cycle

After selecting the program and any desired options, press the Start/Pause button to begin the cycle. The machine will automatically proceed through the wash, rinse, and spin phases.

4. Maintenance

Regular maintenance ensures optimal performance and extends the life of your washing machine.

4.1 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent residue buildup. Rinse it under running water and reinsert it.

4.2 Cleaning the Drum

The machine features an internal cleaning program. Run this program regularly (e.g., once a month) without laundry and with a suitable washing machine cleaner to maintain drum hygiene.

4.3 Cleaning the Drain Filter

Locate the drain filter at the bottom front of the machine. Open the cover, place a shallow container underneath to catch water, and carefully unscrew the filter. Clean any lint or debris, then screw it back in securely.

4.4 Exterior Care

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents. Clean the door seal regularly to remove any trapped lint or moisture.

5. Troubleshooting


If you encounter issues with your washing machine, refer to the following common problems and solutions before contacting service.

- **Machine does not start:** Check if the power cord is plugged in, the door is fully closed, and the Start/Pause button has been pressed.
- **No water intake:** Ensure the water tap is open and the inlet hose is not kinked or blocked.
- **Water not draining:** Check if the drain hose is kinked or blocked, and clean the drain filter.
- **Excessive vibration/noise:** Ensure the machine is level and that all transit bolts have been removed. Check if the load is unbalanced.
- **Error codes:** Consult the full user manual (if provided separately) for specific error code meanings and solutions.

6. Specifications

Detailed technical information for the Aspes AL7205AIDV washing machine.

Model Number	AL7205AIDV
Capacity	7 kg
Spin Speed	1200 rpm
Motor Type	Inverter Motor
Energy Efficiency Class	A
Number of Programs	14
Noise Level (Spin)	72 dB
Dimensions (H x W x D)	84.5 cm x 59.8 cm x 40.5 cm
Net Weight	50 kg
Drum Material	Stainless Steel
Special Features	Eco-logic System, Inverter Motor, Anti-Allergy Steam Program, Diamond Drum
Included Components	Power cable

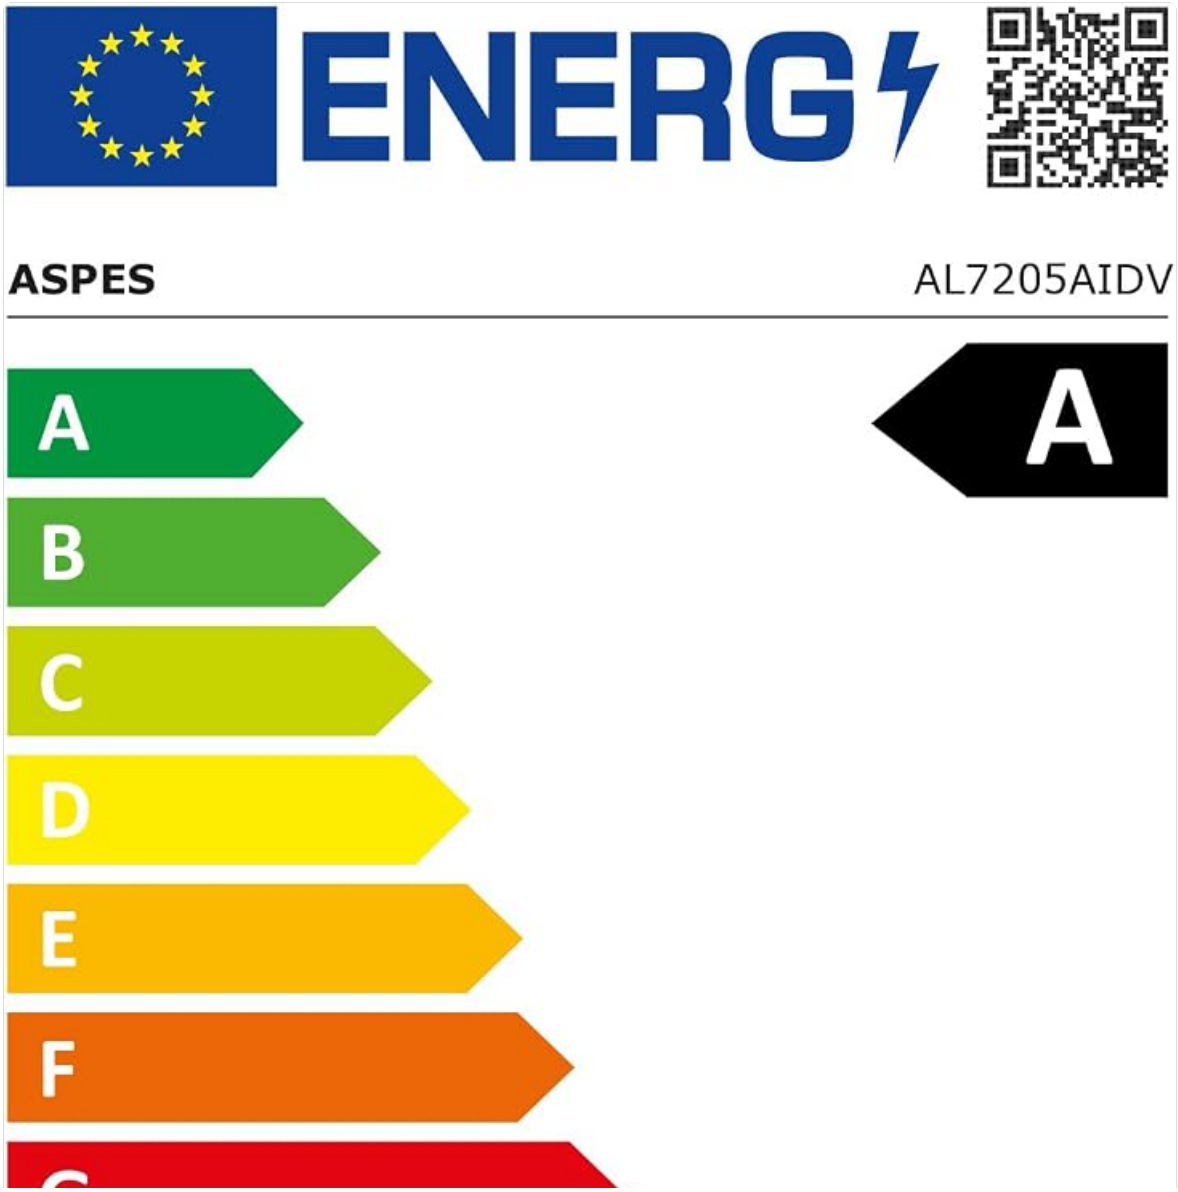

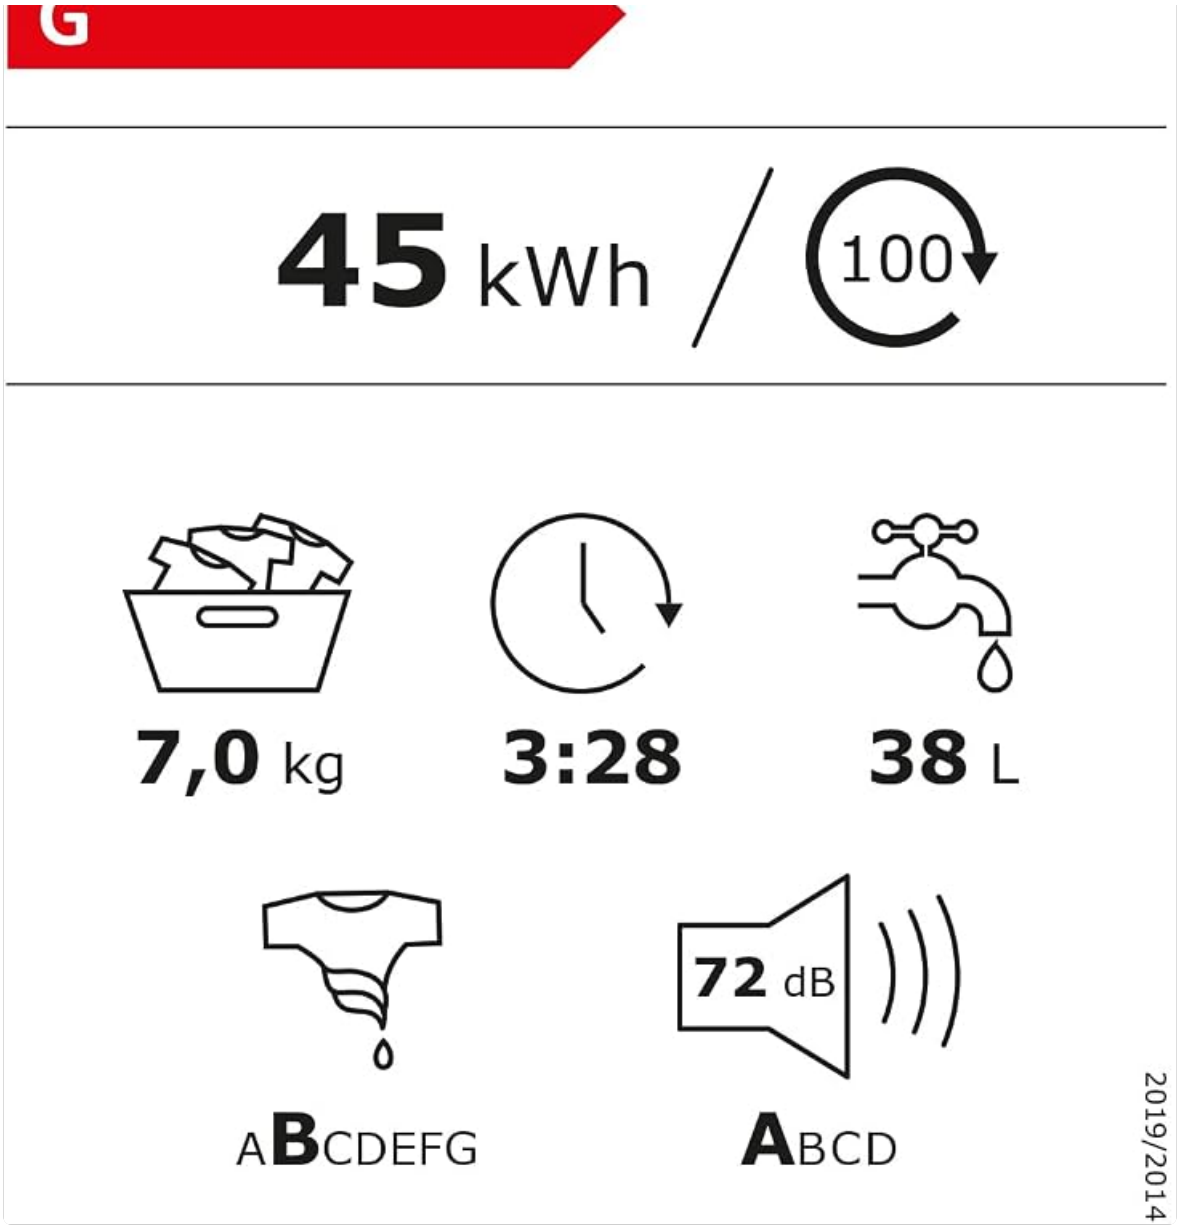


Figure 3: Energy label for the Aspes AL7205AIDV, indicating an A-class energy efficiency, 7 kg capacity, 45 kWh/100 cycles, 38 L water consumption, and 72 dB noise level.

For more detailed energy information, visit: https://eprel.ec.europa.eu/qr/2453956

7. Warranty & Support

7.1 Product Warranty

This Aspes washing machine comes with a**3-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal domestic use. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, service requests, or further inquiries, please refer to the contact information provided with your purchase documentation or visit the official Aspes website for customer support details.

© 2026 Aspes. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GTXH7X4G

More documents and user manuals: **https://manuals.plus/**