VIKICON Groomer FK-8609

VIKICON Groomer Electric Back Shaver FK-8609 User Manual

Model: FK-8609

Introduction

This manual provides detailed instructions for the safe and effective use of your VIKICON Groomer Electric Back Shaver, Model FK-8609. Please read all instructions carefully before first use and retain this manual for future reference.

Safety Information

For your safety, observe the following precautions:

- Always keep the shaver away from water while charging.
- Do not submerge the shaver in water.
- Exercise caution when using the shaver to prevent cuts and skin irritation.
- Engage the travel lock when the device is not in use to prevent accidental activation.

Product Components

The VIKICON Groomer Electric Back Shaver FK-8609 includes the following components:

- 6D Shaver Head
- Charger
- Cleaning Brush
- Foldable Handle
- Trimmer Head

Setup

1. Charging the Device

Before first use, fully charge the shaver. Connect the charger to the device and a power source. The built-in LED display will indicate the battery level and charging status. A full charge typically takes 90 minutes and provides approximately 60 minutes of work time.



Image: The shaver connected to its charger, displaying charging status and battery level on its LED screen.

2. Attaching the Handle

To attach the foldable handle, align the shaver head unit with the port on the handle and insert it firmly until it clicks into place. To remove, pull the shaver head unit upward from the handle.

Your browser does not support the video tag.

Video: Demonstrates how to align and insert the shaver head into the foldable handle, and how to remove it by pulling upwards.



Image: The shaver with its 180-degree foldable handle fully extended, showing its length and ergonomic grip.

Operating Instructions

1. General Shaving

The shaver features a 6D 360° floating head designed to follow your body's contours for an efficient and smooth shave. For optimal results, especially with longer hair, it is recommended to first trim the hair using the trimmer head (if included) or a separate trimmer, then use the 6D floating shaver head for a close finish.

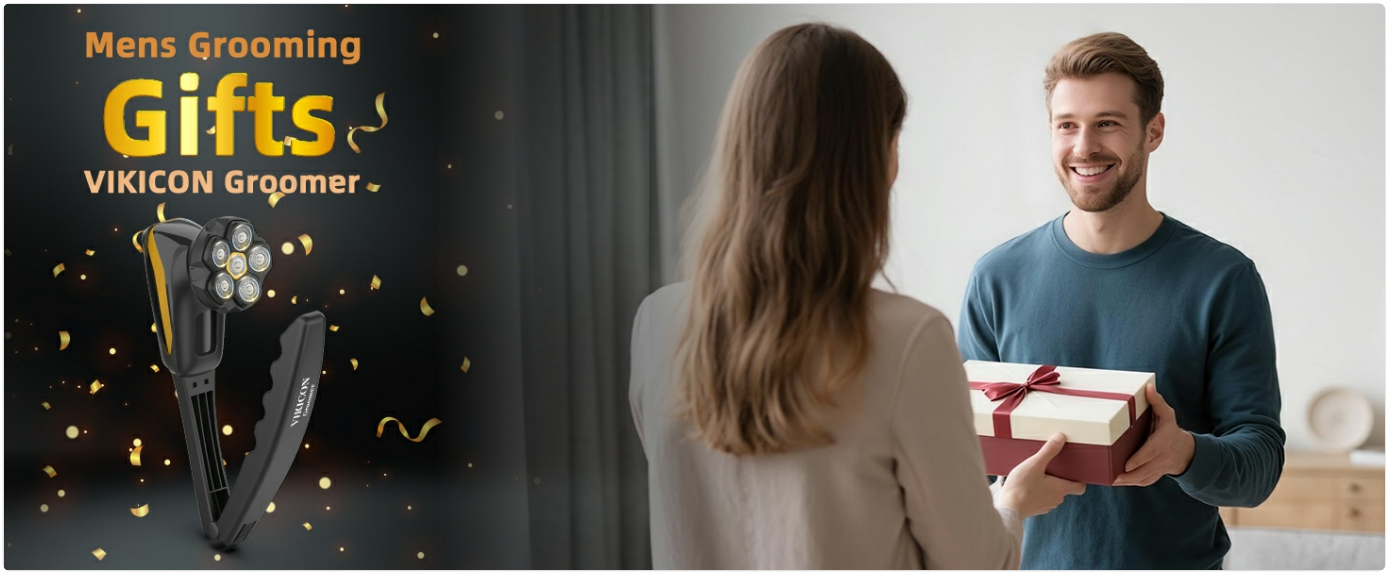


Image: A visual guide demonstrating the recommended shaving process: first using a trimmer head for longer hair, then switching to the 6D floating head for a smooth finish.

Your browser does not support the video tag.

Video: A user demonstrating the ease of use of the back shaver for independent grooming.

Your browser does not support the video tag.

Video: Shows the shaver's flexible head adjusting to the contours of the back for an even shave.

2. Wet and Dry Shaving

The shaver is IPX6 waterproof, allowing for both wet and dry shaving. It can be safely used in the shower. Ensure the charging port is dry before charging.



Image: A man using the electric back shaver in a shower, illustrating its waterproof design for wet shaving.

3. Using the Foldable Handle

The handle can be adjusted up to 180° to reach all areas of your back and body. Press the hinge buckle to unfold and adjust the handle to your desired angle. The ergonomic grip provides stable handling.



Image: The shaver's handle shown adjusting through a 180-degree range, with a tip to press the hinge buckle.

4. Travel Lock

To prevent accidental activation during travel, engage the integrated travel lock. Press and hold the power button for 3 seconds to lock or unlock the device.

Maintenance

1. Cleaning the Shaver Head

After each use, clean the blade head. The IPX6 waterproof design allows for easy rinsing under running water. Use the included cleaning brush to remove any trapped hairs from the foil and blades. Ensure the shaver is turned off before cleaning.

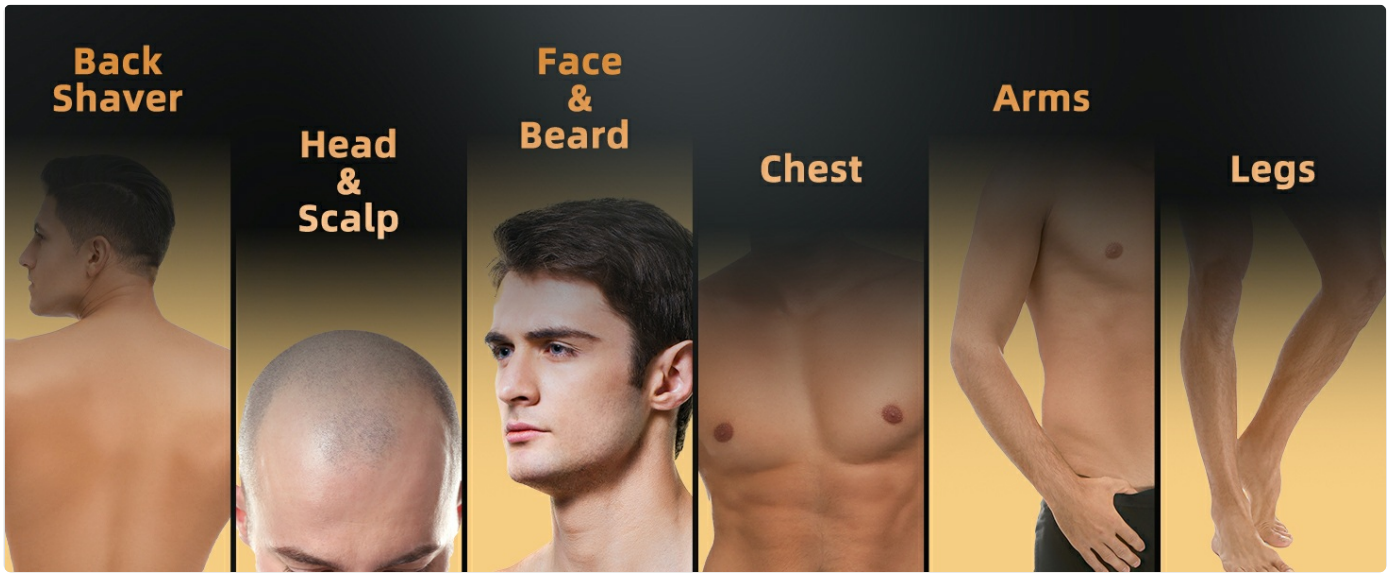


Image: The shaver head being rinsed under running water, demonstrating its waterproof cleaning capability.

Troubleshooting

- **Shaver not turning on:** Ensure the device is charged. Check the LED display for battery level. If the travel lock is engaged, press and hold the power button for 3 seconds to unlock.
- **Poor shaving performance / not shaving close enough:**

- Ensure the shaver head is clean and free of hair debris.
- For longer hair, pre-trimming with a trimmer head is recommended before using the 6D floating shaver head.
- Ensure the shaver is fully charged for optimal motor speed.

- **Skin irritation:** Ensure your skin is clean before shaving. Use the shaver gently, allowing the floating head to adapt to your contours. Consider wet shaving with shaving cream or gel for increased comfort.

Specifications

Feature	Detail
Model Number	FK-8609
Power Source	Battery Powered (Rechargeable)
Battery Type	1 C battery (included)
Battery Average Life	60 minutes (work time)
Charging Time	Approx. 90 minutes
Head Type	6D Floating Foil Head
Number of Blades	6
Blade Material	Stainless Steel
Waterproof Rating	IPX6
Handle Adjustment	180° Foldable
Color	Black
Package Dimensions	10.75 x 3.7 x 3.54 inches
Item Weight	1.32 Pounds

Warranty and Support

The VIKICON Groomer Electric Back Shaver FK-8609 comes with a**2-year warranty**. For any product inquiries, technical assistance, or warranty claims, please contact VIKICON Groomer customer support. Refer to the product packaging or the official VIKICON Groomer website for contact details.

© 2026 VIKICON Groomer. All rights reserved.