Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Nordivale H21433-63WH-02

Nordivale 63 inch Fireplace TV Stand Instruction Manual

Model: H21433-63WH-02 | Brand: Nordivale

1. Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your Nordivale 63 inch Fireplace TV Stand. This entertainment center features a 3-sided electric fireplace, ample storage, and a modern farmhouse design, suitable for TVs up to 70 inches. Please read all instructions carefully before assembly and use to ensure safe and proper operation.



Image: The Nordivale 63 inch Fireplace TV Stand in an antique white finish with a dark wood top, featuring an electric fireplace and supporting a television.

2. Important Safety Information

Please observe the following safety precautions to reduce the risk of fire, electric shock, or injury.

- Read all instructions before installing or using this appliance.
- Do not operate the fireplace with a damaged cord or plug, or if the heater has malfunctioned or been dropped/damaged.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater.
- Never place the TV stand in a location where it may fall into a bathtub or other water container.
- Always unplug the fireplace when not in use.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord

away from traffic area and where it will not be tripped over.

- Ensure the TV stand is placed on a stable, level surface.
- Do not overload the tabletop or shelves. Refer to specifications for weight limits.

3. Package Contents

Your Nordivale Fireplace TV Stand is shipped in two separate packages. Please ensure all components are present before beginning assembly. Refer to the detailed parts list provided in the included assembly guide.

Typical components include:

- Top Panel
- Side Panels (Left and Right)
- Back Panel
- Base Panels
- Drawer Components
- Hidden Storage Door Panels
- Adjustable Shelves
- Electric Fireplace Insert
- Hardware (screws, dowels, cam locks, hinges, handles)
- Remote Control for Fireplace
- Assembly Tool (Allen wrench)

4. Assembly Instructions

Assembly of this multi-piece furniture requires sufficient time and may benefit from two people. Follow the detailed step-by-step instructions and diagrams provided in the separate assembly guide. All components are clearly labeled and numbered for your convenience.

General Assembly Steps:

1. **Unpack and Identify Parts:** Carefully unbox all packages and lay out components on a soft, clean surface to prevent scratches. Verify all parts against the parts list.
2. **Attach Legs/Base:** Secure the base components to the bottom of the side panels using the provided screws and tool.
3. **Connect Side and Back Panels:** Use dowels and cam locks to connect the side panels to the back panel, forming the main frame.
4. **Install Shelves:** Insert adjustable shelves into the pre-drilled holes within the side compartments.
5. **Assemble Drawers:** Follow instructions to assemble the two removable drawers and install them into their designated slots.
6. **Attach Doors:** Secure the hidden storage doors using hinges and screws.
7. **Install Electric Fireplace:** Carefully slide the electric fireplace insert into the central opening. Ensure it is securely seated.
8. **Attach Top Panel:** Secure the top panel to the assembled frame.

Product Dimensions



Image: A diagram illustrating the dimensions of the TV stand (63"W x 16.85"D x 35.31"H) and the maximum top load capacity of 132 lbs.



Image: A visual guide indicating that the TV stand is suitable for televisions up to 70 inches.

Your browser does not support the video tag.

Video: An overview of the 63 inch Fireplace TV Stand, demonstrating its features and design. This video provides a visual aid for understanding the product's components and overall appearance.

5. Operating the Electric Fireplace

The integrated 36-inch electric fireplace offers various settings for ambiance and warmth. It can be controlled via the front panel buttons or the included remote control.

Fireplace Features:

- **Heater Control:** Adjust temperature from 60°F to 99°F. The heater provides 1000W or 1500W heat output.
- **Flame Colors:** Choose from 12 different flame colors to match your mood or decor.
- **Flame Brightness:** Select from 5 levels of flame brightness (L1 to L5) to create the desired visual effect, from dim to

bright.

- **Timer Function:** Set an automatic shut-off timer from 0.5 to 9 hours.
- **Thermal Overload Protection:** The unit is equipped with safety features to prevent overheating.



Image: A detailed graphic illustrating the electric fireplace's features, including heater control (60°F-99°F), timer function (0.5-9H), heat modes (1000W/1500W), thermal overload protection, 5 levels of brightness (L1-L5), and 12 flame color options.



Image: A cozy living room scene with the fireplace TV stand, highlighting its low noise operation and gentle warmth for a restful environment.

6. Storage Features

The TV stand is designed with multiple storage options to help keep your living space organized.

- **Spacious Tabletop:** The 63-inch wide tabletop provides ample space for your television and decorative items.
- **Two Removable Drawers:** Two drawers offer convenient storage for smaller items, helping to maintain a tidy appearance.
- **Two Hidden Side Cabinets:** Concealed storage spaces on either side of the fireplace provide additional room for media accessories, books, or other necessities. These cabinets may include adjustable shelves for flexible organization.
- **Cable Management:** A cable management hole is integrated to help organize and hide wires, ensuring a clean setup.



Image: A detailed view of the TV stand's storage, showing the spacious tabletop, two tip-out drawers, and two hidden side cabinets with items stored inside.

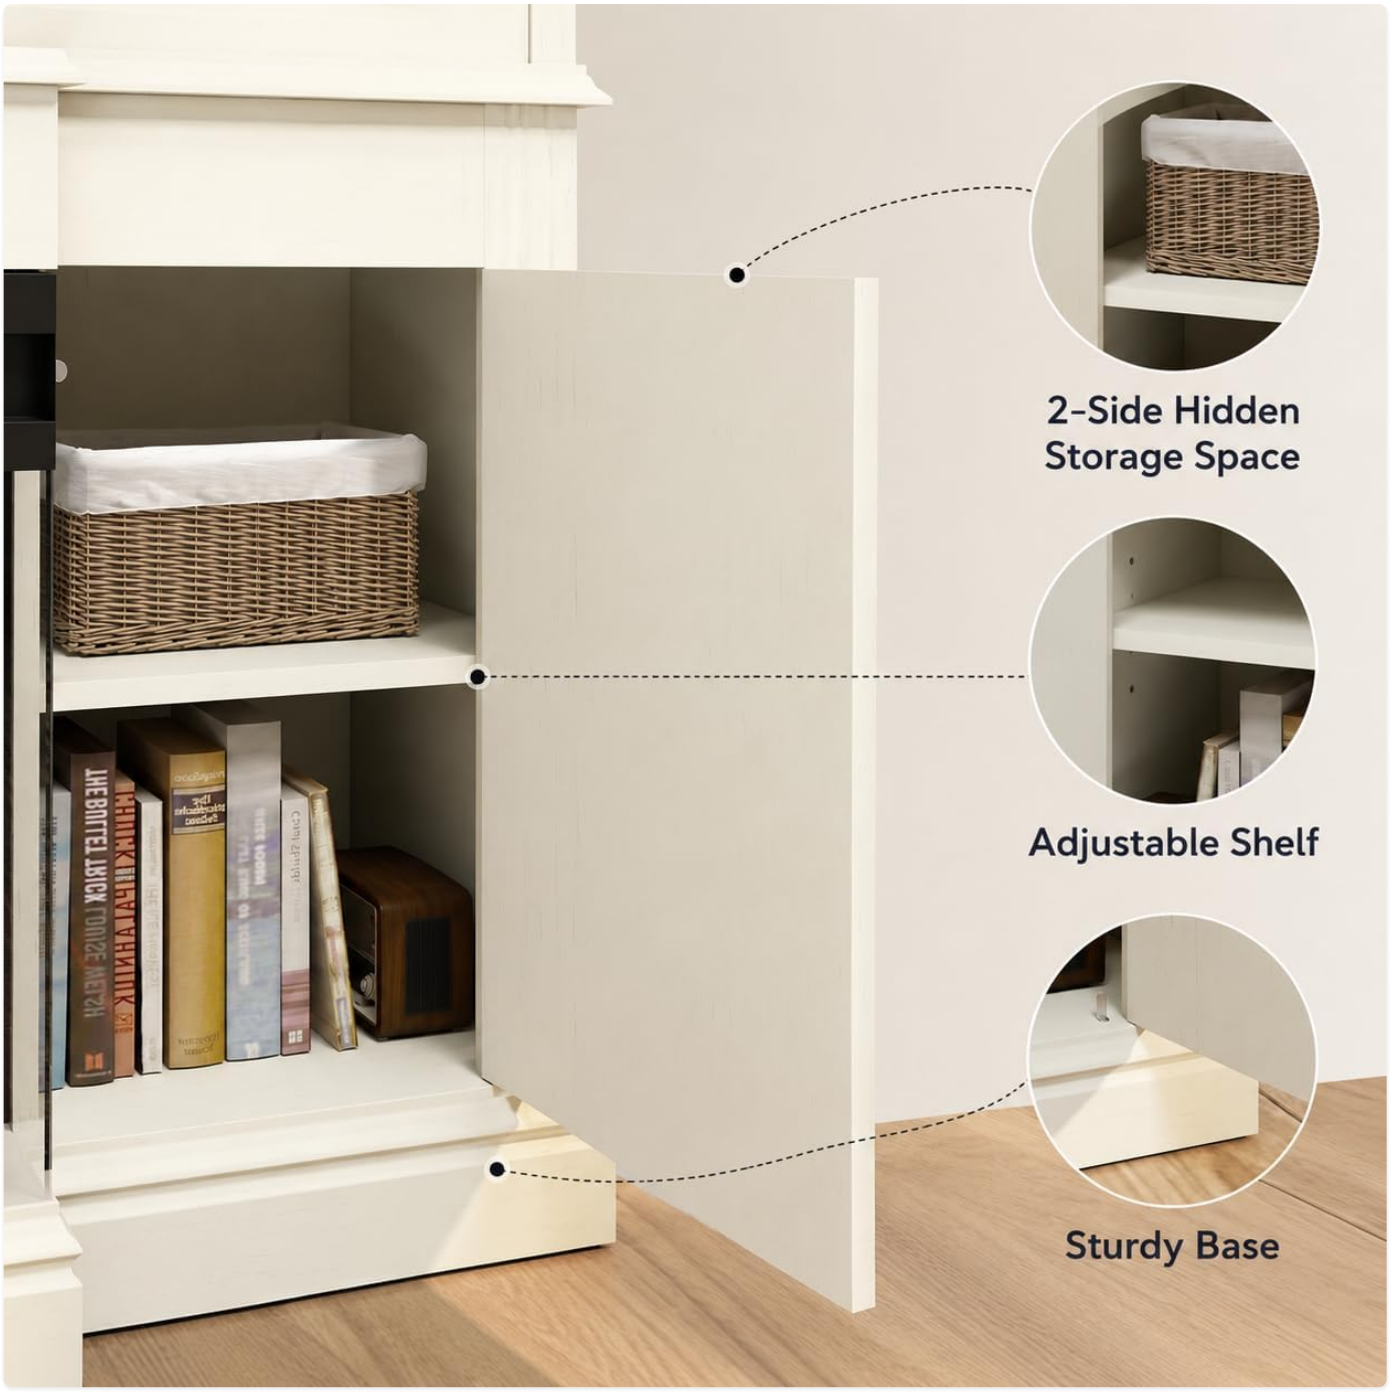


Image: A close-up of the side cabinet, demonstrating the two-side hidden storage space and an adjustable shelf for versatile organization.

7. Maintenance and Care

Proper care will extend the life and appearance of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Dusting:** Regularly dust all surfaces with a dry, soft cloth.
- **Spills:** Clean spills immediately with a clean, dry cloth to prevent staining.
- **Electric Fireplace:** Ensure the fireplace is unplugged before cleaning. Wipe the exterior with a damp cloth. Do not spray water directly onto the unit.
- **Hardware:** Periodically check and tighten all screws and fasteners to ensure stability.

8. Troubleshooting

If you encounter issues with your TV stand or electric fireplace, refer to the following common solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power switch off, remote battery low.	Check power outlet, ensure power switch is ON, replace remote batteries.
No heat output.	Heater function off, temperature setting too low, thermal overload activated.	Activate heater function, increase temperature, unplug for 5 minutes to reset thermal overload.
Flames are not visible or dim.	Flame brightness setting too low.	Increase flame brightness level using controls or remote.
Stand is wobbly after assembly.	Loose fasteners.	Ensure all screws and cam locks are fully tightened. Check for uneven flooring.

If problems persist, please contact customer support.

9. Product Specifications

Feature	Detail
Brand	Nordivale
Model Name	H21433-63WH-02
Product Dimensions (D x W x H)	16.85"D x 63"W x 35.31"H
Material	Engineered Wood
Finish Type	Painted (Antique White)
Power Source	Corded Electric
Heat Output	1500 Watts
Special Feature	Adjustable Flame, Timer Function, Thermal Overload Protection
Max. TV Size Supported	Up to 70 inches
Tabletop Load Capacity	Up to 132 lbs
Shelf Load Capacity	Up to 44 lbs per shelf

10. Warranty and Support

For warranty information or customer support, please refer to the documentation included with your product or contact Nordivale-service directly through your purchase platform. Nordivale-service offers 30-day easy returns and customer support.

Contact Information: Please refer to your purchase receipt or the official Nordivale website for the most current customer service contact details.

© 2026 Nordivale. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GWM8SNHD

More documents and user manuals: **https://manuals.plus/**