Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lefant M210 Pro OMNI

Lefant M210 Pro OMNI Robot Vacuum and Mop User Manual

Model: M210 Pro OMNI

Introduction

Welcome to the user manual for your new Lefant M210 Pro OMNI Robot Vacuum and Mop. This device is designed to provide efficient and convenient floor cleaning, combining powerful vacuuming with advanced mopping capabilities. Please read this manual thoroughly before operating the device to ensure safe and optimal performance.



Image: The Lefant M210 Pro OMNI Robot Vacuum and Mop with its charging station.

Setup

1. Unboxing and Placement

Carefully remove all components from the packaging. Place the charging base against a wall in an open area, ensuring there are no obstacles within 1 meter (3 feet) to the front and 0.5 meters (1.5 feet) to the sides. Connect the power adapter to the charging base and plug it into a wall outlet.

2. Initial Charging

Place the robot onto the charging base. Ensure the charging contacts on the robot align with those on the base. The indicator light on the robot will show charging status. Fully charge the robot before its first use, which typically takes several hours.

3. App Setup

The Lefant app allows for smart control and customization of your robot vacuum. Follow these steps to set up the app:

1. **Power on the robot:** Press and hold the Start/Pause button for 3 seconds.
2. **Download the Lefant App:** Scan the QR code or download the Lefant app from the App Store or Google Play. Download the Lefant App here.
3. **Enter pairing mode:** Press and hold the Start/Pause button for 6 seconds until the indicator light starts flashing.
4. **Add your device:** Open the Lefant app, tap "Add Device", and select M210 Pro OMNI from the device list.
5. **Connect to Wi-Fi:** Choose your home Wi-Fi network and enter the password. Both 2.4G and 5G Wi-Fi are supported.
6. **Complete pairing:** Keep your phone, router, and robot close together until pairing is complete.

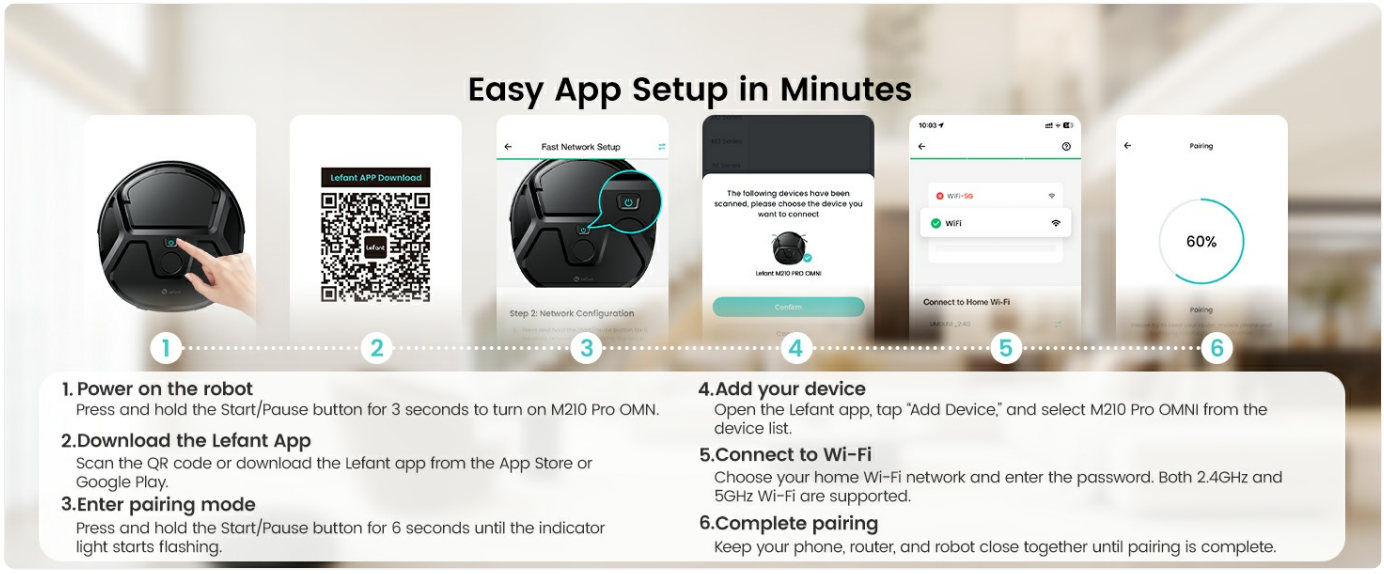


Image: Visual guide for setting up the Lefant App.

4. Alexa Setup

Integrate your Lefant M210 Pro OMNI with Amazon Alexa for voice control:

1. **Open voice access in the Lefant App:** Go to Mine, and select Voice Third-Party Access Service.
2. **Save your voice account information:** Record the voice account and password shown in the Lefant App.
3. **Open the Alexa App.**
4. **Search for "Smart Life":** Enter Smart Life in the search bar and select the correct skill.
5. **Enable the skill:** Tap Enable to Use to start account linking.
6. **Link your account:** Select your region, then enter the voice account and password from Step 2.
7. **Complete the connection:** Wait until the account is successfully linked. You can now control M210 Pro OMNI with Alexa.

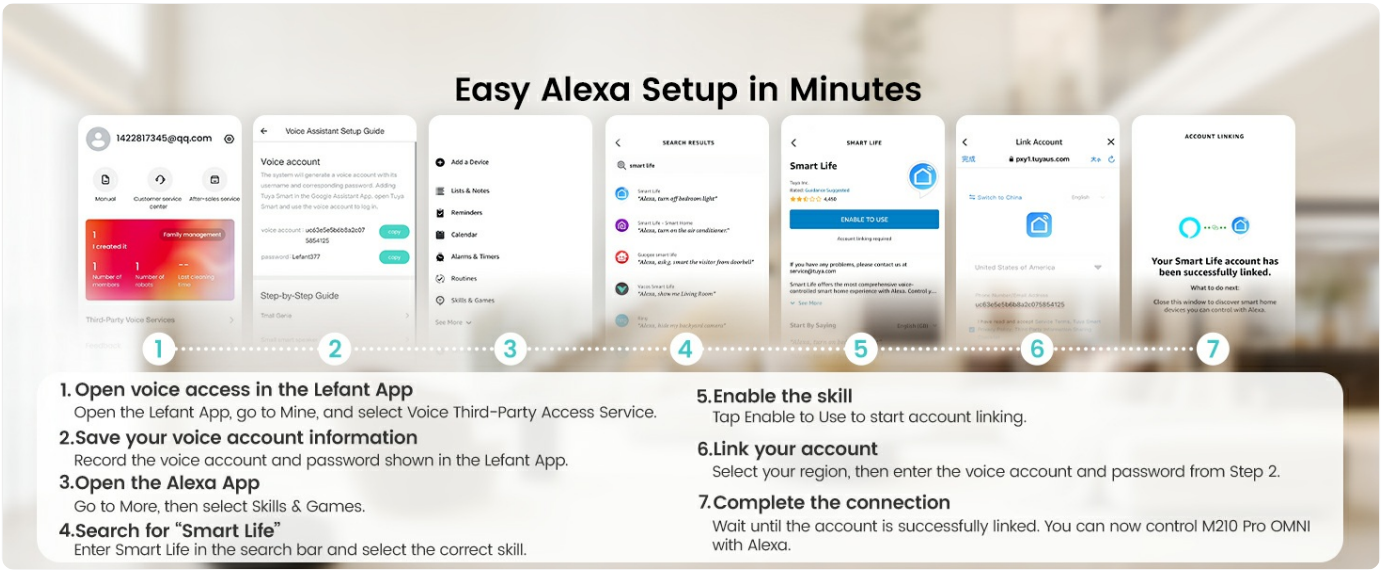


Image: Visual guide for setting up Alexa voice control.

Operating Instructions

1. Cleaning Modes

The M210 Pro OMNI offers versatile cleaning options:

- **Vacuuming:** Utilizes 20,000Pa strong suction to pick up dust, crumbs, and pet hair. The tangle-free suction port is ideal for pet owners.
- **Mopping:** Features a self-cleaning roller mop that continuously refreshes with clean water and extracts dirty water, ensuring streak-free cleaning.
- **Vacuum & Mop in One Pass:** The robot can simultaneously vacuum and mop, handling both dry debris and wet messes efficiently.



Image: The robot vacuum demonstrating its powerful pressurized roller mop cleaning various spills.



Image: Illustration of the robot's 20,000Pa powerful suction lifting debris from a carpet.

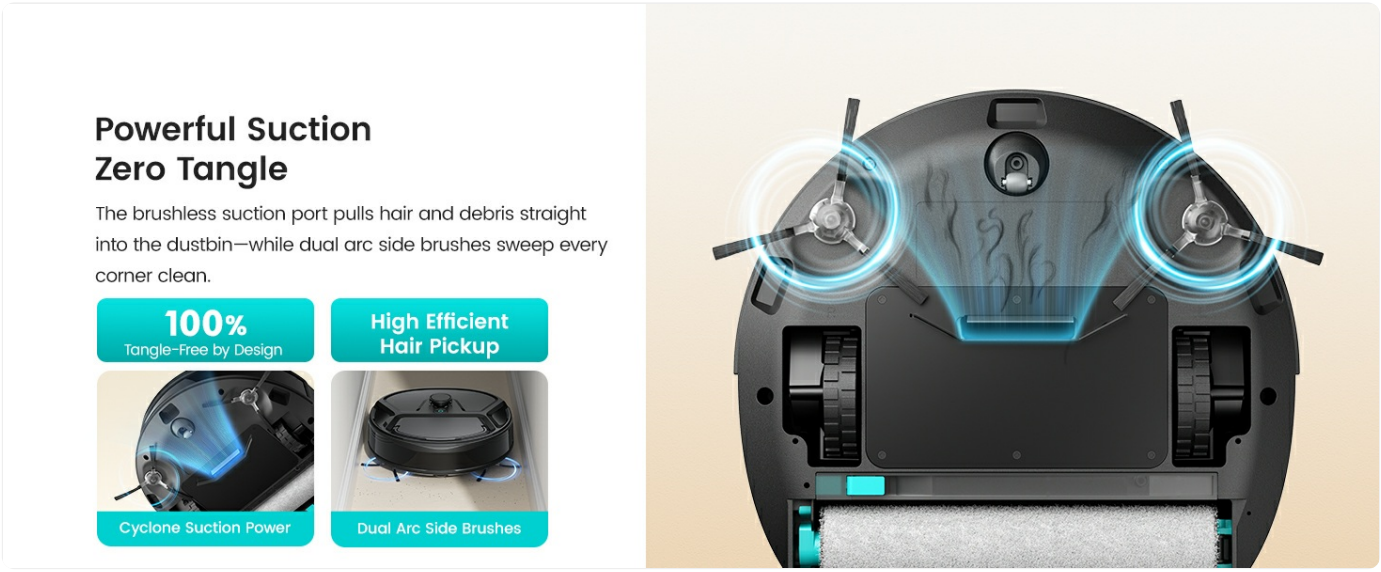


Image: Diagram showing the tangle-free suction port and dual arc side brushes for efficient hair pickup.

2. Navigation and Obstacle Avoidance

The robot uses LiDAR navigation to map your home and plan efficient cleaning paths. Upgraded sensors enable precision obstacle avoidance and carpet detection, preventing collisions and accidental wetting. Its slim 280mm body allows it to clean under furniture and in narrow spaces.

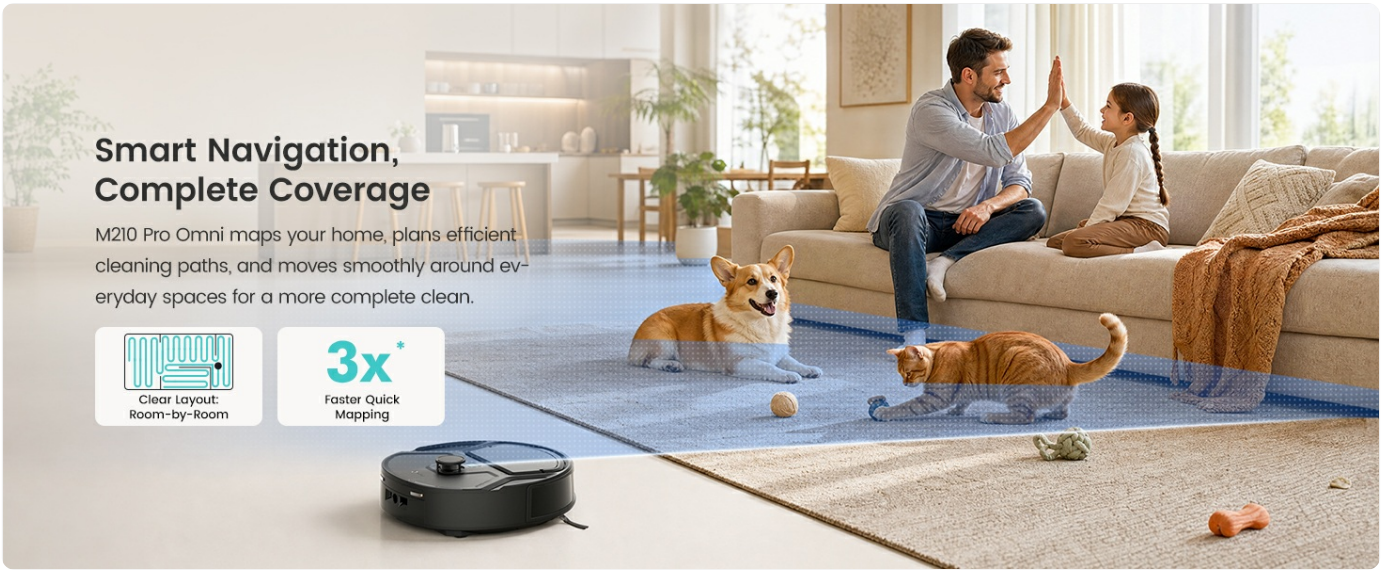


Image: Illustration of the robot using LiDAR navigation to map a room and plan its cleaning route.



Image: Comparison showing the slim design of the Lefant M210 Pro OMNI fitting under furniture.

3. Smart App Control

The Lefant app provides comprehensive control over your robot vacuum:

- **Scheduled Cleanings:** Set specific times for the robot to clean automatically.
- **No-Go Zones:** Define virtual boundaries to prevent the robot from entering certain areas.
- **Custom Cleaning:** Select specific rooms or areas for cleaning.
- **Water Flow Control:** Adjust the water level for mopping (3 levels).
- **Suction Control:** Adjust the suction power (4 levels).
- **Room by Room Mapping:** View and manage your home's map.
- **Do Not Disturb Mode:** Prevent cleaning during specific hours.

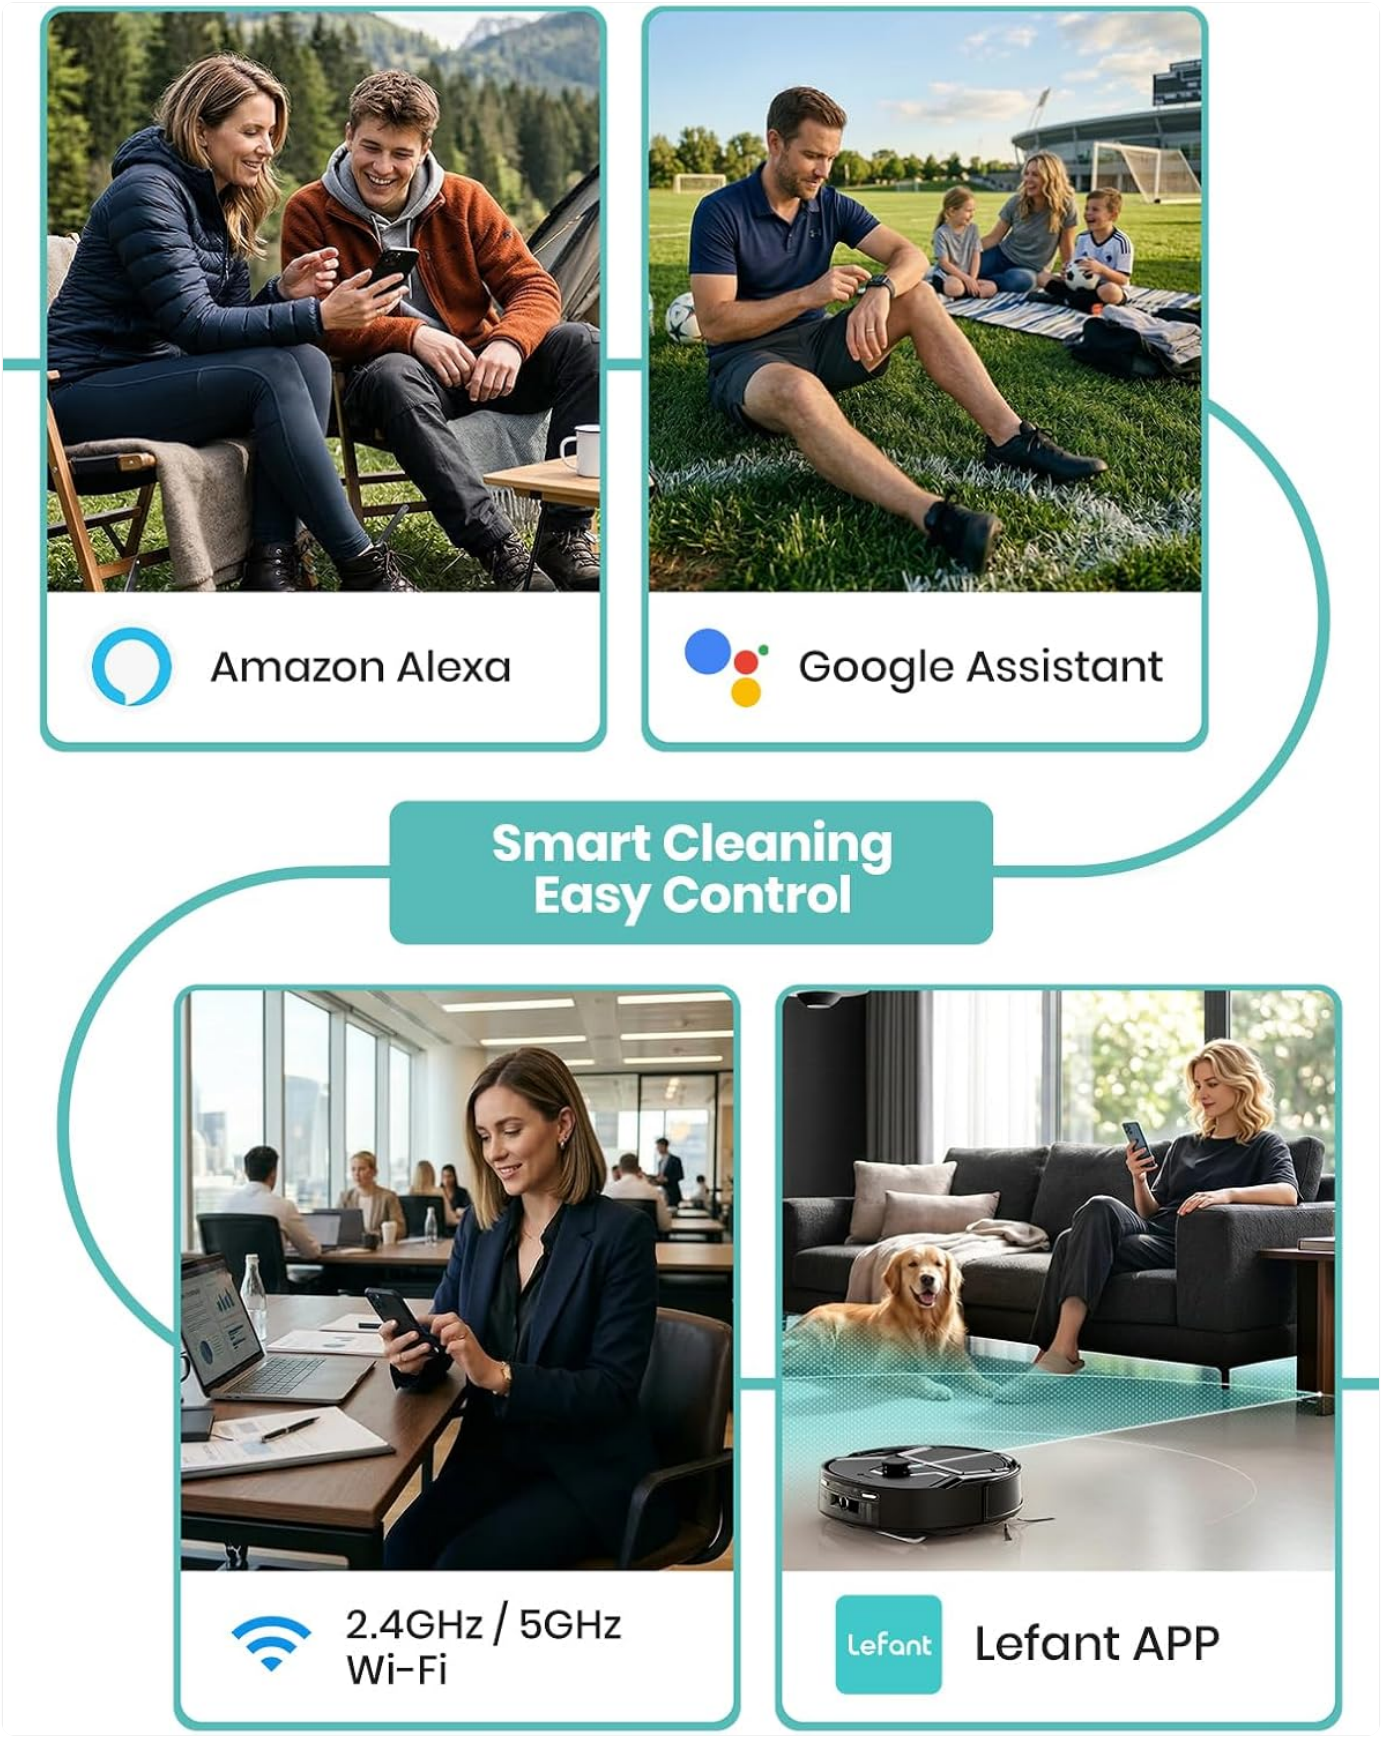


Image: Overview of smart control options including Alexa, Google Assistant, Wi-Fi, and the Lefant App.

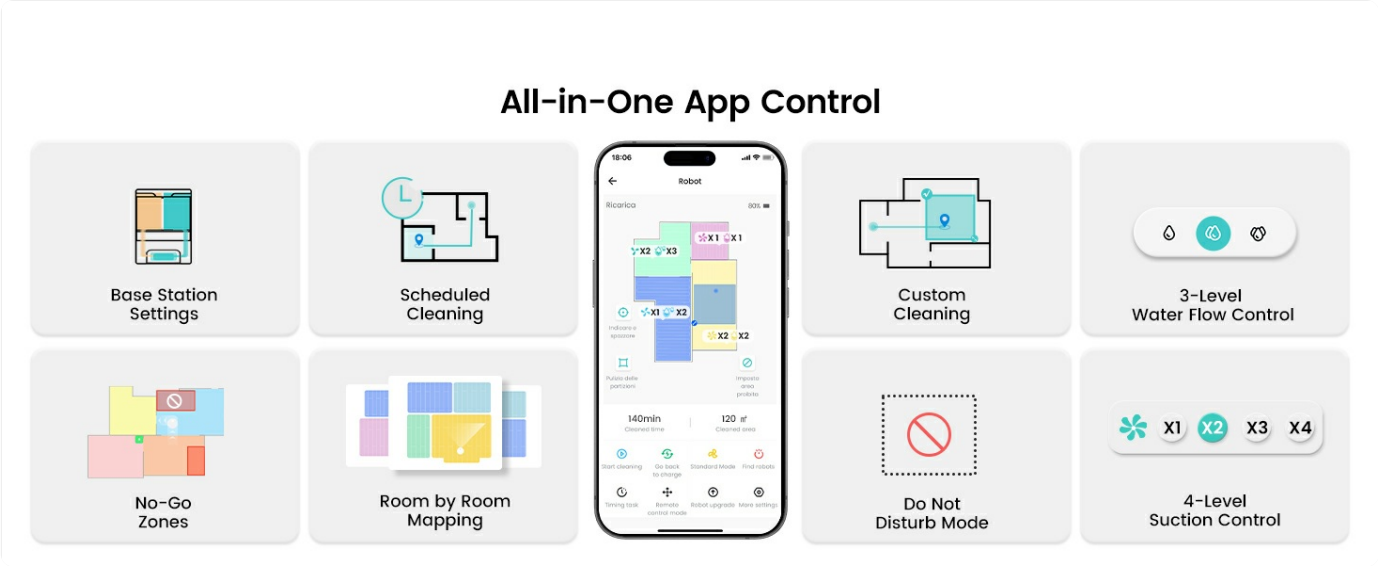


Image: Screenshot of the Lefant app interface showing various control and mapping features.



Image: Illustration of setting virtual no-go zones in the app to restrict the robot's cleaning areas.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your Lefant M210 Pro OMNI. Always power off the robot before performing any maintenance.

1. Dustbin Maintenance

The robot features an 800ml reusable, bagless dustbin. Empty the dustbin regularly, especially after each cleaning cycle or when indicated by the app. This design eliminates the need for disposable dust bags and reduces noise associated with auto-empty stations.



Image: A user demonstrating the one-press emptying of the 800ml dustbin.

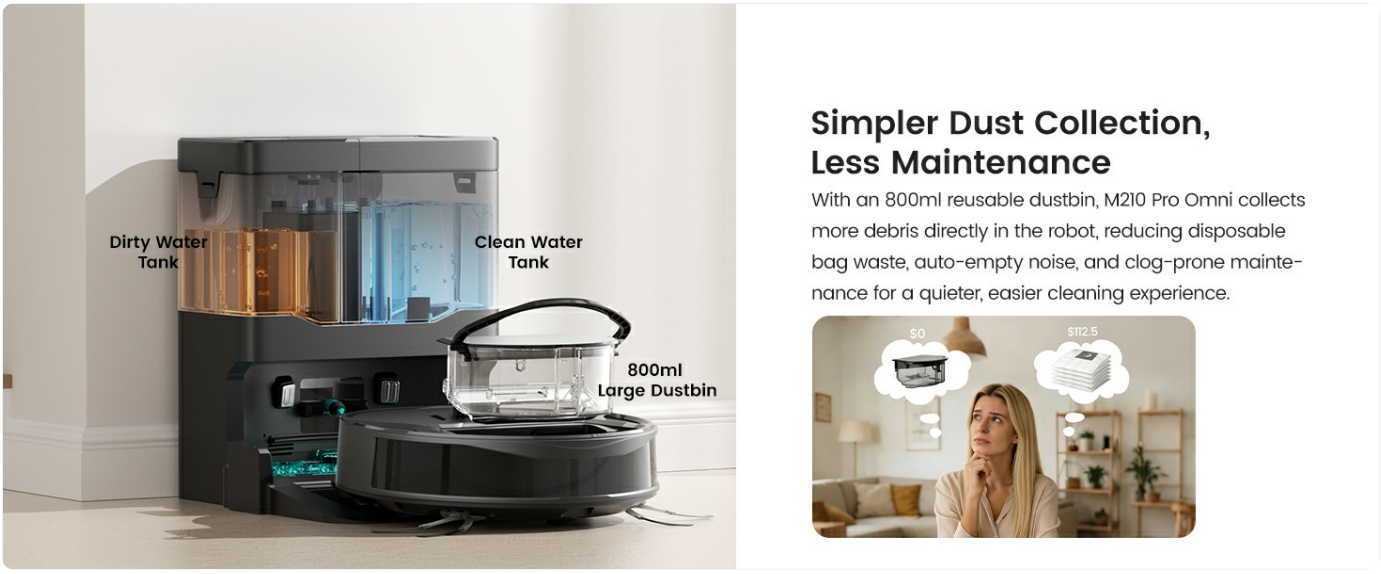


Image: The robot vacuum with its reusable dustbin, highlighting the cost-saving and quiet design.

2. Roller Mop and Water Tank Maintenance

The self-cleaning roller mop and water tanks require regular attention to maintain effective mopping performance. The base station automatically cleans the roller mop and air-dries it after each use.

- **Clean Water Tank:** Refill with clean water as needed.
- **Dirty Water Tank:** Empty and clean the dirty water tank regularly to prevent odors and ensure proper function.
- **Roller Mop:** Periodically remove and rinse the roller mop under running water.

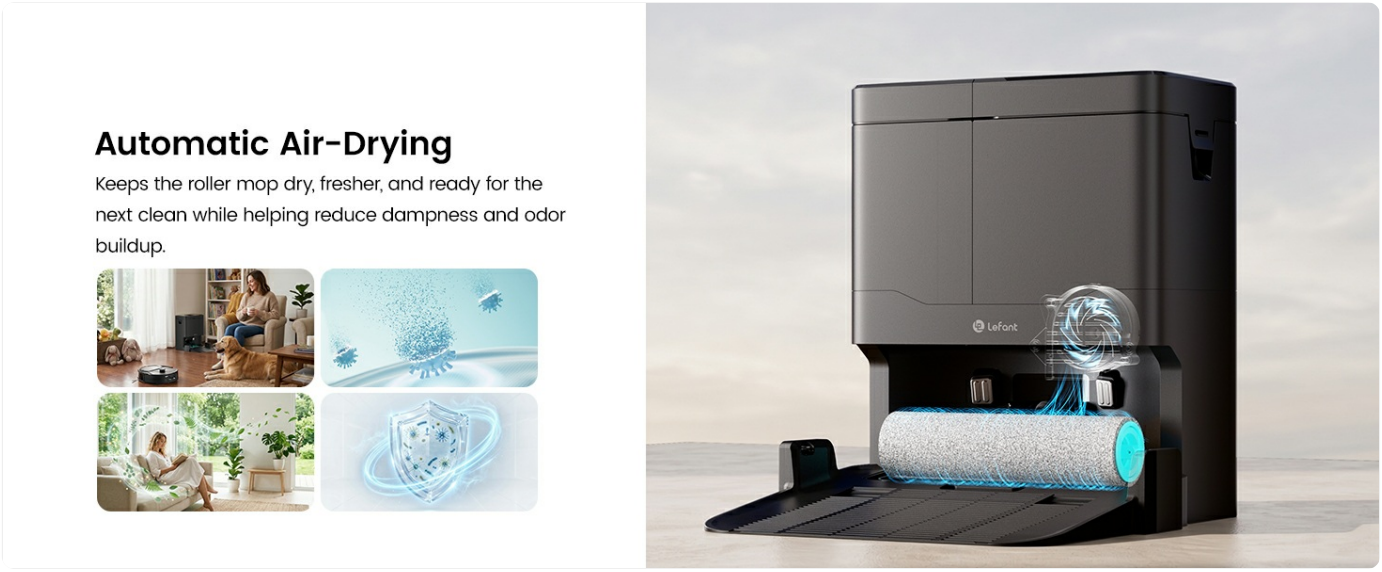


Image: The base station automatically air-drying the roller mop to prevent dampness and odor.

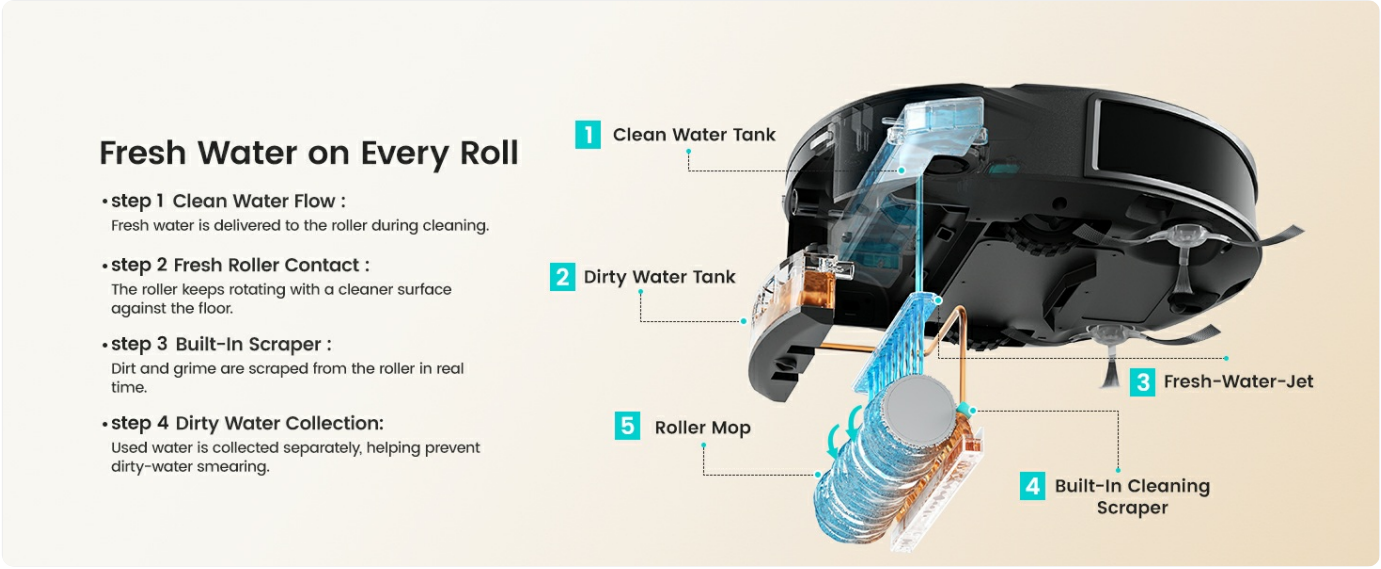


Image: Diagram illustrating the real-time fresh water mopping system with clean and dirty water tanks.

3. General Cleaning Guides (Video)

For detailed visual instructions on cleaning various components of your robot vacuum, please refer to the official videos provided by Lefant:

Video: A quick guide on how to clean your Lefant robot vacuum. (Source: Lefant)

Video: Detailed robot vacuum cleaning guide. (Source: Lefant)

Troubleshooting

If you encounter any issues with your Lefant M210 Pro OMNI, please refer to the following general troubleshooting tips:

- **Robot not starting:** Ensure the robot is fully charged and properly placed on the charging base. Check if the power button is pressed.
- **Poor cleaning performance:** Empty the dustbin, clean the roller mop, and check for any obstructions in the suction port or brushes. Ensure water tanks are filled correctly for mopping.
- **Robot getting stuck:** Clear obstacles from the cleaning path. Use the app to set no-go zones for areas where the robot frequently gets stuck.
- **App connectivity issues:** Ensure your Wi-Fi network is stable and both 2.4G and 5G are supported. Re-pair the device if necessary, following the app setup instructions.
- **Unusual noises:** Check for any foreign objects caught in the brushes, wheels, or suction port.

For more specific issues, consult the Lefant app's help section or contact customer support.

Specifications

Feature	Detail
Brand	Lefant

Model Name	M210 Pro OMNI
Surface Recommendation	Hard Floor
Special Features	Advanced Custom Cleaning, Auto Mop Washing, LiDAR Navigation, Pet Hair Pick Up, Self-Cleaning Brushroll
Color	Black
Controller Type	App Control
Filter Type	Hepa filter
Battery Life	120 minutes
Battery Type	Lithium Ion
Dustbin Capacity	800 ml
Control Method	App, Voice
Form Factor	Rectangular
Indoor Outdoor Usage	Indoor
Item Dimensions (L x W x H)	17.3"L x 13.4"W x 11.4"H

Warranty Information

The Lefant M210 Pro OMNI Robot Vacuum and Mop comes with a**2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or contact Lefant customer support.

Customer Support

If you require further assistance, have questions about your product, or need technical support, please contact Lefant customer service. Contact information can typically be found on the official Lefant website or within the Lefant app.

© 2026 Lefant. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GX92YLHF

More documents and user manuals: **https://manuals.plus/**