hykolity TF4002TR-L

hykolity 40-inch Tower Fan User Manual

Model: TF4002TR-L

Important Safety Instructions

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always unplug the fan before cleaning or performing any maintenance.
- Do not operate the fan with a damaged cord or plug. If the cord or plug is damaged, contact customer support.
- Keep the fan away from water and moisture. Do not use in bathrooms or other wet environments.
- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Do not insert fingers or other objects through the grille when the fan is operating.
- This appliance is for indoor use only.
- Supervise children when the fan is in use.

Product Overview

The hykolity 40-inch Tower Fan is designed to provide efficient and quiet air circulation for your home or office. It features multiple speed settings, operating modes, and a wide oscillation angle for comprehensive coverage.

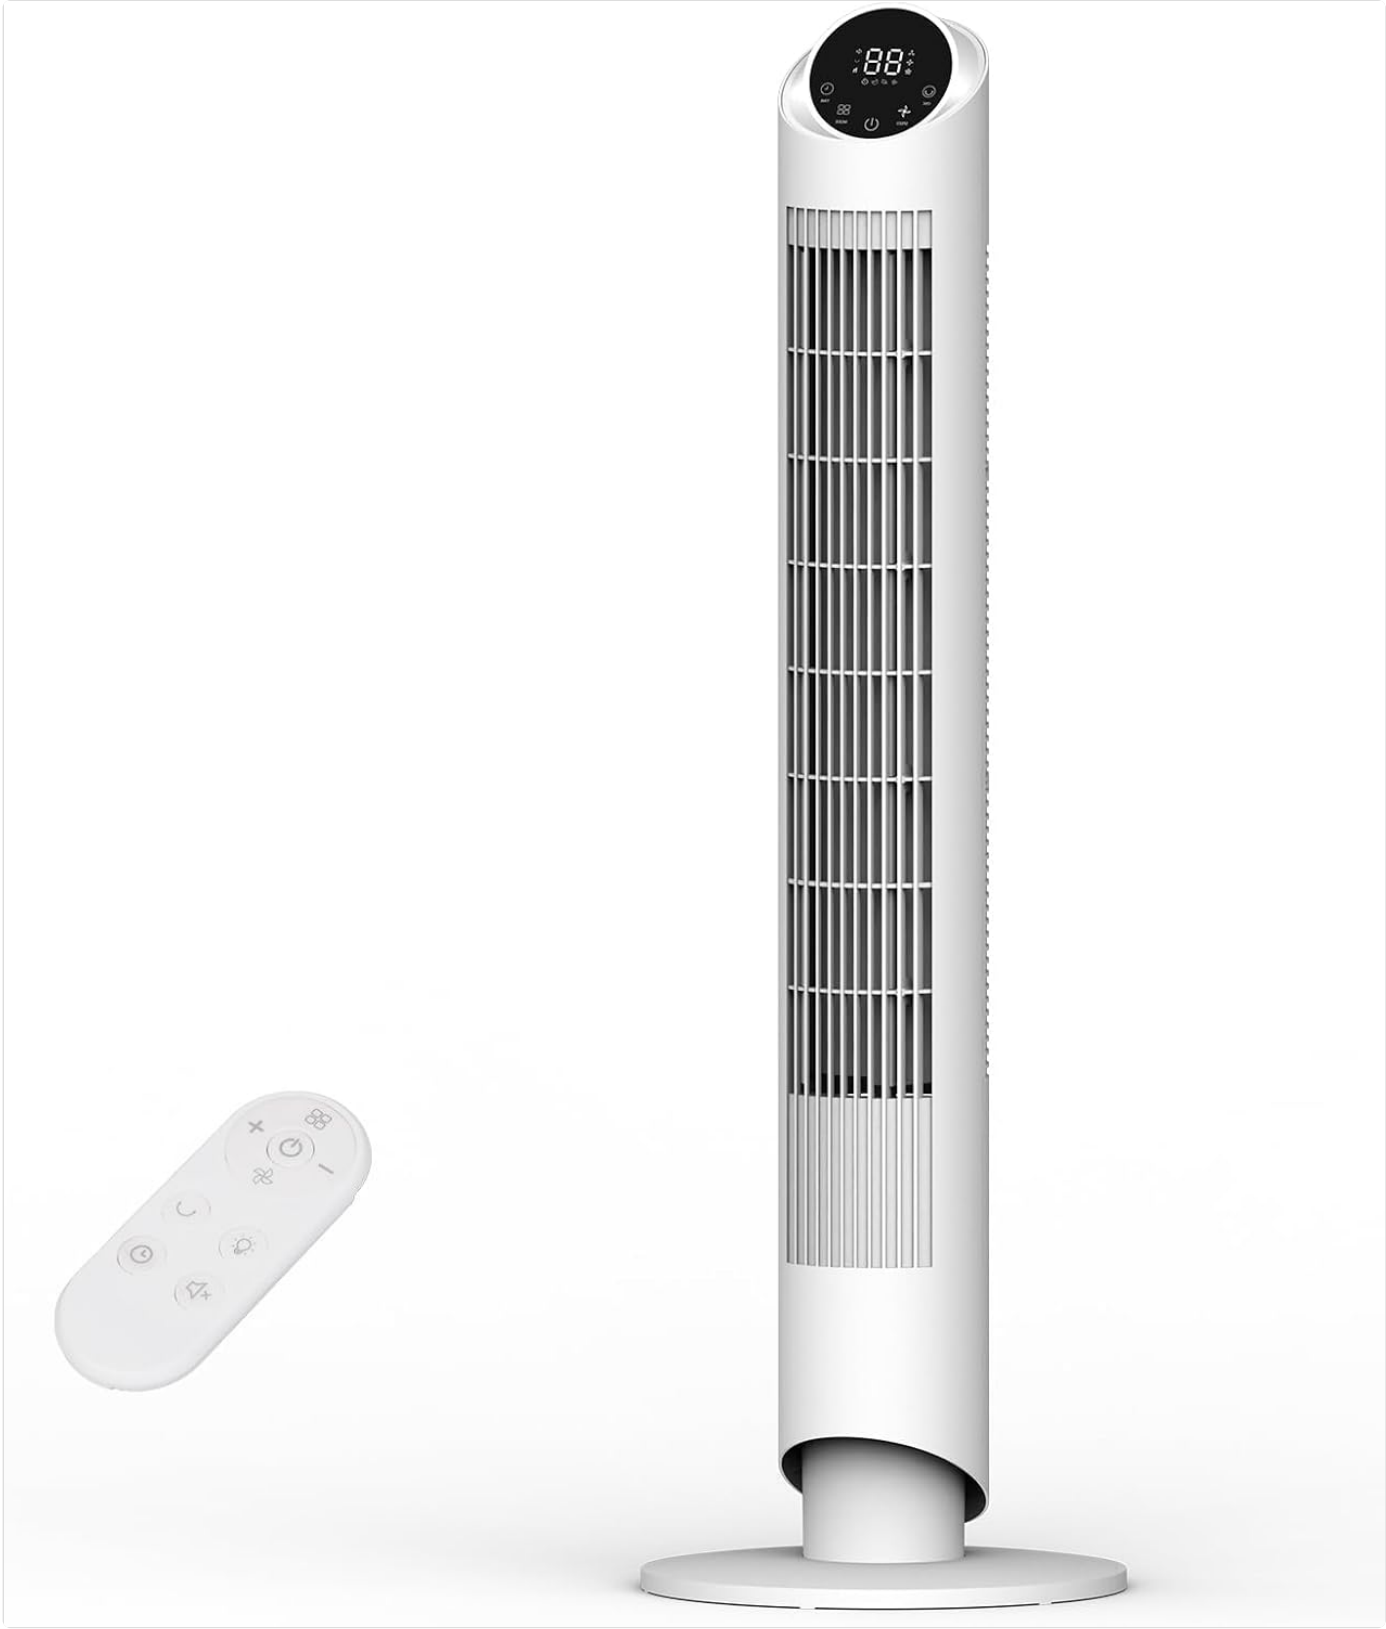


Image: The hykolity 40-inch Tower Fan, showcasing its sleek design and digital display.

Key Features:

- **Quiet Operation:** Operates at a low noise level of 28dB.
- **High-Velocity Airflow:** Delivers powerful winds up to 26ft/s.
- **Wide Oscillation:** 90° oscillation for broad air distribution.
- **Multiple Modes:** Normal, Natural, Sleep, and Child modes.
- **Adjustable Speeds:** 3 fan speed settings.
- **12-Hour Timer:** Programmable auto-off timer.

- **Remote Control:** Convenient operation from a distance.
- **Space-Saving Design:** Slim profile with a concealed handle for portability.

Setup Instructions

Follow these steps to assemble your hykolity Tower Fan.

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure you have the fan body, base, and remote control.
2. **Attach the Base:** Align the two halves of the fan base and snap them together. Then, align the assembled base with the bottom of the fan body. Secure the base to the fan body using the provided screws. Turn the screws clockwise until tightened.
3. **Position the Fan:** Place the fan on a firm, level surface. Ensure there is adequate space around the fan for optimal airflow and oscillation.
4. **Plug In:** Insert the power plug into a standard 120V AC electrical outlet.

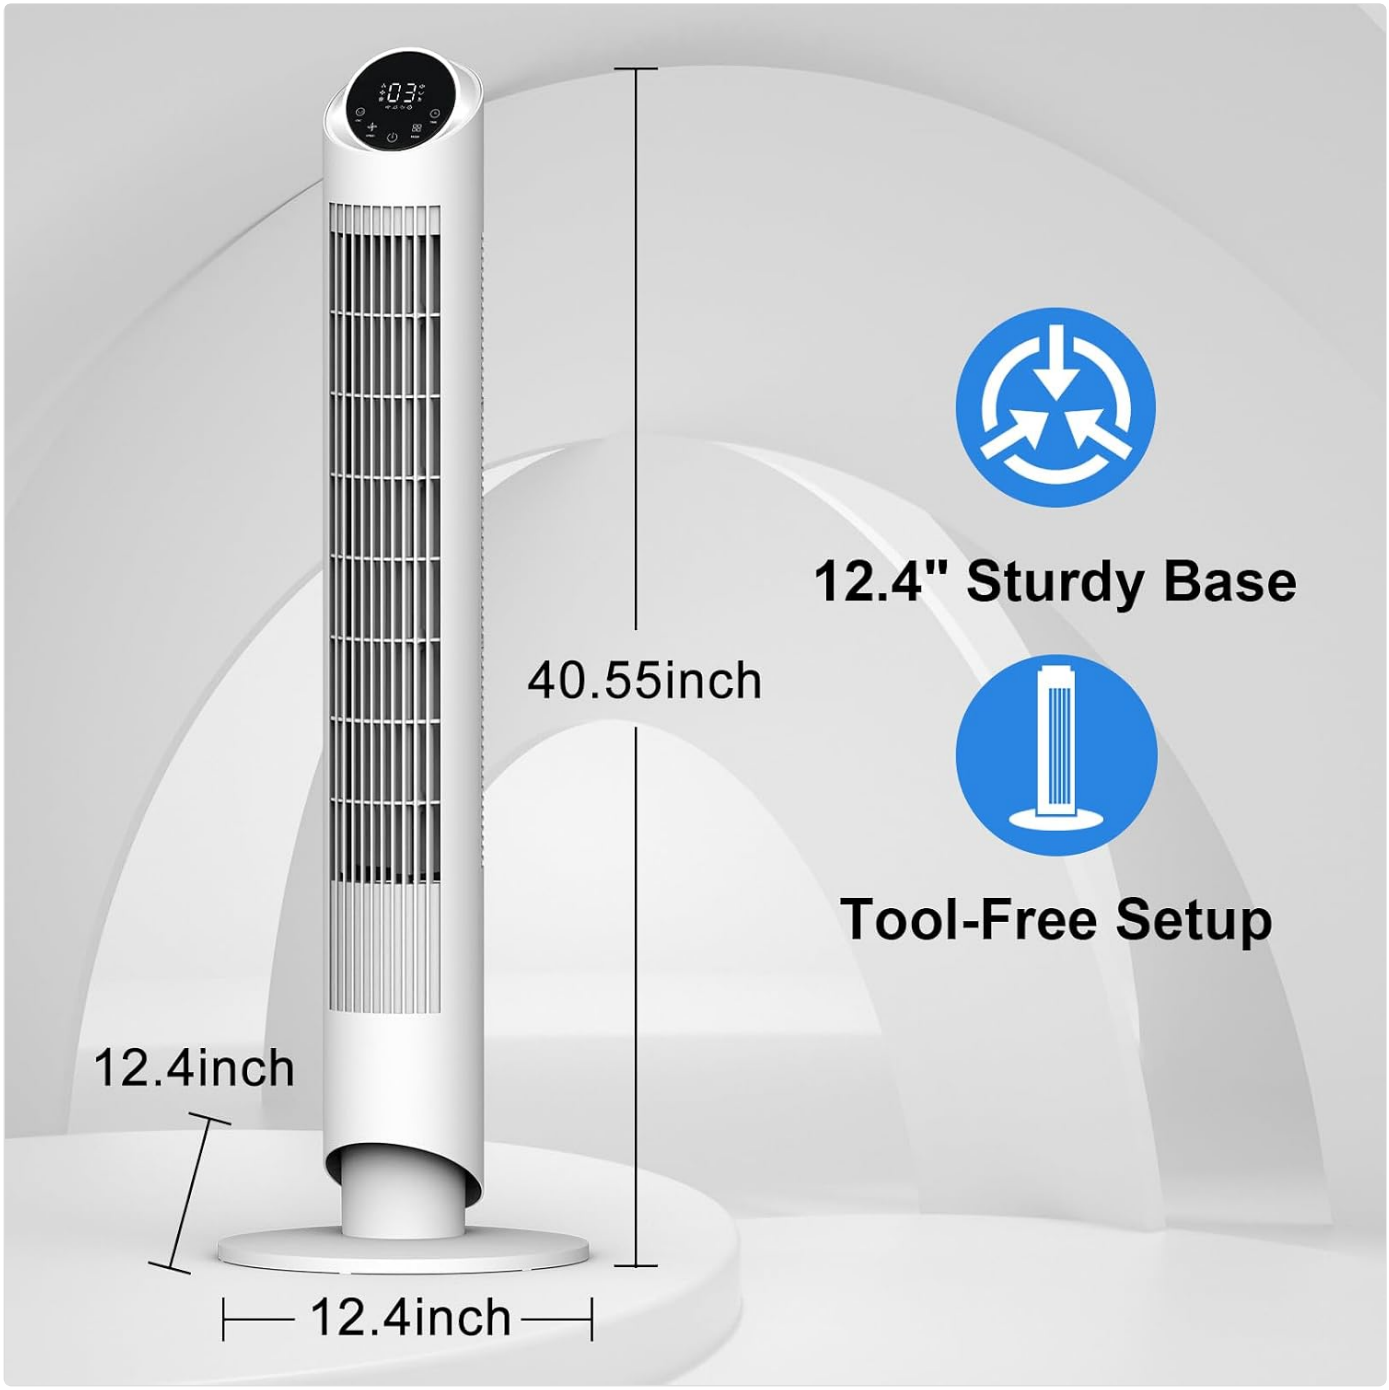


Image: Visual guide for tool-free base setup and fan dimensions (12.4"D x 12.4"W x 40.55"H).

Your browser does not support the video tag.

Video: An official hykolity video demonstrating the installation process of the tower fan.

Operating Instructions

Your hykolity Tower Fan can be operated using the control panel on top of the unit or the included remote control.

Control Panel and Remote Functions:



Image: A close-up view of the fan's intuitive digital control panel.

- **Power Button ( ):** Turns the fan ON or OFF.
- **Speed Button (⇋):** Cycles through 3 fan speeds (1, 2, 3).
- **Mode Button (▨):** Selects operating modes: Normal, Natural, Sleep, Child.
- **Oscillation Button (⟳):** Activates or deactivates 90° oscillation.
- **Timer Button ( ):** Sets the auto-off timer from 1 to 12 hours.

Operating Modes:



Image: Visual representation of the fan's four distinct operating modes.

- **Normal Mode:** Provides a constant, steady airflow at your selected speed.
- **Natural Mode:** Simulates a natural breeze by varying fan speed intermittently.
- **Sleep Mode:** Operates at a low, quiet speed with reduced display brightness for undisturbed rest.
- **Child Mode:** Offers a gentle, consistent airflow suitable for children's rooms.

Oscillation:

Press the oscillation button to activate the 90° wide-angle oscillation feature, distributing air across a larger area. Press again to stop oscillation.



Image: The fan demonstrating its 90-degree wide oscillation for expanded coverage.

Timer Function:

The 12-hour timer allows you to set the fan to automatically turn off after a specified period. Press the timer button repeatedly to select the desired duration (1-12 hours).

Your browser does not support the video tag.

Video: An official hykolity video showcasing the display and control features of the tower fan.

Maintenance

Regular maintenance ensures optimal performance and longevity of your fan.

- **Cleaning:**
  - Always unplug the fan before cleaning.
  - Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
  - Use a vacuum cleaner with a brush attachment or compressed air to remove dust from the air intake and

exhaust grilles.
    - Ensure all parts are completely dry before plugging the fan back in.
- **Storage:**
    - If storing the fan for an extended period, unplug it and clean it thoroughly.
    - Store the fan in its original packaging or cover it to protect it from dust.
    - Store in a cool, dry place.

Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Weak or no airflow.	Air intake/exhaust blocked; fan speed too low.	Clear any obstructions from the grilles. Increase the fan speed setting.
Fan makes unusual noise.	Loose parts; fan not on a level surface; internal obstruction.	Ensure the fan is on a stable, flat surface. Unplug and check for any foreign objects inside the grilles. If noise persists, contact customer support.
Remote control not working.	Dead batteries; remote out of range; sensor blocked.	Replace batteries in the remote. Ensure the remote is pointed at the fan's control panel within range. Clear any obstructions between the remote and the fan.

Specifications

Feature	Detail
Model Number	TF4002TR-L
Dimensions (D x W x H)	12.4" x 12.4" x 40"
Noise Level	28 Decibels
Power Source	Electric
Voltage	120 Volts
Wattage	45 watts
Air Flow Capacity	26 Cubic Feet Per Second
Number of Speeds	3
Operating Modes	Normal, Natural, Sleep, Child
Oscillation	90° Wide Oscillation
Timer	1-12 Hours
Control Method	Remote, Control Panel

Feature	Detail
Indoor/Outdoor Usage	Indoor

Customer Support

For any questions, concerns, or assistance with your hykolity Tower Fan, please contact our customer support team.

Please refer to the product packaging or the official hykolity website for the most current contact information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question