RUIZU THM7Blu

RUIZU 32GB MP3 Player with Bluetooth 5.3, 2.8" Touchscreen & Speaker User Manual

Model: THM7Blu

1. Introduction

This manual provides detailed instructions for the RUIZU 32GB MP3 Player (Model THM7Blu). This device is designed for dedicated music playback, offering a 2.8-inch touchscreen, Bluetooth 5.3 connectivity, and a built-in speaker. It supports various audio formats and includes features such as FM radio, voice recording, and a sleep timer. Please read this manual thoroughly before using your device to ensure proper operation and longevity.

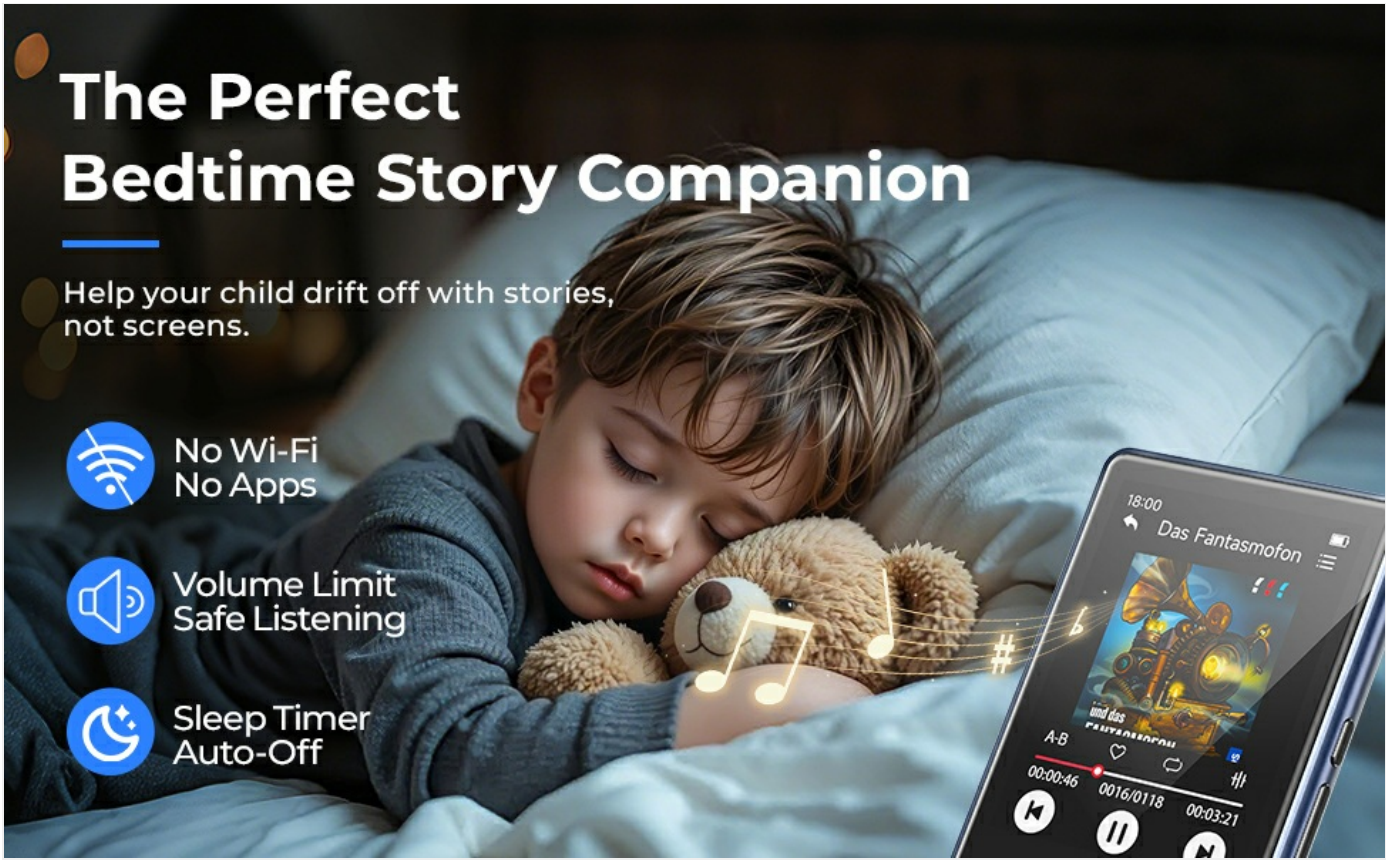


Image: The RUIZU MP3 Player featuring its premium zinc alloy design.

2. What's in the Box

Verify that all items are present in the package:

- 1 x RUIZU MP3 Player with Bluetooth
- 1 x 3.5mm Wired Earbuds (for radio reception & backup listening)
- 1 x USB-C Cable for Charging & File Transfer
- 1 x Protective Silicone Case
- 1 x Lanyard
- 1 x Quick Start Guide (English & Japanese)



Image: All included accessories and the MP3 player as packaged.

3. Product Overview

Familiarize yourself with the physical components and controls of your RUIZU MP3 Player.



Image: Detailed diagram illustrating the various ports, buttons, and dimensions of the MP3 player.

- **2.8" Full Touch Screen:** Main interface for navigation and control.
- **Power ON/OFF Button:** Located on the side for turning the device on or off.
- **Volume + / - Buttons:** Adjust audio output level.
- **Micro SD Card Slot:** For expanding storage up to 128GB.
- **USB-C Port:** For charging and data transfer.
- **3.5mm Aux Jack:** For wired headphones or external audio connection.
- **Lanyard Hole:** For attaching the included lanyard.
- **Speaker:** Built-in speaker for audio playback without headphones.
- **Home Button:** Returns to the main menu.

4. Setup

4.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the included USB-C cable to the device's USB-C port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.

4.2 Transferring Music and Files

To transfer files, connect the MP3 player to your computer using the USB-C cable. The device will appear as a removable disk. You can then drag and drop music, videos, pictures, and other supported files into the appropriate folders on the device's internal storage or a Micro SD card.



Image: Visual guide for transferring music files from a computer to the MP3 player.

4.3 Inserting a Micro SD Card

The device supports Micro SD cards up to 128GB for expanded storage. Locate the Micro SD card slot on the side of the player. Gently insert the Micro SD card into the slot until it clicks into place. To remove, push the card in slightly until it springs out.

5. Operating Instructions

5.1 Power On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select "Power Off" on the screen.

5.2 Touchscreen Navigation

The 2.8-inch touchscreen allows for intuitive control. Tap icons to open applications, swipe to navigate menus, and use the Home button to return to the main screen.



Image: The main menu interface of the MP3 player, displaying icons for Music, Video, Bluetooth, FM Radio, and other functions.

5.3 Playing Music

From the main menu, tap the "Music" icon. You can browse your music library by Artist, Album, Genre, or Folder. During playback, controls for play/pause, skip track, repeat, shuffle, A-B repeat, and bookmark are available on the screen. The player supports resume playback, picking up where you left off.



Image: Users listening to music through headphones and the device's built-in speaker, highlighting the HiFi sound quality.

5.4 Bluetooth Connection

To connect to Bluetooth headphones or speakers:

1. Go to the main menu and tap the "Bluetooth" icon.
2. Turn on Bluetooth on the MP3 player.
3. Put your Bluetooth headphones or speaker into pairing mode.
4. Select your device from the list of available devices on the MP3 player's screen.
5. Once paired, the device will automatically reconnect when in range and Bluetooth is enabled.



Image: The MP3 player demonstrating its Bluetooth 5.3 connectivity with wireless earbuds and a portable speaker.

5.5 FM Radio

To use the FM radio, connect the included wired earbuds to the 3.5mm aux jack. The earbuds act as an antenna. From the main menu, tap the "FM Radio" icon. You can scan for stations and save your favorites.

5.6 Voice Recorder

Tap the "Recordings" icon to access the voice recorder. You can start, pause, and save audio recordings. The device also supports line-in recording if connected to another audio source.

5.7 Sleep Timer

The sleep timer feature allows the device to automatically power off after a set period. This is useful for listening to music or audiobooks before sleep. Access this feature through the settings menu.



Image: A child listening to the MP3 player, illustrating its use as a bedtime story companion with features like no Wi-Fi, volume limit, and sleep timer.

5.8 Additional Features

The RUIZU MP3 Player includes several other utilities:

- **Pedometer:** Tracks steps during physical activity.
- **Stopwatch:** For timing events.
- **Calendar:** Basic calendar function.
- **E-book Reader:** Supports text files for reading.
- **Picture Viewer:** Displays image files.
- **Video Player:** Plays supported video formats.

6. Maintenance

6.1 Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the screen or casing.

6.2 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, and store it in a cool, dry place if not used for extended periods. Avoid exposing the device to extreme temperatures.

6.3 Software Updates

Periodically check the manufacturer's website for any available firmware updates. Updates can improve performance and add new features. Follow the instructions provided with the update carefully.

7. Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Low battery; device frozen.	Charge the device for at least 30 minutes. If still unresponsive, press and hold the power button for 10-15 seconds to force a restart.
No sound from headphones/speaker.	Volume too low; headphones not connected properly; Bluetooth not paired.	Increase volume. Ensure headphones are fully plugged in. Re-pair Bluetooth device. Test with different headphones/speaker.
Cannot transfer files to device.	Incorrect USB connection mode; driver issues; full storage.	Ensure the device is connected to the computer in data transfer mode. Try a different USB port or cable. Check available storage space.
Bluetooth connection unstable.	Distance too far; interference; low battery.	Ensure the Bluetooth device is within range (approx. 10 meters). Avoid obstacles. Charge the MP3 player and the Bluetooth device.
FM Radio not working.	Wired headphones not connected; poor signal.	Connect wired headphones, as they act as the antenna. Try moving to an area with better signal reception.

8. Specifications

Feature	Detail
Brand	RUIZU
Model Number	THM7Blu
Memory Storage Capacity	32 GB (expandable up to 128 GB via Micro SD)
Screen Size	2.8 inches
Display Technology	LCD
Connectivity Technology	Aux, Bluetooth 5.3, USB-C
Supported Media Type	Micro SD
Supported Audio Standards	MP3, WMA, APE, FLAC, WAV, DRM, ACELP, OGG
Special Features	Built-In Speaker, Equalizer, FM Radio, Touch Screen, Voice Recorder
Compatible Devices	Headphones, Speakers

9. Warranty and Support

9.1 Warranty Information

For any questions or warranty-related inquiries, please contact RUIZU customer support.

9.2 Customer Support

Email: support@ruizutek.com

© 2023 RUIZU. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question