Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lefant M210 PRO OMNI

Lefant M210 PRO Omni Robot Vacuum and Mop User Manual

Model: **M210 PRO OMNI**

1. Product Overview

The Lefant M210 PRO Omni is an advanced robot vacuum and mop designed for comprehensive floor cleaning. It features powerful suction, a self-cleaning and auto-drying roller mop, and intelligent navigation for efficient operation.



Image: The Lefant M210 PRO Omni robot vacuum and its accompanying charging and self-cleaning station.

Key Features:

- **20000Pa Suction:** Powerful suction for dust, crumbs, and pet hair.
- **Self-Cleaning & Auto Drying Roller Mop:** Ensures the mop is always clean and dry.
- **LiDAR Navigation:** Accurate home mapping and efficient cleaning paths.
- **Slim Design:** 280mm compact body to reach under furniture.
- **800ml Large Dustbin:** Reduces frequency of emptying.
- **Tangle-Free Hair Pickup:** Special suction port prevents hair tangles.
- **App Control & Voice Assistant Support:** Compatible with Lefant App, Amazon Alexa, and Google Assistant.
- **2.4/5G WiFi Support:** Stable connectivity for smart features.

2. Setup Guide

2.1 Initial Preparation

1. Unpack all components from the packaging.
2. Place the charging station against a wall in an open area, ensuring at least 0.5 meters of clear space on both sides and 1.5 meters in front.
3. Connect the power adapter to the charging station and plug it into a wall outlet.
4. Ensure the robot is fully charged before its first use.

2.2 Lefant App Setup

Control your Lefant M210 PRO Omni conveniently through the Lefant App. Follow these steps to set up the app:

1. **Power on the robot:** Press and hold the Start/Pause button for 3 seconds to turn on your M210 PRO Omni.
2. **Download the Lefant App:** Scan the QR code below or download the Lefant app from the App Store or Google Play. Download Link
3. **Enter pairing mode:** Press and hold the Start/Pause button for 6 seconds until the indicator light starts flashing.
4. **Add your device:** Open the Lefant app, tap "Add Device", and select M210 Pro Omni from the device list.
5. **Connect to Wi-Fi:** Choose your home Wi-Fi network and enter the password. Both 2.4GHz and 5GHz Wi-Fi are supported.
6. **Complete pairing:** Keep your phone, router, and robot close together until pairing is complete.

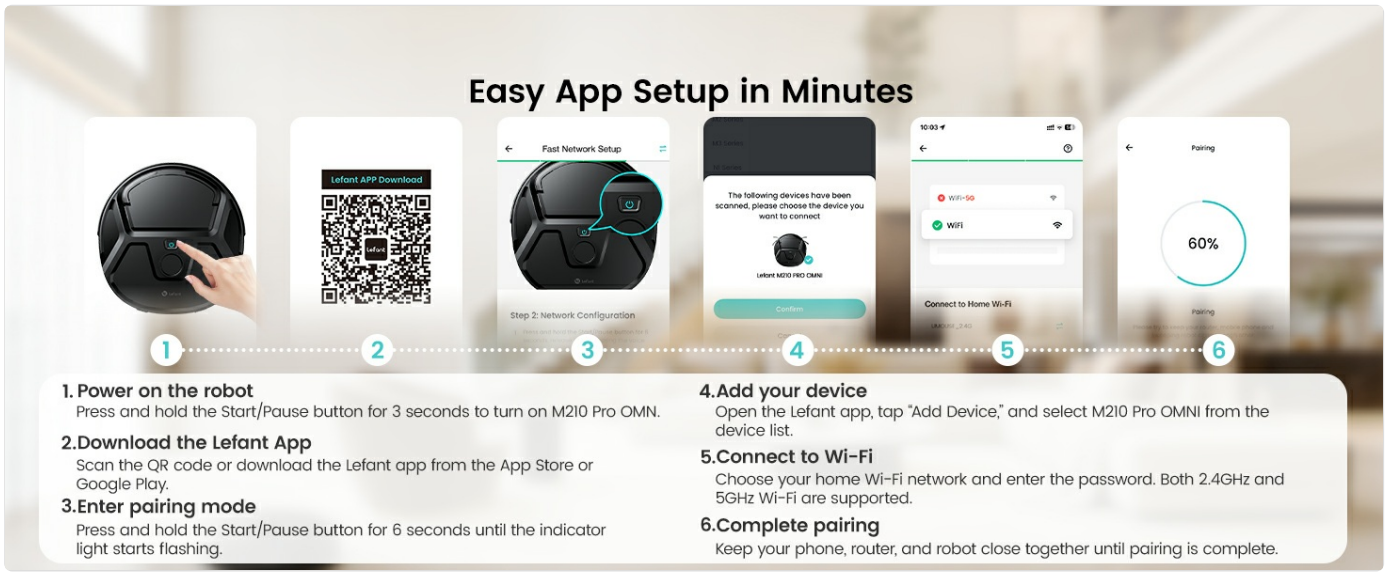


Image: Visual guide for Lefant App setup.

2.3 Amazon Alexa Setup

Integrate your M210 PRO Omni with Amazon Alexa for voice control:

1. **Open voice access in the Lefant App:** Go to 'Mine' and select 'Voice Third-Party Access Service'.
2. **Save voice account information:** Record the voice account and password shown in the Lefant App.
3. **Open the Alexa App.**
4. **Search for "Smart Life":** In the Alexa App, search for "Smart Life" in the skill search bar and select the correct skill.
5. **Enable the skill:** Tap 'Enable' to use account linking.
6. **Link your account:** Select your region, then enter the voice account and password from Step 2.
7. **Complete the connection:** Wait until the account is successfully linked. You can now control M210 PRO OMNI with Alexa.

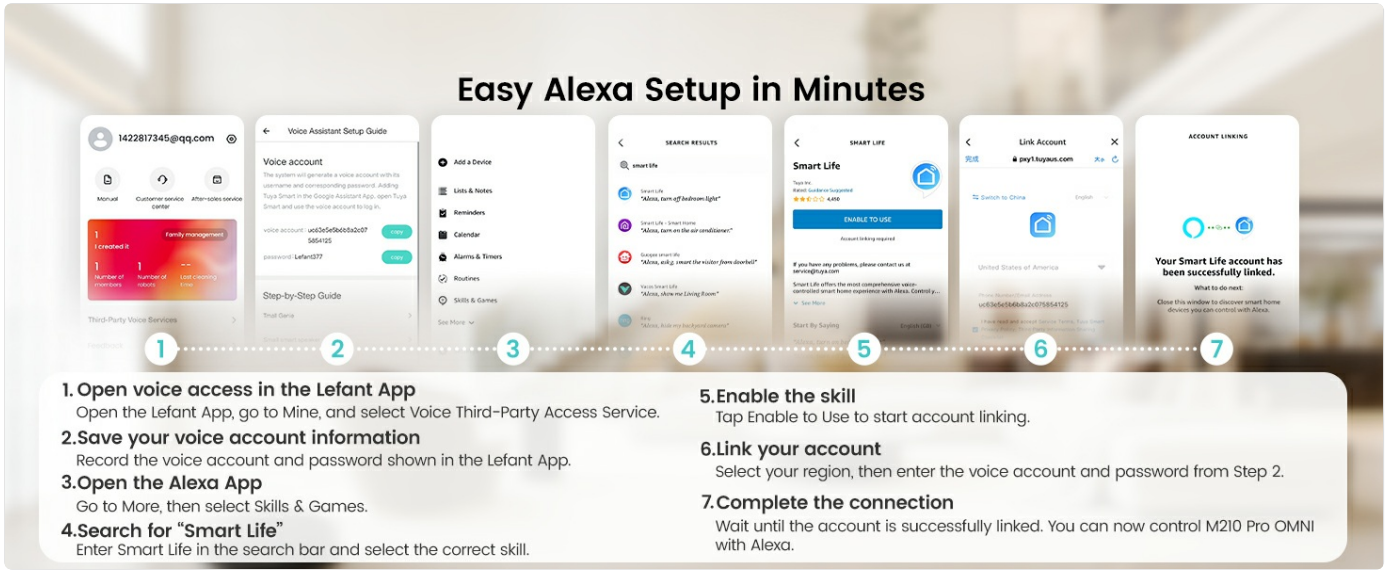


Image: Visual guide for Amazon Alexa setup.

3. Operating Instructions

3.1 Starting a Cleaning Cycle

- **Via Robot Button:** Press the Start/Pause button on the robot once to begin a cleaning cycle.
- **Via Lefant App:** Open the app, select your M210 PRO Omni, and tap 'Start Cleaning'. You can also schedule cleaning times and customize cleaning modes.
- **Via Voice Command:** Use Amazon Alexa or Google Assistant with commands like "Alexa, start cleaning" or "Hey Google, start cleaning the robot vacuum."

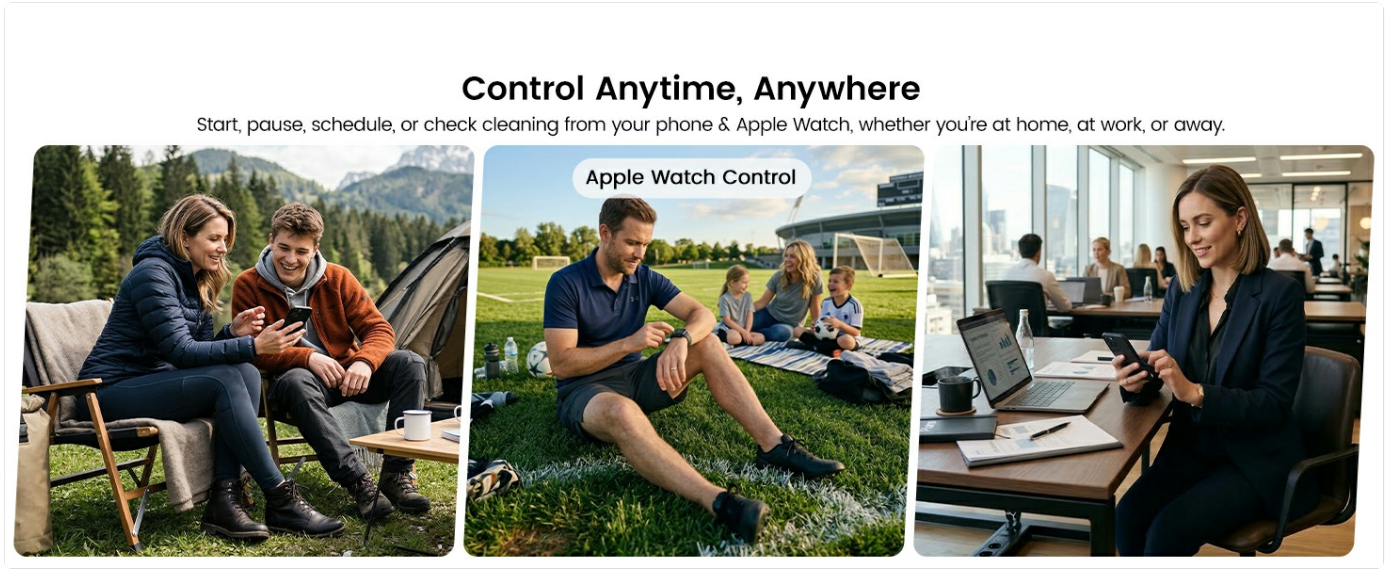


Image: Control your M210 PRO Omni anytime, anywhere using the app or Apple Watch.

3.2 Smart Navigation and Mapping

The M210 PRO Omni uses LiDAR navigation to create an accurate map of your home, ensuring efficient and complete coverage.

- **LiDAR Mapping:** The robot maps your home to plan optimal cleaning paths, reducing missed spots and repeated runs.
- **Virtual No-Go Zones:** Use the Lefant app to set virtual boundaries, preventing the robot from entering specific areas like pet bowls, cluttered spaces, or delicate furniture.

- **Obstacle Avoidance:** Upgraded sensors help the robot avoid collisions with furniture and other objects.
- **Carpet Detection:** The robot can detect carpets to adjust cleaning modes accordingly, preventing accidental wetting during mopping.



Image: Setting virtual no-go zones in the Lefant app.

3.3 Cleaning Modes and Customization

The Lefant App allows for advanced customization of your cleaning experience:

- **Custom Cleaning:** Select specific rooms or areas for cleaning.
- **Water Flow Control:** Adjust the water flow for mopping with 3-level control.
- **Suction Control:** Adjust suction power with 4-level control.
- **Scheduled Cleaning:** Set specific times for the robot to clean automatically.
- **Do Not Disturb Mode:** Configure periods when the robot should not operate.

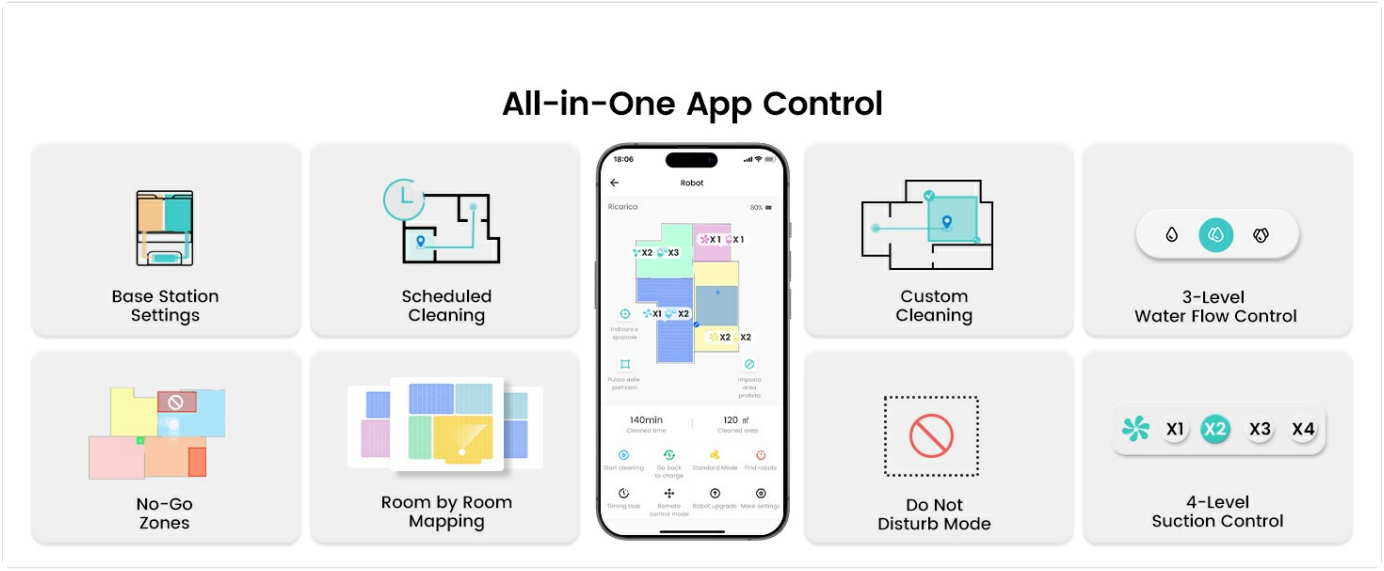


Image: All-in-One App Control interface.

4. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your Lefant M210 PRO Omni.

4.1 Dustbin Emptying

- The 800ml large dustbin is reusable and designed for easy, one-press emptying.
- To empty, detach the dustbin from the robot and dispose of collected debris.
- Clean the dustbin regularly to prevent clogging and maintain suction efficiency.

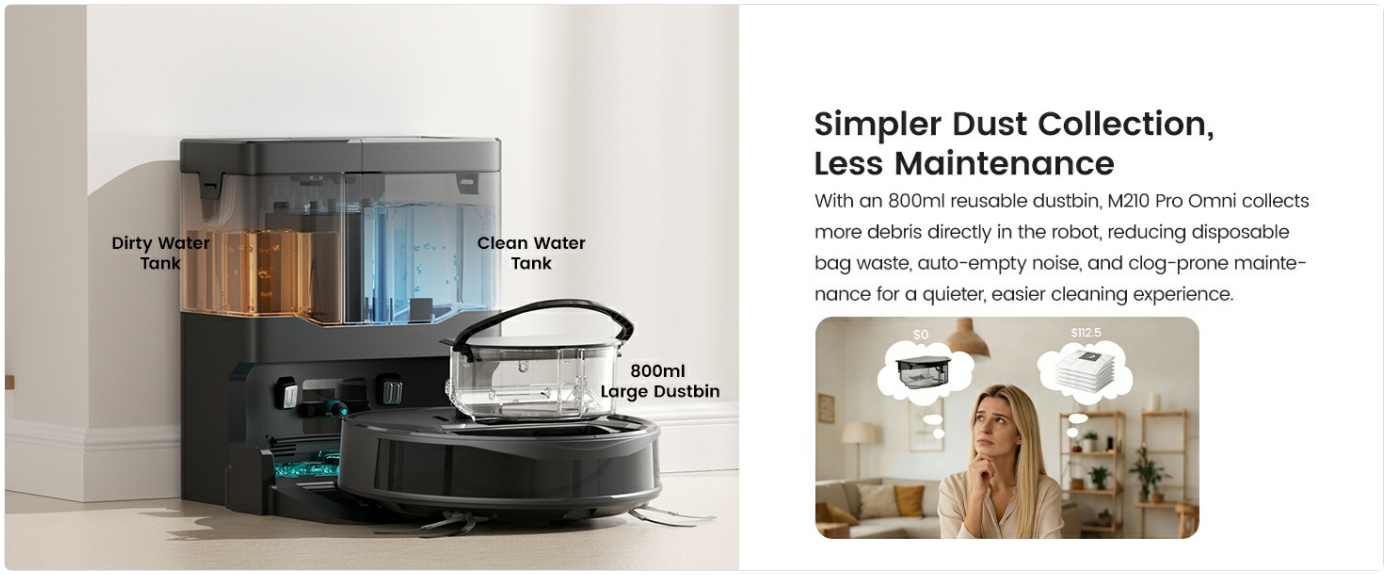


Image: Easy dustbin emptying process.

4.2 Roller Mop Cleaning and Drying

- The M210 PRO Omni features a self-cleaning roller mop system. The base station automatically refills the robot with clean water and cleans the roller mop after each cycle.
- After cleaning, the system initiates automatic air-drying to keep the roller mop fresh and prevent dampness or odor buildup.
- Periodically inspect the roller mop for any trapped debris and clean manually if necessary.

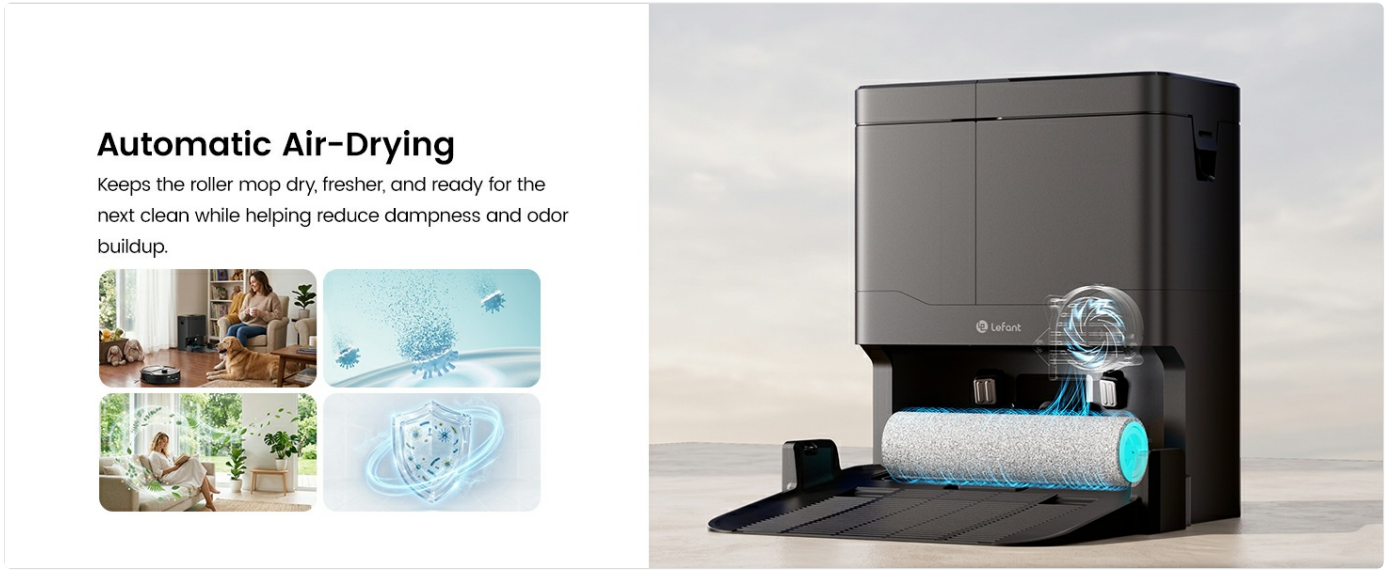


Image: Automatic air-drying of the roller mop in the base station.

4.3 Water Tank Management

- The base station contains separate clean water and dirty water tanks.
- Ensure the clean water tank is filled before each cleaning session.
- Empty the dirty water tank regularly to prevent odors and maintain hygiene.

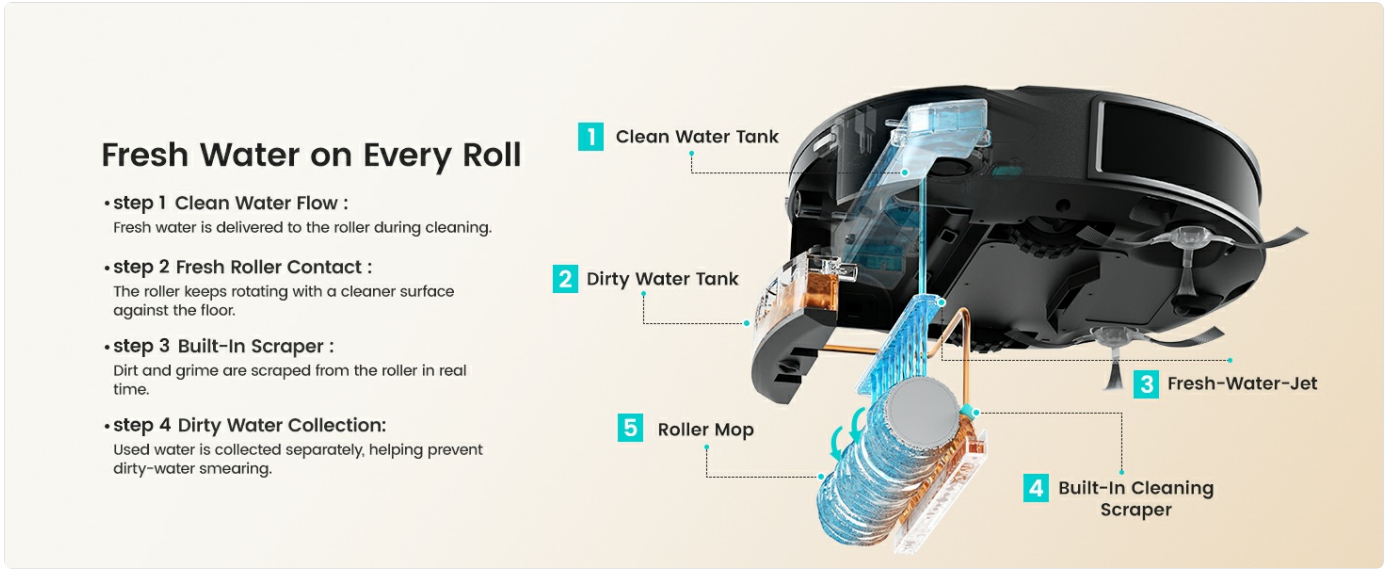


Image: Fresh water delivery system for continuous mop cleaning.

5. Troubleshooting

This section provides general guidance for common issues. For detailed troubleshooting or persistent problems, please refer to the Lefant App or contact customer support.

- **Robot not starting:** Ensure the robot is fully charged and the power button is pressed correctly. Check if the charging station is properly connected.
- **Poor cleaning performance:** Empty the dustbin, clean the roller mop, and ensure water tanks are filled/emptied as needed. Check for obstructions in the suction port.
- **Navigation issues:** Ensure the LiDAR sensor is clean and unobstructed. Remove any obstacles that might interfere with mapping. Reset the map in the app if necessary.
- **App connectivity problems:** Verify your Wi-Fi connection (2.4GHz or 5GHz). Ensure the robot and your phone are within Wi-Fi range. Restart the app and the robot.
- **Excessive noise:** Check for any foreign objects caught in the brushes, wheels, or roller mop. Ensure the dustbin is properly seated.

6. Specifications

Feature	Detail
Brand	Lefant
Model Name	Lefant M210 PRO OMNI
Suction Power	20000Pa
Dustbin Capacity	800ml
Navigation Type	LiDAR Navigation
Mop Type	Self-Cleaning Roller Mop
Special Features	Auto Mop Washing, Auto Air-Drying, Pet Hair Pick Up, Slim Design, Virtual No-Go Zones
Product Dimensions	29L x 28W x 10H centimetres

Battery Type	Lithium Ion
Control Method	App, Voice (Alexa, Google Assistant)
Wi-Fi Support	2.4GHz / 5GHz
Recommended Surfaces	Hard Floors, Wood, Tiles, Carpets

7. Warranty and Support

7.1 Product Warranty

The Lefant M210 PRO Omni comes with a**1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Lefant customer support through the following channels:

- **Lefant App:** Access support features directly within the application.
- **Lefant Official Website:** Visit the official Lefant website for FAQs, support resources, and contact information.

8. Important Safety Information

Please read all safety instructions carefully before using your Lefant M210 PRO Omni. Keep this manual for future reference.

- Do not allow children to operate the robot vacuum. Supervise children and pets when the robot is in operation.
- Ensure all loose cables, small objects, and fragile items are removed from the cleaning path to prevent entanglement or damage.
- Do not use the robot to clean liquids, burning substances, or sharp objects.
- Only use the original power adapter and charging station provided with the device.
- Do not expose the robot or charging station to water or moisture.
- Regularly clean the sensors and charging contacts to ensure proper function.

© 2026 Lefant. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GXV9VD4Q

More documents and user manuals: **https://manuals.plus/**