Hisense HV642A65

Hisense HV642A65 Built-in Dishwasher User Manual

Model: HV642A65 | Brand: Hisense

Introduction

Thank you for choosing the Hisense HV642A65 Built-in Dishwasher. This appliance is designed to provide efficient and convenient dishwashing for your home. This manual provides essential information for the safe installation, operation, and maintenance of your new dishwasher. Please read these instructions carefully before using the appliance and keep them for future reference.



Image: The Hisense HV642A65 built-in dishwasher seamlessly integrated into a contemporary kitchen setting.

Important Safety Information

To reduce the risk of fire, electric shock, or injury when using your dishwasher, follow these basic precautions:

- Read all instructions before using the appliance.
- This appliance must be grounded. Connect only to a properly grounded outlet.
- Do not operate a dishwasher that is damaged, malfunctioning, or has missing or broken parts.

- Keep children away from detergents and rinse aid.
- Do not allow children to play in or on the dishwasher.
- Use only detergents and rinse agents recommended for use in a dishwasher.
- Do not store or use flammable materials near the dishwasher.
- Always turn off the power supply to the dishwasher before cleaning or performing maintenance.
- Sharp items should be loaded with handles up to reduce the risk of cuts.

Setup and Installation

The Hisense HV642A65 is a built-in dishwasher. Professional installation is recommended for proper electrical and plumbing connections.

Dimensions

Ensure adequate space for installation. The product dimensions are:

Depth: 55.5 cm

Width: 59.8 cm

Height: 81.6 cm



Image: A diagram illustrating the precise dimensions (width, depth, height) of the Hisense HV642A65 built-in dishwasher for installation planning.

Included Components

The following components are typically included with your dishwasher:

- User Manual
- 2 Cup Holders
- Wide Mesh Base
- Fixed Pin Rows
- Large Knife Holder
- Foldable Left Cup Holder
- Foldable/Divisible Left Cup Holder
- Fixed Glass Support

Operating Instructions

Control Panel

The dishwasher features a digital display and touch controls for easy program selection and monitoring.

Loading the Dishwasher

The Hisense HV642A65 offers an extra capacity of 16 place settings, designed for efficient loading of various dishware.

- **Third Basket:** A dedicated third basket is provided for cutlery, optimizing space in the main baskets.
- **Flexible Baskets:** The three-level basket system offers flexibility for loading large pots, pans, and various dish sizes.



Image: The interior of the Hisense HV642A65 dishwasher, demonstrating its spacious capacity and organized loading for dishes and cutlery.



Image: A user adjusting the flexible baskets inside the Hisense HV642A65 dishwasher, highlighting its adaptable loading options for various dish sizes.

Wash Programs

Select from 6 automatic wash programs tailored for different types of loads:

- **Crystal Program:** Specifically designed for delicate items like glassware, ensuring gentle yet effective cleaning.

- **15-Minute Quick Clean:** Ideal for lightly soiled dishes when you need a fast wash cycle.
- Other programs for normally soiled dishes and intensive cleaning.



Image: Close-up of delicate glassware being washed in the Hisense HV642A65 dishwasher, illustrating the effectiveness of the Crystal Program.



Image: A visual representation of the 15-minute quick clean cycle on the Hisense HV642A65 dishwasher, highlighting its speed and efficiency.

Drying System

The **Total Dry** system automatically opens the dishwasher door at the end of the cycle. This promotes natural drying, reducing moisture residue without increasing energy consumption.

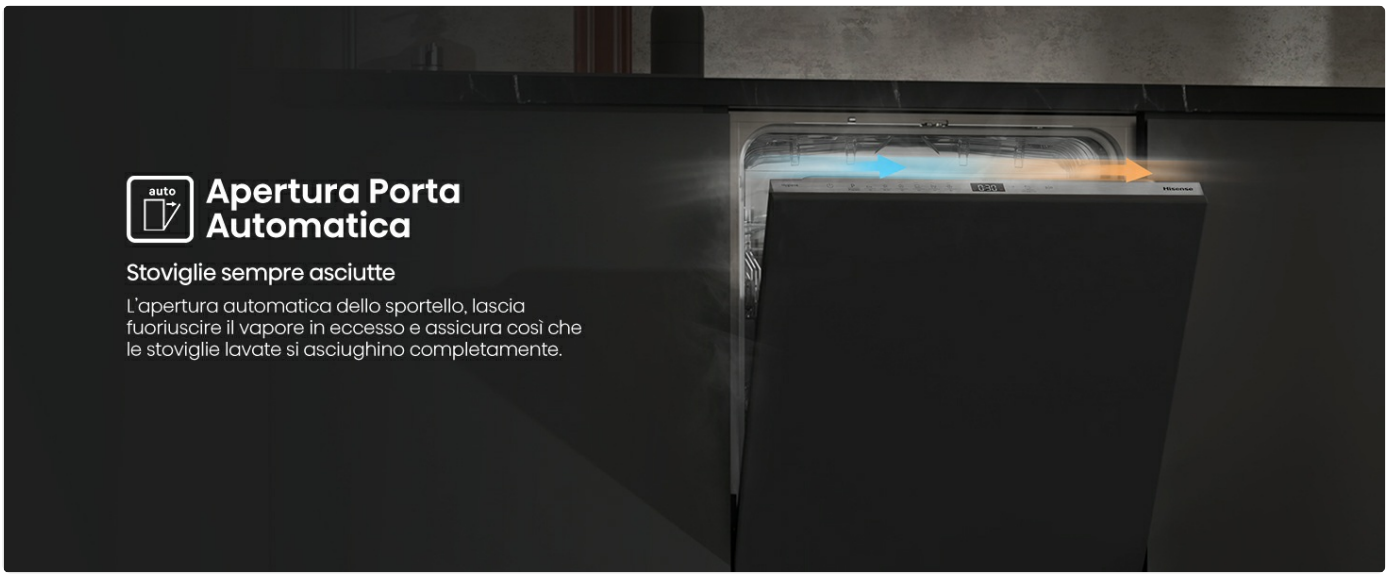


Image: The Hisense HV642A65 dishwasher door automatically opening, demonstrating the Total Dry system for enhanced natural drying.

Additional Features

- **Delayed Start Timer:** Program the wash cycle to start at a more convenient time, optimizing energy use during off-peak hours.
- **Asynchronous Motor:** Ensures high performance, durability, and a low noise level of 43 dB for a quiet kitchen environment.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your Hisense dishwasher.

Cleaning the Self-Cleaning Filter

The dishwasher is equipped with a self-cleaning filter system. For continued efficiency, periodically check and clean the filter as needed. The filter is easily accessible and detachable.



Image: A close-up view of the self-cleaning filter inside the Hisense HV642A65 dishwasher, demonstrating its design for easy maintenance.

General Cleaning

- Wipe the exterior with a damp cloth.

- Clean the spray arms regularly to ensure water jets are not blocked.
- Check and refill rinse aid and salt dispensers as indicated by the appliance.

Troubleshooting

Before contacting customer service, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	No power supply; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a wash program.
Dishes are not clean	Incorrect loading; Clogged spray arms; Insufficient detergent; Clogged filter.	Reload dishes correctly; Clean spray arm nozzles; Use appropriate detergent; Clean the filter.
Water remains in the dishwasher	Clogged drain filter; Kinked drain hose.	Clean the drain filter; Straighten the drain hose.
Excessive noise during operation	Dishes rattling; Foreign object in pump; Improper installation.	Rearrange dishes; Check for foreign objects; Verify proper installation.

If the problem persists after attempting these solutions, please contact Hisense customer support.

Technical Specifications

Brand	Hisense
Model Name	HV642A65
Installation Type	Built-in
Product Dimensions (DxWxH)	55.5P x 59.8l x 81.6H cm
Capacity	16 Place Settings
Special Features	Digital Display, Delayed Start Timer, Total Dry System, Flexible Baskets, Self-cleaning Filter
Control Type	Touch
Interior Material	Stainless Steel
Noise Level	43 Decibels
Voltage	220 Volt
Number of Programs	6
Energy Efficiency Class	A
Item Weight	32 Kilograms

Country of Origin	Slovenia



Image: The Hisense HV642A65 dishwasher prominently displaying its Class A energy efficiency rating, indicating optimized consumption.



Image: An exploded view diagram of the inverter motor in the Hisense HV642A65 dishwasher, highlighting its advanced technology for efficiency and quiet operation.

Warranty and Support

Product Warranty

This Hisense HV642A65 dishwasher comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, service requests, or questions regarding your appliance, please contact Hisense customer support. Refer to the contact information provided in the separate warranty card or on the official Hisense website for your region.

© 2023 Hisense. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question