Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VGR 001/977/377

VGR 001/977/377 3-in-1 Professional Barber Kit User Manual

Models: VGR 001 Hair Clipper, VGR 977 Hair Trimmer, VGR 377 Foil Shaver

1. Introduction

Thank you for choosing the VGR 001/977/377 3-in-1 Professional Barber Kit. This comprehensive kit includes a professional hair clipper (VGR 001), a high-performance hair trimmer (VGR 977), and an efficient electric foil shaver (VGR 377). Designed for precision and versatility, this kit provides all the tools necessary for various grooming needs, whether for professional use or at home. Please read this manual thoroughly before first use to ensure safe and optimal operation.

2. Safety Information

- Keep the devices dry. Do not use near water or in wet conditions.
- Do not disassemble the devices. For repairs, contact qualified service personnel.
- Keep out of reach of children.
- Use only the provided adapter for charging.
- Ensure the voltage specified on the adapter matches your local power supply.
- Avoid dropping the devices or subjecting them to heavy impact.
- Clean blades regularly to maintain performance and hygiene.
- Do not use if blades are damaged or broken, as this may cause injury.

3. Package Contents

Verify that all items listed below are included in your package.

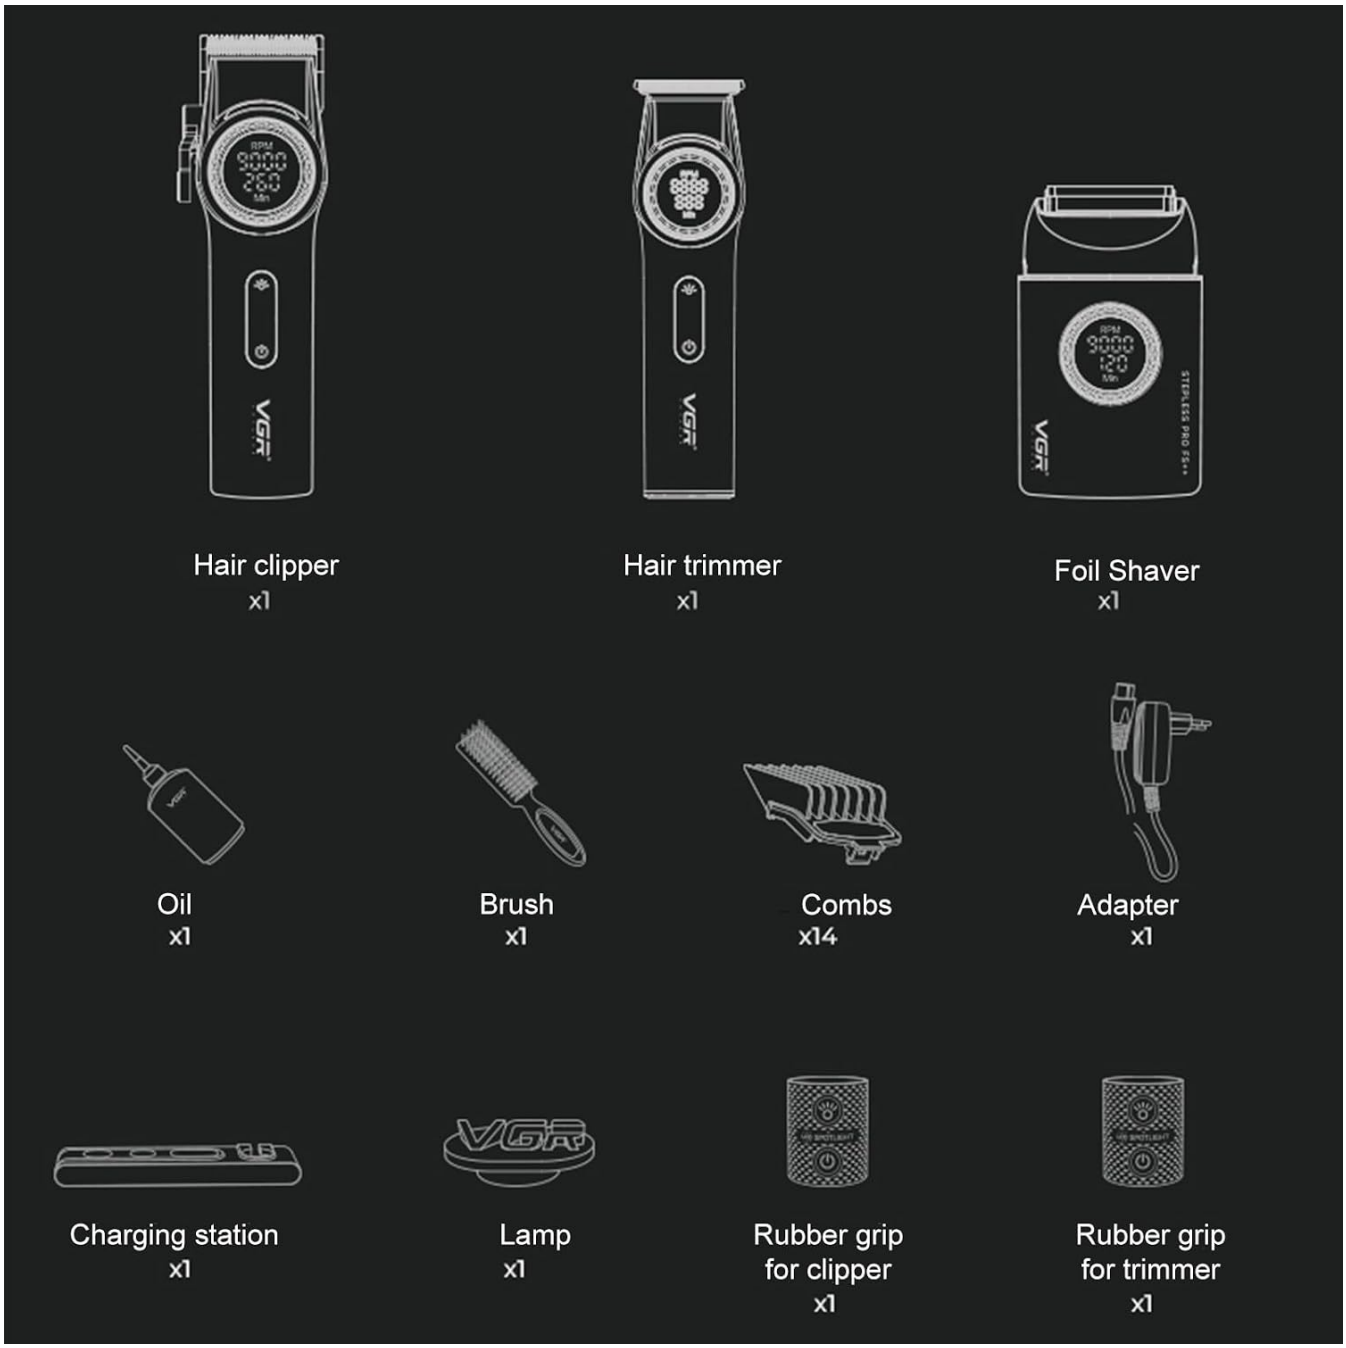


Figure 3.1: Overview of all included components in the VGR 3-in-1 Barber Kit.

- 1x VGR 001 Hair Clipper
- 1x VGR 977 Hair Trimmer
- 1x VGR 377 Foil Shaver
- 1x Integrated Charging Stand
- 1x Power Adapter
- 10x Clipper Guide Combs (1.5mm, 3mm, 4.5mm, 6mm, 9mm, 12mm, 15mm, 18mm, 21mm, 24mm)
- 4x Trimmer Guide Combs (1.5mm, 3mm, 4.5mm, 6mm)
- 1x Cleaning Brush
- 1x Blade Oil Bottle
- 2x Rubber Grips (for clipper and trimmer)
- 1x Storage Case

4. Product Overview

4.1. VGR 001 Hair Clipper

The VGR 001 is a professional hair clipper featuring ceramic and DLC-coated blades for smooth and precise cutting. It offers 21 speed settings, adjustable from 7000-9000 RPM in 100 RPM increments. Equipped with a 4600mAh battery, it provides 260-300 minutes of use after a 3-hour charge. An integrated LED spotlight enhances visibility, and the non-slip rubber handle ensures a secure grip.



Figure 4.1: Ceramic and DLC-coated blades with adjustable speed settings for the clipper and trimmer.

4.2. VGR 977 Hair Trimmer

The VGR 977 hair trimmer also features ceramic and DLC-coated blades, providing a precise trim for beards, sideburns, and detailed work. It has 21 speed settings, ranging from 6000-8000 RPM, adjustable in 100 RPM steps. Its 2500mAh battery offers 260-300 minutes of runtime after a 1.5-hour charge. Like the clipper, it includes an LED spotlight and a non-slip rubber handle.

4.3. VGR 377 Foil Shaver

The VGR 377 electric foil shaver is designed for an efficient and comfortable shave. It features a double-layer titanium alloy blade net that conforms to facial contours. Powered by a brushless DC motor, it offers up to 9000 RPM with a 21-speed adjustment knob (7000–9000 RPM). The 1400mAh lithium battery charges in 2 hours and provides 120–140 minutes of operation. A built-in LED display shows power and status.



Figure 4.2: The VGR 377 Foil Shaver features a detachable head for easy cleaning.

4.4. Charging Stand

The integrated charging stand provides a convenient and organized solution for charging all three devices simultaneously. It features LED indicators to display the real-time charging status of each unit, preventing unexpected power outages and keeping your workspace tidy.



Figure 4.3: The VGR charging station allows simultaneous charging of all three grooming tools.

5. Setup

5.1. Initial Charging

1. Connect the power adapter to the charging stand.
2. Plug the adapter into a suitable power outlet.
3. Place the VGR 001 Clipper, VGR 977 Trimmer, and VGR 377 Shaver onto their respective slots on the charging stand.
4. The LED indicators on the stand and devices will illuminate to show charging status.
5. Allow the devices to fully charge before first use.
    - VGR 001 Clipper: Approximately 3 hours for 260-300 minutes runtime.
    - VGR 977 Trimmer: Approximately 1.5 hours for 260-300 minutes runtime.
    - VGR 377 Shaver: Approximately 2 hours for 120-140 minutes runtime.



Figure 5.1: Battery specifications and charging durations for each device.

5.2. Attaching Guide Combs

Select the appropriate guide comb for your desired hair length.

- **For VGR 001 Clipper:** Choose from 10 guide combs (1.5mm to 24mm). Align the comb with the clipper blade and push firmly until it clicks into place.
- **For VGR 977 Trimmer:** Choose from 4 guide combs (1.5mm to 6mm). Align the comb with the trimmer blade and push firmly until it clicks into place.



Figure 5.2: Available guide comb sizes for the VGR clipper and trimmer.

6. Operating Instructions

6.1. Power On/Off

Press the power button located on the device to turn it on or off. The LED display will activate upon power-on.

6.2. Adjusting Speed Settings

The VGR 001 Clipper, VGR 977 Trimmer, and VGR 377 Shaver feature a 21-speed adjustment knob.

- Turn the center knob on the device to increase or decrease the RPM (revolutions per minute).
- Each turn adjusts the speed in 100 RPM increments.
- The current RPM will be displayed on the LED screen.
- **Clipper Speed Range:** 7000-9000 RPM
- **Trimmer Speed Range:** 6000-8000 RPM

- **Shaver Speed Range:** 7000-9000 RPM



Figure 6.1: Adjusting the speed using the central knob on the VGR clipper and trimmer.

6.3. LED Lighting Operation

The VGR 001 Clipper and VGR 977 Trimmer are equipped with an LED spotlight for improved visibility.

- To turn the LED light ON, click the dedicated LED light button. A beeping sound will confirm activation.
- To turn the LED light OFF, click the button again. Another beeping sound will confirm deactivation.



Figure 6.2: Activating the LED spotlight for enhanced visibility during use.

6.4. Using the Clipper (VGR 001)

1. Ensure the clipper is fully charged.
2. Attach the desired guide comb for your preferred hair length.
3. Turn on the clipper and adjust the speed as needed.
4. Hold the clipper with the blades pointing away from you and move it against the direction of hair growth.
5. For best results, use slow, even strokes.

6.5. Using the Trimmer (VGR 977)

1. Ensure the trimmer is fully charged.
2. Attach the desired guide comb for beard trimming or use without a comb for detail work.
3. Turn on the trimmer and adjust the speed.
4. For beard trimming, move the trimmer against the direction of hair growth. For detailing, use precise, controlled

movements.

6.6. Using the Shaver (VGR 377)

1. Ensure the shaver is fully charged.
2. Turn on the shaver and adjust the speed.
3. Hold the shaver gently against your skin and move it in short, circular motions or straight strokes against the direction of hair growth.
4. The flexible foil head will adapt to your facial contours for a close shave.

7. Maintenance

7.1. Cleaning Blades

1. Turn off the device and disconnect it from the power source if charging.
2. Remove any attached guide combs.
3. Use the provided cleaning brush to remove loose hairs from the blades and inside the cutting head.
4. For the VGR 377 Shaver, press and hold the release button to detach the shaver head for thorough cleaning of stubble and debris.
5. Do not rinse the entire device under water. The blades can be carefully rinsed under running water, but ensure the main body remains dry.
6. Allow blades to air dry completely before reattaching or storing.

7.2. Oiling Blades

Regular oiling ensures optimal performance and extends blade life.

1. After cleaning, apply 1-2 drops of the provided blade oil across the top of the blades.
2. Turn on the device for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

8. Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Place the device on the charging stand and allow it to fully charge.
Poor cutting/trimming performance.	Blades are dull or clogged with hair.	Clean the blades thoroughly and apply blade oil. If performance does not improve, blades may need replacement.
Device makes unusual noise.	Blades are not properly oiled or there is debris.	Clean and oil the blades. If the noise persists, discontinue use and contact support.
LED display not working.	Device malfunction.	Ensure the device is charged. If the issue persists, contact customer support.

9. Specifications

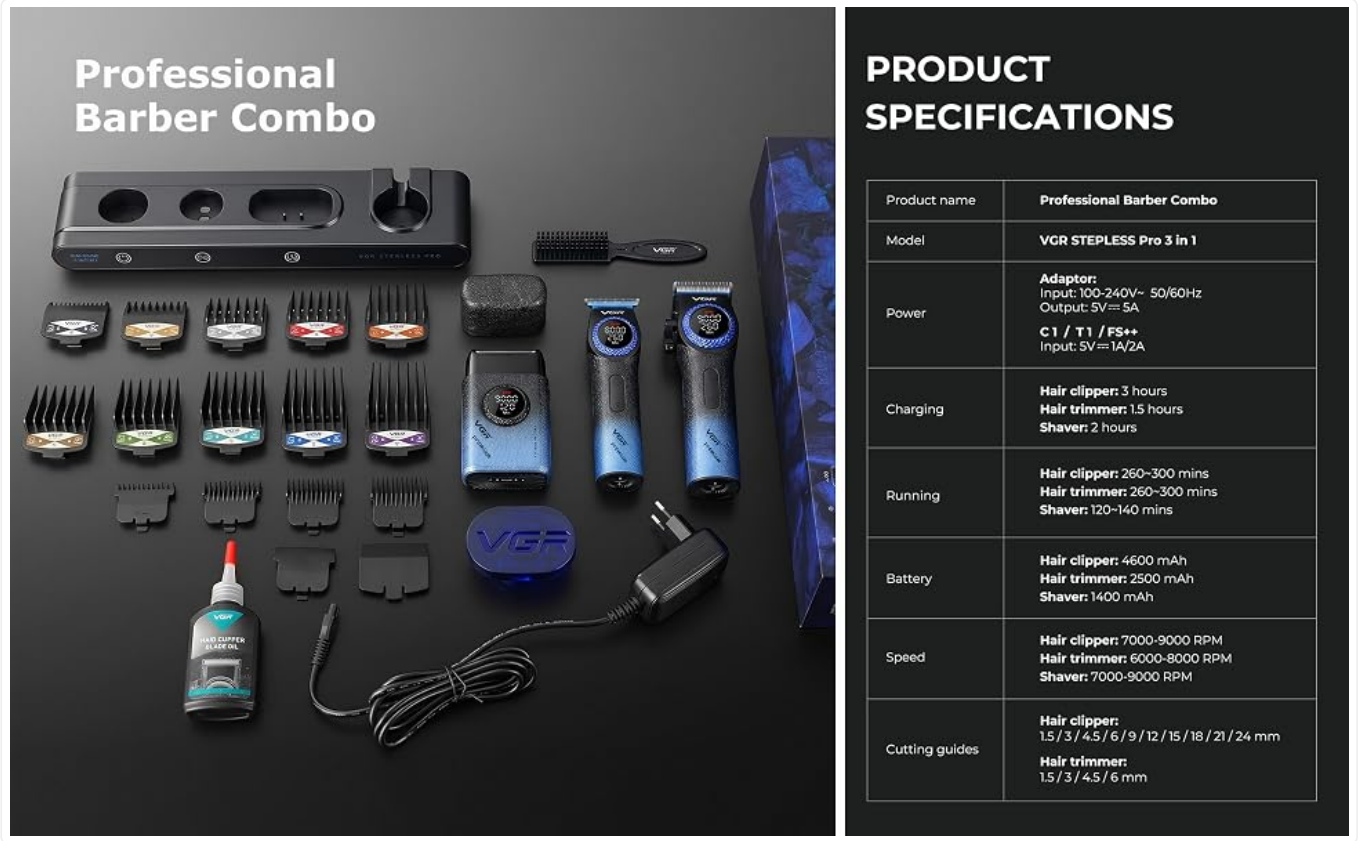


Figure 9.1: Detailed product specifications for the VGR Professional Barber Combo.

Feature	VGR 001 Hair Clipper	VGR 977 Hair Trimmer	VGR 377 Foil Shaver
Blade Material	Ceramic & DLC-coated		Double-layer Titanium Alloy
Speed Settings	21 speeds (7000-9000 RPM)	21 speeds (6000-8000 RPM)	21 speeds (7000-9000 RPM)
Battery Capacity	4600mAh	2500mAh	1400mAh
Charging Time	3 hours	1.5 hours	2 hours
Runtime	260-300 minutes	260-300 minutes	120-140 minutes
Guide Combs	10 (1.5-24mm)	4 (1.5-6mm)	N/A
Power Source	Battery Powered (Cordless)		
Special Features	LED Display, Fast Charge, Integrated Charging Stand, LED Spotlight (Clipper/Trimmer)		
Manufacturer	VGR		
ASIN	B0GXYK3LXB		
GTIN/UPC	702103775785		

10. Warranty and Support

VGR products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included in your product packaging or visit the official VGR website.

If you encounter any issues or have questions regarding your VGR 001/977/377 Barber Kit, please contact VGR customer support through the retailer where you purchased the product or via the official VGR contact channels.

- **VGR Store:** Visit the VGR Store on Amazon

© 2026 VGR. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GXYK3LXB

More documents and user manuals: **https://manuals.plus/**