BODIOO CCB-BRT26

BODIOO 26 Inch Adult Tricycle (Model CCB-BRT26) Instruction Manual

Your guide to assembly, operation, and maintenance.

Introduction

Thank you for choosing the BODIOO 26 Inch Adult Tricycle. This manual provides essential information for the safe assembly, operation, and maintenance of your tricycle. Please read it thoroughly before use and retain it for future reference.

Safety Guidelines

- Always wear a helmet when riding.
- Ensure all bolts and fasteners are tightened before each ride.
- Check tire pressure regularly.
- Familiarize yourself with the braking system before riding in traffic.
- Do not exceed the maximum weight capacity of 330 lbs (150 kg) for the tricycle and 55 lbs (25 kg) for the basket.
- Ride defensively and obey all local traffic laws.

Setup and Assembly

Your BODIOO Adult Tricycle requires assembly. We recommend watching the instructional videos provided to guide you through the process. Ensure you have all components listed below before beginning.

Included Components:

- Tricycle Frame
- Front Wheel
- Rear Wheels (2)
- Handlebars

- Seat and Seat Post
- Pedals
- Front and Rear Fenders
- Rear Basket
- Bell
- Assembly Tools (as pictured)

Assembly Steps:

1. **Derailleur, Rear Wheel, Frame, and Chain Cover Installation:** Follow the video guide for attaching the rear wheels, installing the derailleur, and securing the chain cover to the main frame.
2. **Front Wheel, Fenders, Handlebars, Seat, and Pedals Installation:** Refer to the video for mounting the front wheel, attaching the fenders, securing the handlebars, installing the seat and seat post, and screwing in the pedals.
3. **Brake Cables, Shift Cable, and Basket Installation:** Use the video instructions to connect and adjust the brake cables, install the shift cable, and attach the rear basket.

Assembly Instructional Videos:

Video 1: Derailleur + Rear Wheel + Frame + Chain Cover Installation

Your browser does not support the video tag.

This video demonstrates the detailed steps for installing the derailleur, attaching the rear wheels to the frame, and securing the chain cover. It is crucial for the proper functioning of the tricycle's drivetrain.

Video 2: Install Front Wheel, Fenders, Handlebars, Seat & Pedals

Your browser does not support the video tag.


This video provides a step-by-step guide for installing the front wheel, attaching the front and rear fenders, mounting the handlebars, and securing the seat and pedals. Proper installation ensures rider comfort and safety.

Video 3: Install Brake Cables, Shift Cable & Basket


Your browser does not support the video tag.

This video illustrates how to correctly install and adjust the brake cables for both front and rear brakes, connect the 7-speed shift cable, and securely attach the large rear basket. Correct brake and shifter setup is vital for safe operation.

Assembly Details and Features:

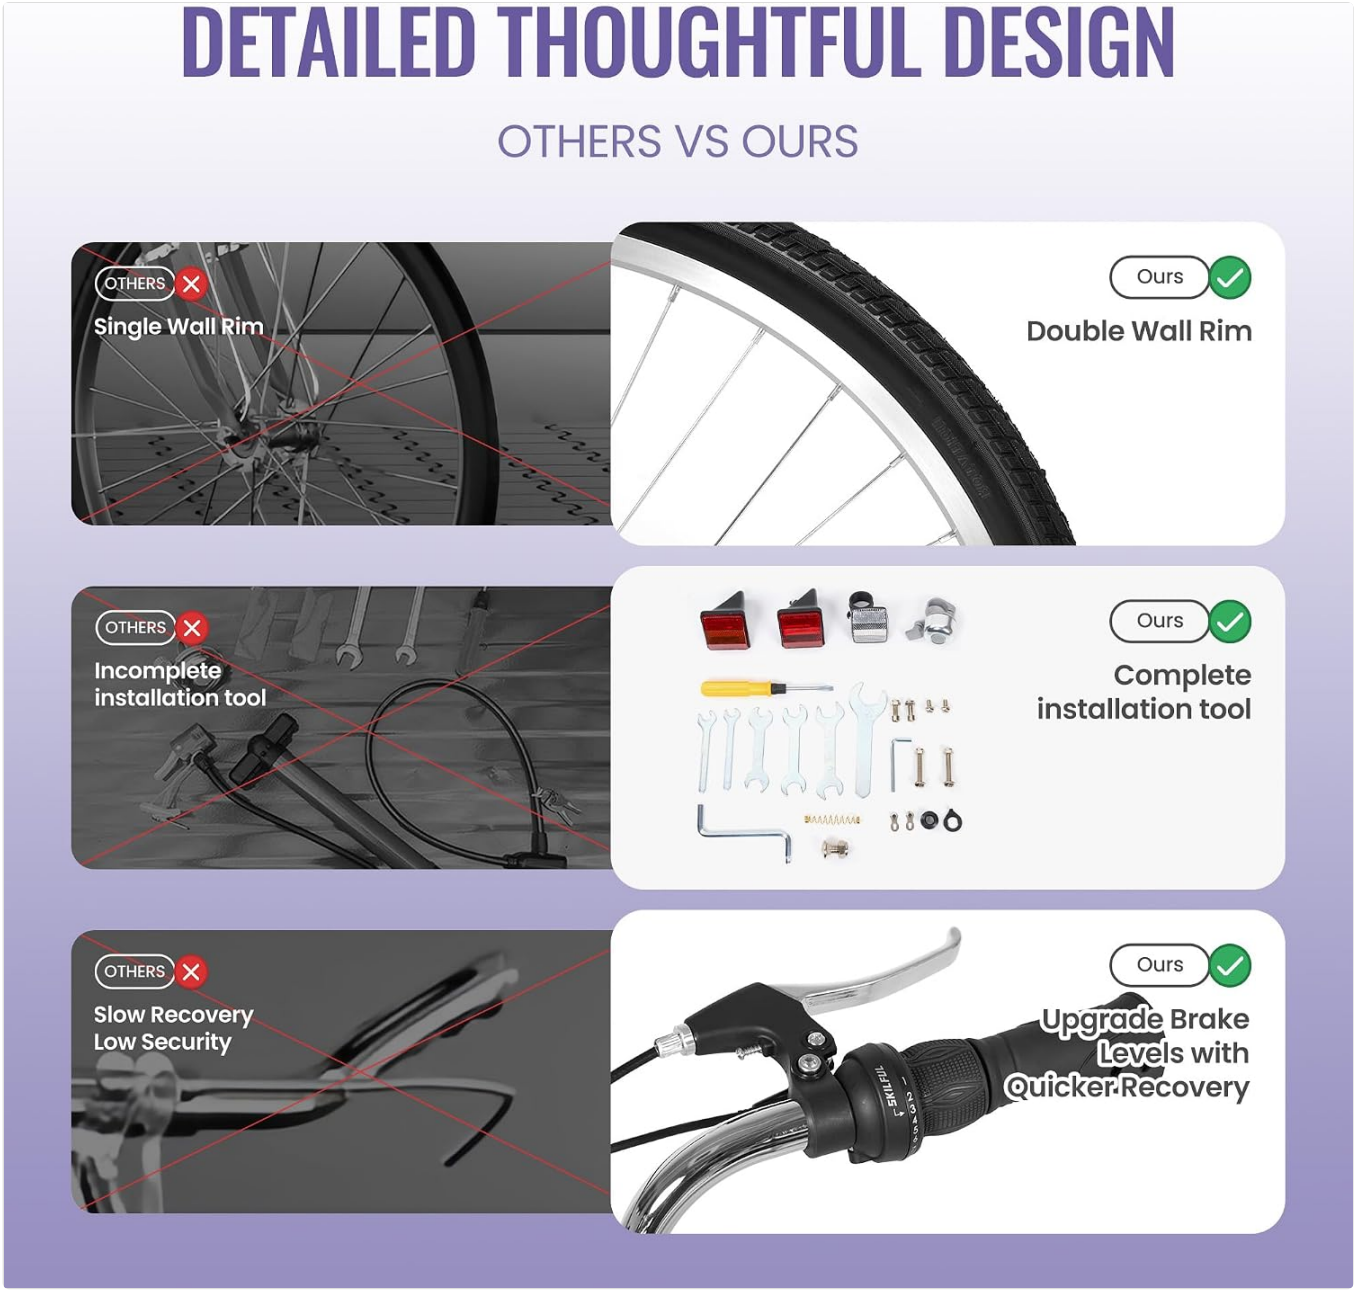

This image highlights key design features such as the durable double wall rims, the comprehensive set of installation tools included, and the upgraded brake levers designed for quicker recovery and improved security.

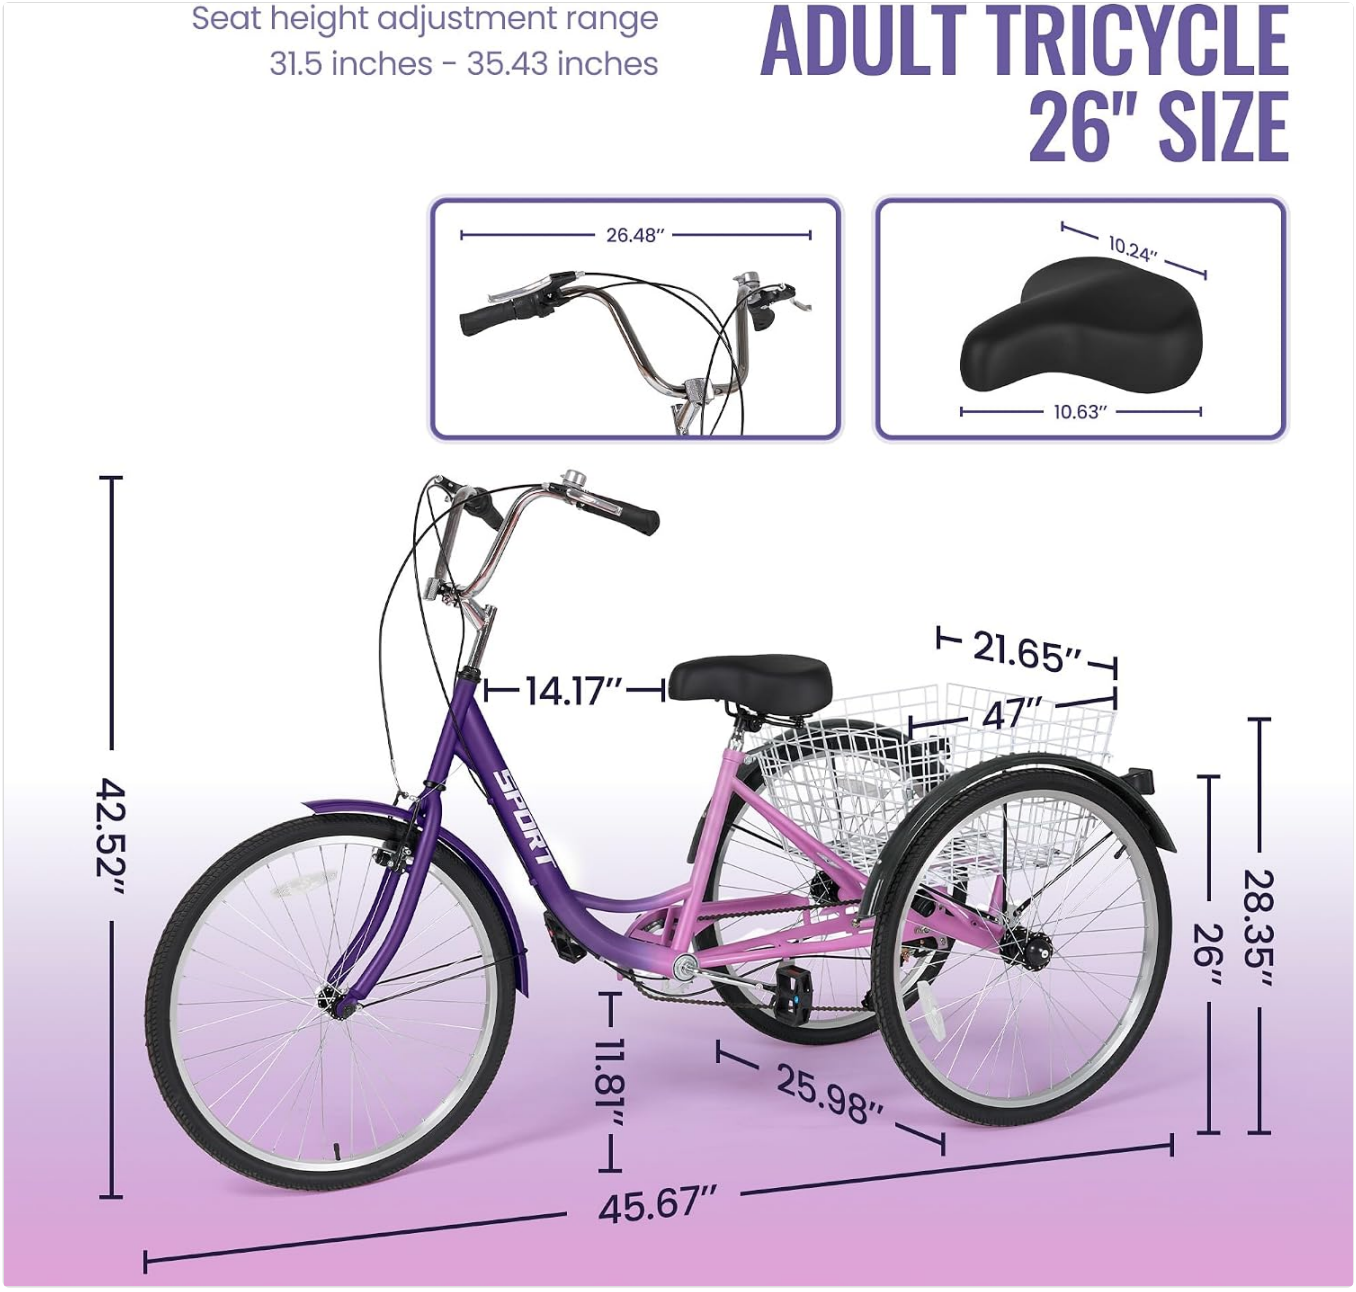

A detailed diagram illustrating the dimensions of the 26-inch adult tricycle, including the seat height adjustment range (31.5 to 35.43 inches), handlebar width, and overall length, providing essential measurements for setup and fit.

Operating Instructions

Riding Position and Comfort:

The tricycle features a low step-through design for easy mounting and dismounting. The high-rise handlebar promotes a natural, upright sitting position, reducing strain during rides. The seat height is adjustable from 31 to 35 inches to accommodate various rider heights.



This image highlights the tricycle's safety and comfort features, including the adjustable seat for an upright riding position and the sturdy rims with durable rubber tires for a stable ride.



A person standing beside the tricycle, illustrating the low step-through frame design which makes mounting and dismounting easier for riders of various mobilities.

7-Speed Gear System:

Your tricycle is equipped with a 7-speed derailleur system for versatile riding. Use the twist grip shifter on the handlebar to change gears. Shift to lower gears for easier pedaling on inclines and higher gears for faster speeds on flat terrain.



A close-up view of the 7-speed derailleur system and the twist grip shifter, demonstrating the mechanism for smooth gear changes to adapt to different riding conditions.

Braking System:

The tricycle features a combination of a front V-Brake and a rear Band Brake for reliable stopping power. Operate the brake levers on the handlebars to engage the brakes. Apply both brakes simultaneously for balanced and effective stopping.

Using the Basket:

The spacious foldable rear basket is designed for carrying items. It has a maximum load capacity of 55 lbs (25 kg). Distribute weight evenly within the basket to maintain stability while riding.

STABLE VEHICLE BODY & LARGE CAPACITY BASKET

A Large Rear Basket, Perfect For Leisure, Shopping, Exercise Or Any Time/Place You Want.

330 LBS
Vehicle load capacity

55 LBS
Basket load capacity









This image demonstrates the tricycle's stable vehicle body and large capacity basket, highlighting its ability to carry up to 330 lbs total load and 55 lbs in the basket, suitable for groceries or personal items.



The tricycle is shown with a full basket of groceries, illustrating its convenience for shopping and carrying various items. Insets show the tricycle being used for exercise, outings, shopping, and picnics.

Maintenance

Routine Checks:

- **Tires:** Check tire pressure before each ride. Maintain recommended pressure for optimal performance and safety.
- **Brakes:** Regularly inspect brake pads for wear and ensure brake levers are responsive. Adjust brake cables as needed to maintain proper tension.
- **Chain:** Keep the chain clean and lubricated to ensure smooth shifting and prevent rust.
- **Fasteners:** Periodically check all bolts, nuts, and quick releases to ensure they are securely tightened.

Cleaning and Storage:

- Clean the tricycle with a damp cloth and mild soap. Avoid high-pressure washing directly on bearings and electrical components.

- Store the tricycle in a dry, covered area to protect it from weather elements, which can cause rust and wear.

Troubleshooting

Problem	Possible Cause	Solution
Gears not shifting smoothly	Cable tension incorrect, dirty derailleur, bent hanger	Adjust shifter cable tension, clean and lubricate derailleur, inspect derailleur hanger for damage. Refer to assembly video for cable adjustment.
Brakes feel weak or spongy	Brake pads worn, cable loose, brake mechanism dirty	Check brake pads for wear and replace if necessary. Adjust brake cable tension. Clean brake calipers/band brake mechanism. Refer to assembly video for brake cable adjustment.
Tricycle feels unstable	Loose wheel nuts, uneven tire pressure, damaged frame	Ensure all wheel nuts are tightened. Check and equalize tire pressure. Inspect frame for any visible damage.
Pedals are stiff or noisy	Lack of lubrication, loose crank arm, worn bearings	Lubricate pedal bearings. Ensure crank arms are securely tightened. If noise persists, professional inspection may be required.

Specifications

Feature	Detail
Model Number	CCB-BRT26
Bike Type	Trike
Age Range	Adult
Number of Speeds	7
Wheel Size	26 inches
Frame Material	Alloy Steel
Suspension Type	Rigid
Brake Style	V Brake (Front), Band Brake (Rear)
Maximum Weight Recommendation	330 pounds (150 kg)
Basket Load Capacity	55 pounds (25 kg)
Item Weight	65.9 pounds (29.9 kg)
Minimum User Height	31 inches (78.7 cm)
Seat Height Adjustment Range	31.5 - 35.43 inches
Included Components	Basket, Bell

Warranty and Support

Warranty Information:

This BODIOO Adult Tricycle comes with a**six-month limited manufacturer's warranty**. Please retain your proof of purchase for any warranty claims.

Customer Support:

For further assistance, technical support, or to inquire about replacement parts, please visit the official BODIOO store or contact customer service through the retailer where you purchased the product.
Visit the BODIOO Store on Amazon

© 2025 BODIOO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question