Elevon QD-EL-DRYER3

Elevon 1500W Portable Clothes Dryer (Model QD-EL-DRYER3) User Manual

Introduction

Welcome to your new Elevon Portable Clothes Dryer. This manual provides essential information for the safe operation, proper installation, and effective maintenance of your appliance. Please read this manual thoroughly before using the dryer and retain it for future reference.

Important Safety Instructions

To reduce the risk of fire, electric shock, or injury, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near them.
- Before the appliance is removed from service or discarded, remove the door to the drying compartment.
- Do not reach into the appliance if the drum is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Clean the lint filter before or after each load.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Keep the area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt.
- The interior of the appliance and exhaust duct should be cleaned periodically by qualified service personnel.

- Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- Always follow the fabric care instructions provided by the garment manufacturer.

Package Contents

Verify that all items are present in the package:

- Elevon Portable Clothes Dryer
- User Manual (this document)
- Exhaust Pipe (if included with model)
- Wall Mounting Bracket (if included with model)

Product Overview

The Elevon Portable Clothes Dryer is designed for efficient and convenient drying in compact living spaces. It features a durable steel tub and multiple drying modes.




Front view of the Elevon Portable Clothes Dryer, showcasing its compact design.



Interior view of the dryer with the door open, highlighting the stainless steel diamond-patterned inner drum.



Diagram illustrating the outlet filter, exhaust pipe connection, and portable design features of the dryer.

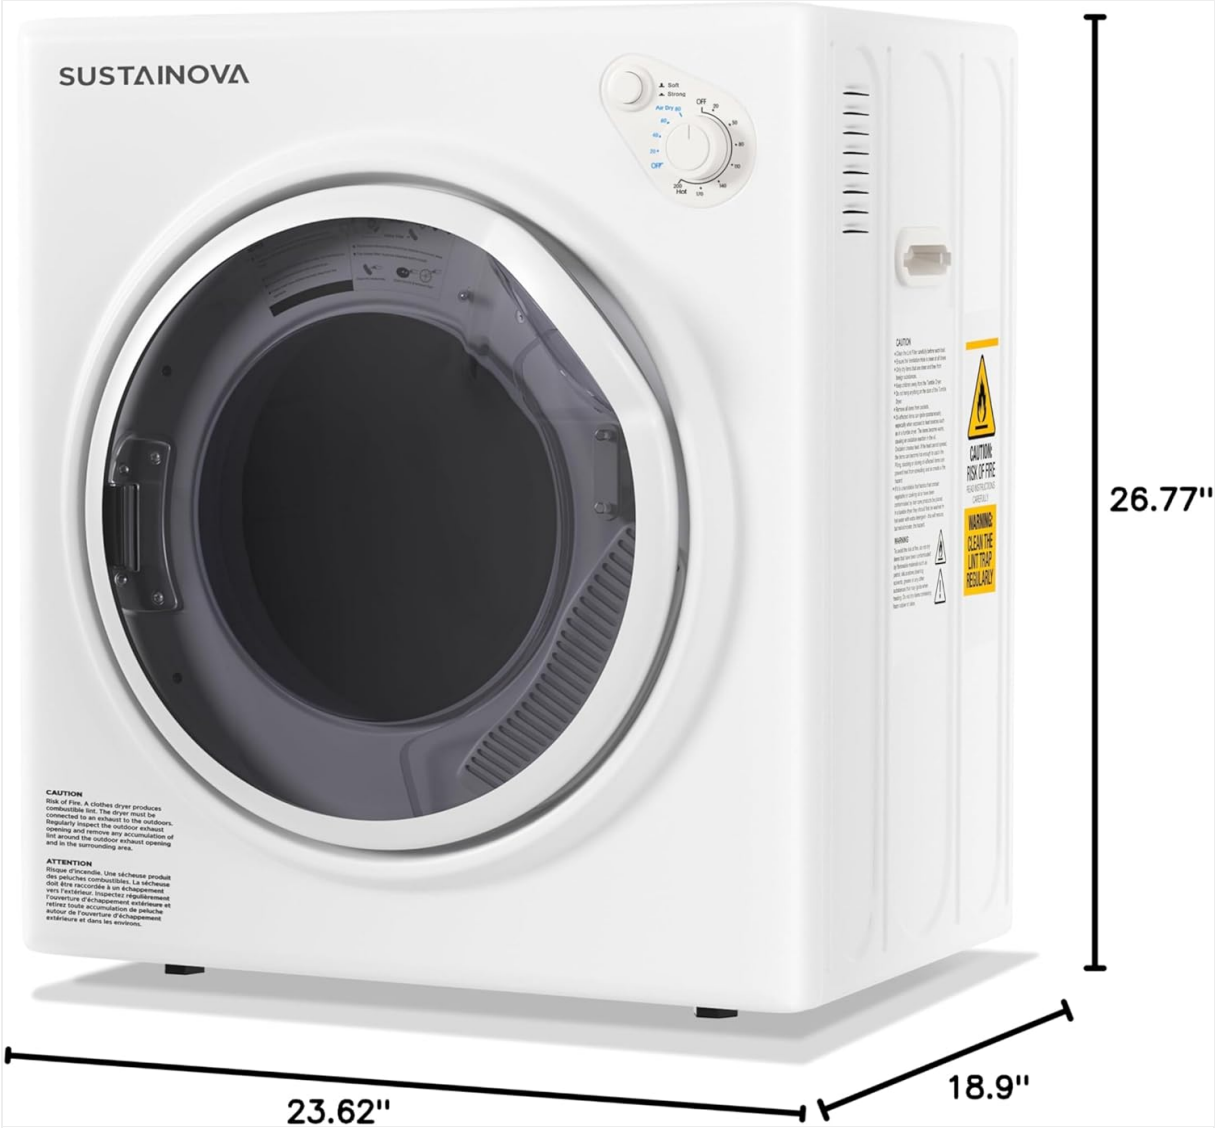

Dimensions of the Elevon Portable Clothes Dryer: 23.62 inches wide, 18.9 inches deep, and 26.77 inches high.

Setup and Installation

Placement Options

The Elevon Portable Clothes Dryer offers flexible installation to suit various living arrangements:

- **Freestanding:** Place the dryer on a stable, level surface.
- **Wall-mounted:** Use the provided bracket (if applicable) to mount the dryer securely to a wall. Ensure the wall can support the dryer's weight.
- **Stacking:** The dryer can be stacked on top of a compatible washing machine. Ensure proper stacking kit is used if required.
- **Side-by-side:** Place the dryer next to a washing machine on a level surface.



Illustration of various installation options: freestanding, wall-mounted, side-by-side, and stacking.

Ventilation Requirements

Ensure adequate ventilation for the dryer. The exhaust pipe should be properly installed to vent moist air outside or into a suitable collection system. Do not block the exhaust opening.

Operating Instructions

Control Panel Overview

The dryer features a simple control panel for selecting drying modes and time.



Close-up of the dryer's control panel, showing the timer dial and heat settings for various fabric types.

Drying Modes

Select the appropriate drying mode based on fabric type and desired outcome:

- **Cool Down (0-20 mins):** Reduces temperature at the end of a cycle to prevent wrinkles.
- **Anti-Wrinkle (30-60 mins):** Tumbles clothes without heat to minimize wrinkles.
- **Air Dry (0-80 mins):** Dries clothes using ambient air, suitable for delicate items or refreshing garments.
- **Warm (60-150 mins):** Uses moderate heat for general drying of most fabrics.
- **Hot (150-200 mins):** Uses high heat for heavy fabrics and larger loads.

Loading the Dryer

Open the dryer door and load clothes into the drum. Do not overload the dryer; ensure clothes have room to tumble freely for efficient drying. Close the door firmly.

Starting a Cycle

1. Load the dryer and close the door.

2. Select the desired drying mode and time using the control dial.
3. Press the start button (if applicable) or turn the dial to initiate the cycle.

Maintenance

Lint Filter Cleaning

The lint filter must be cleaned before or after every load to maintain drying efficiency and prevent fire hazards.

1. Open the dryer door.
2. Locate the lint filter, typically inside the door opening or at the front of the drum.
3. Remove the filter and gently peel off any accumulated lint.
4. Rinse the filter with water if necessary to remove stubborn residue, then ensure it is completely dry before reinserting.
5. Reinsert the lint filter securely before operating the dryer.

Exterior Cleaning

Wipe the exterior surfaces of the dryer with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

Troubleshooting

Common Issues and Solutions

Problem	Possible Cause	Solution
Dryer does not start	No power supply Door not closed properly Circuit breaker tripped	Check if the dryer is plugged in securely. Ensure the door is fully latched. Reset the circuit breaker.
Clothes not drying completely	Lint filter clogged Overloaded dryer Incorrect drying mode/time selected Poor ventilation	Clean the lint filter. Reduce load size. Select a longer drying time or hotter mode. Ensure exhaust vent is clear and properly installed.
Excessive noise during operation	Dryer not level Foreign object in drum Worn components	Adjust leveling feet to ensure stability. Check drum for loose items. If noise persists, contact customer support.
Dryer stops unexpectedly	Overheating (safety feature) Power interruption	Clean lint filter and ensure proper ventilation. Allow to cool. Check power supply.

Specifications

Feature	Detail

Feature	Detail
Brand	Elevon
Model Name	QD-EL-DRYER3
Capacity	3.5 cubic feet
Power	1500W
Access Location	Front Load
Color	Black/White
Material	Plastic, Stainless Steel
Dimensions (D x W x H)	18.9"D x 23.62"W x 26.77"H
Noise Level	58-62dB

Warranty and Support

Warranty Information

This Elevon Portable Clothes Dryer comes with a**1 Year Manufacturer Warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty service, please contact Elevon customer support. You may find additional resources and contact information by visiting the official Elevon Store on Amazon.