Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TABWEE T30

TABWEE T30 Android 16 Tablet User Manual

Model: T30

1. Introduction

Welcome to the user manual for your new TABWEE T30 Android 16 Tablet. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device. The TABWEE T30 features an 11-inch HD IPS display, Android 16 with Gemini AI 4.0, 16GB RAM, 64GB ROM (expandable up to 4TB), and a 7000mAh battery, designed for versatile use from entertainment to productivity.

2. What's in the Box

Please check the contents of your package. If any items are missing or damaged, contact customer support.



Image: The TABWEE T30 tablet and its accessories laid out, including the tablet itself, a power adapter, a USB-C charging cable, a user manual, and a warranty card.

- TABWEE T30 Tablet
- USB-C Charging Cable
- Power Adapter
- User Manual
- Warranty Card

3. Product Overview

Familiarize yourself with the physical components of your TABWEE T30 tablet.



Image: Front view of the TABWEE T30 tablet, highlighting its 11-inch display and the discreetly placed front-facing camera at the top center bezel.



Image: Rear view of the TABWEE T30 tablet, displaying its matte blue finish, the dual AI camera module in the upper left corner, and regulatory information.

Physical Components:

- **Power Button:** Located on the side, used to turn the tablet on/off or wake/sleep the screen.

- **Volume Buttons:** Located near the power button, used to adjust audio volume.
- **USB-C Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** For connecting wired headphones.
- **MicroSD Card Slot:** For expanding storage (supports up to 4TB).
- **Front Camera:** For video calls and selfies.
- **Dual Rear AI Camera:** For taking photos and videos.
- **Dual Speakers:** For audio output.

4. Setup

4.1. Charging the Tablet

Before first use, fully charge your tablet. Connect the USB-C cable to the tablet's USB-C port and the other end to the power adapter. Plug the adapter into a wall outlet. The battery indicator on the screen will show charging status.

4.2. Powering On/Off

- **To Power On:** Press and hold the Power button until the TABWEE logo appears.
- **To Power Off:** Press and hold the Power button until the power options appear, then tap 'Power off'.
- **To Sleep/Wake:** Briefly press the Power button.

4.3. Initial Setup Wizard

The first time you power on your tablet, you will be guided through an initial setup process:

1. Select your language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google Account or create a new one. This is essential for downloading apps from the Google Play Store.
4. Follow the on-screen prompts to complete basic settings.

4.4. Inserting a MicroSD Card

To expand your tablet's storage:

1. Locate the MicroSD card slot on the side of the tablet.
2. Gently insert the MicroSD card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. The tablet will detect the card and prompt you to format it if necessary.

5. Operating Your Tablet

5.1. Basic Navigation

Your tablet uses a touch-sensitive screen for interaction:

- **Tap:** To select an item, open an app, or press a button.
- **Swipe:** To scroll through lists, switch home screens, or navigate within apps.
- **Pinch:** To zoom in or out on photos and web pages.
- **Long Press:** To access contextual menus or move app icons.

5.2. Android 16 & Gemini AI 4.0

Experience the latest Android operating system with enhanced features and AI capabilities.



Image: A visual representation of Android 16's smooth interface and updated privacy features alongside Gemini AI, depicted as a friendly robot offering assistance for daily tasks and productivity.

- **Smarter AI:** Gemini AI 4.0 offers creative help, summaries, and optimizes workflows.
- **Productivity Boost:** True split-screen multitasking allows you to use two apps simultaneously.
- **Enhanced Privacy:** Granular permissions give you more control over your data.
- **One-tap Video Call Enhancements:** Features like background blur and portrait lighting for improved video calls.

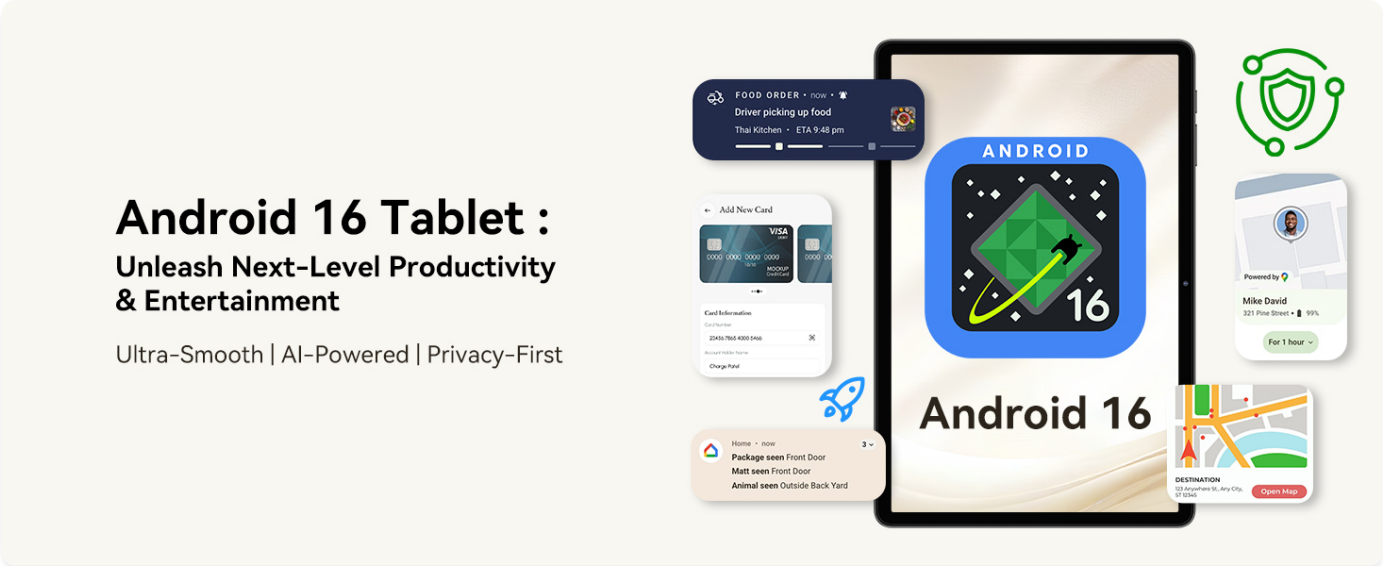


Image: Demonstrates the capabilities of Gemini AI 4.0, including Q&A and learning assistance, automatic meeting minutes summaries, a floating window chat assistant, and multi-window AI workflow for enhanced productivity.

5.3. Display Features

Your tablet is equipped with an 11-inch HD IPS display for clear and vibrant visuals.



Image: Highlights the 11-inch immersive HD display, featuring TÜV Rheinland Low Blue Light Certification for eye comfort, and compatibility with streaming services like Netflix, Prime Video, and YouTube.

- **1280x800 Resolution:** Delivers clear and vibrant visuals.
- **Eye-Care Night Mode:** Reduces blue light for comfortable reading in low light.
- **Wireless Screen Casting:** Share your tablet's screen to compatible smart TVs.

5.4. Storage Management

Your tablet comes with 64GB of internal storage, expandable up to 4TB via a MicroSD card.



Image: Illustrates the memory and storage capabilities of the TABWEE T30, featuring 16GB RAM (4GB+12GB expansion), 64GB ROM, and up to 4TB expandable storage, shown with various photos and videos.

Regularly manage your storage by deleting unnecessary files and uninstalling unused apps to maintain optimal performance.

5.5. Parental Controls

The tablet includes parental control settings to manage device usage and app access, ensuring a safe environment for children. These settings can typically be found in the device's main settings menu under 'Digital Wellbeing & parental controls'.

5.6. Connectivity

- **Wi-Fi:** Supports dual-band 5G Wi-Fi for fast internet access. Connect via Settings > Network & internet > Wi-Fi.
- **Bluetooth:** Connect wireless headphones, speakers, keyboards, and other Bluetooth devices. Enable via Settings > Connected devices > Connection preferences > Bluetooth.
- **USB-C:** For charging and connecting to a computer for file transfer.
- **3.5mm Headphone Jack:** For wired audio connections.

6. Maintenance

6.1. Cleaning Your Tablet

- Use a soft, lint-free cloth to clean the screen and body.
- Do not use abrasive cleaners, alcohol, or solvents, as these can damage the screen and finish.
- Avoid getting moisture into ports.

6.2. Battery Care

- Avoid exposing the tablet to extreme temperatures (hot or cold).
- Do not allow the battery to fully discharge frequently.
- Use only the provided charger or a certified compatible charger.

7. Troubleshooting

If you encounter issues with your tablet, try the following solutions:

Problem	Solution
Tablet won't turn on	Ensure the tablet is charged. Connect the charger and wait a few minutes, then press and hold the Power button for 10-15 seconds.
Wi-Fi connection issues	Restart your Wi-Fi router. Forget the network on your tablet and reconnect. Ensure you are within range.
Apps are crashing or freezing	Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). Restart the tablet. Update the app from Google Play Store.
Slow performance	Close unused apps running in the background. Free up storage space by deleting unnecessary files or uninstalling unused apps. Restart the tablet.
Screen is unresponsive	Restart the tablet by holding the Power button until it reboots. Ensure the screen is clean and dry.

8. Specifications

Feature	Detail
Model	TABWEE T30
Operating System	Android 16
Display	11-inch IPS HD (1280 x 800 pixels)

Feature	Detail
Processor	Octa-core Processor (A333 Five-Core with AI Acceleration)
RAM	16GB (4GB + 12GB Expansion)
Internal Storage	64GB ROM
Expandable Storage	Up to 4TB via MicroSD card
Battery	7000mAh Lithium Polymer
Front Camera	2 MP
Rear Camera	5 MP Dual AI Camera
Connectivity	Wi-Fi (802.11a/b/g/n/ac, 5G), Bluetooth 5.0, GPS
Ports	USB Type-C, 3.5mm Headphone Jack
Dimensions	25.9L x 170.6W x 0.9Th cm
Weight	550 g

9. Warranty and Support


9.1. Warranty Information

Your TABWEE T30 tablet comes with a **4-Year Manufacturer Protection**. Please refer to the warranty card included in your package for full terms and conditions.
You can extend your warranty by registering your product online:

Register Your Warranty Here

9.2. Customer Support

For any inquiries, technical assistance, or warranty claims, please contact our support team:

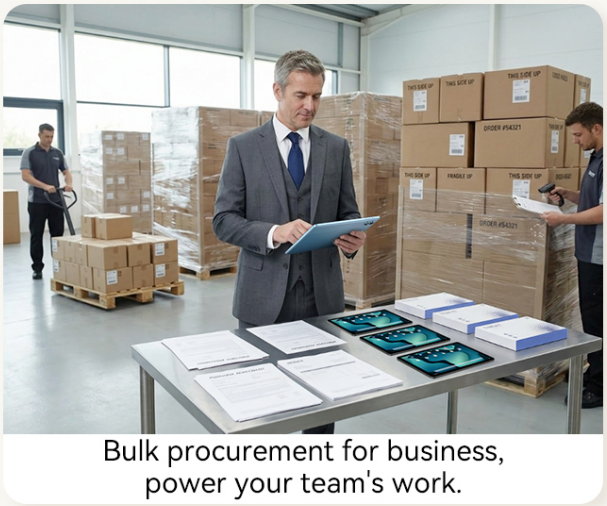

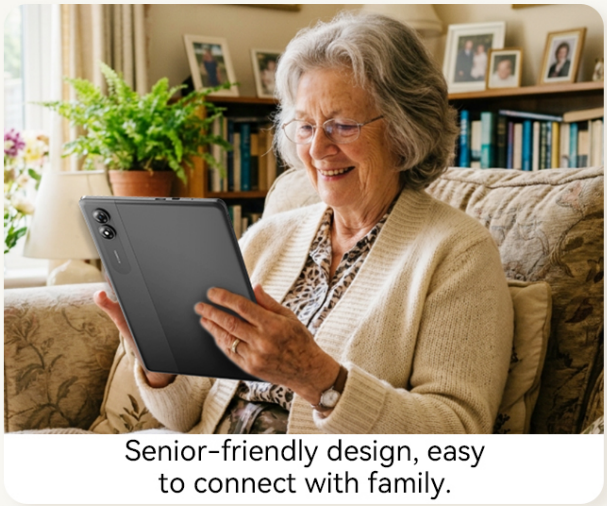


Image: After-sales service contact details for TABWEE, including email and phone numbers for various regions.

- **Email:** serviceplus.linda@gmail.com
- **Phone (UK):** +44 7700 156388
- **Phone (US):** +1 (717) 896-6060
- **Phone (CA):** +1 (587) 841-0500
- **Phone (DE):** +49 157 3598 0115

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0H1V1B2YT

More documents and user manuals: **https://manuals.plus/**