Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

GoPro MISSION 1 PRO

GoPro Mission 1 PRO Action Camera User Manual

Model: MISSION 1 PRO

1. Introduction

Welcome to the GoPro Mission 1 PRO, a cinematic waterproof action camera designed for capturing high-quality video and photos in diverse environments. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance.



Front view of the GoPro Mission 1 PRO Action Camera.

2. What's Included

Verify that all the following components are present in your package:

- GoPro Mission 1 PRO Camera
- Enduro 2 Battery
- Removable Lens Hood
- Curved Adhesive Mount
- Mounting Buckle + Thumb Screw
- USB-C Cable



The high-capacity Enduro 2 Battery, included with your camera.

3. Initial Setup

1. **Charge the Battery:** Insert the Enduro 2 Battery into the camera. Connect the camera to a power source using the provided USB-C Cable. The charging indicator will illuminate.
2. **Insert SD Card:** (*SD card not included*) Open the side door and insert a compatible microSD card (UHS-I, Class 10 or higher recommended) with the label facing the front of the camera.
3. **Attach Lens Hood:** Align the removable lens hood with the camera lens and gently push until it clicks into place.
4. **Mounting:** Use the Curved Adhesive Mount and Mounting Buckle + Thumb Screw to attach your camera to a desired surface or accessory. Ensure it is securely fastened.
5. **Power On:** Press and hold the Power/Mode button (usually on the side) for a few seconds until the camera powers on and the display illuminates.
6. **Pair with GoPro Quik App:** Download the GoPro Quik app on your smartphone. Follow the in-app instructions to pair your camera for remote control, media transfer, and advanced settings.



Side view of the camera showing the Power/Mode button.

4. Operating Your Camera

4.1 Video Recording

The Mission 1 PRO offers advanced video capabilities, including 8K Open Gate video. Press the Shutter button (top of the camera) to start and stop recording. Use the touchscreen or Quik app to select resolutions and frame rates.


- **8K Open Gate:** Utilizes the full sensor for maximum flexibility in post-production.
- **HyperSmooth Stabilization:** Advanced in-camera stabilization ensures smooth footage even in dynamic situations.
- **Slow-Motion:** Capture stunning 32x slow-motion in 1080p at 960 FPS.

The camera delivers exceptional 4K clarity, even when cropped.

4.2 Photo Capture

Capture high-resolution still images with the 50MP sensor. The camera supports Single, Interval, and Burst modes. AI can automatically adjust settings for optimal night and low-light shots.


- **50MP Photos:** High-resolution stills for detailed images.
- **44MP Frame Grabs:** Extract high-quality photos directly from 4:3 8K videos using the GoPro Quik app.

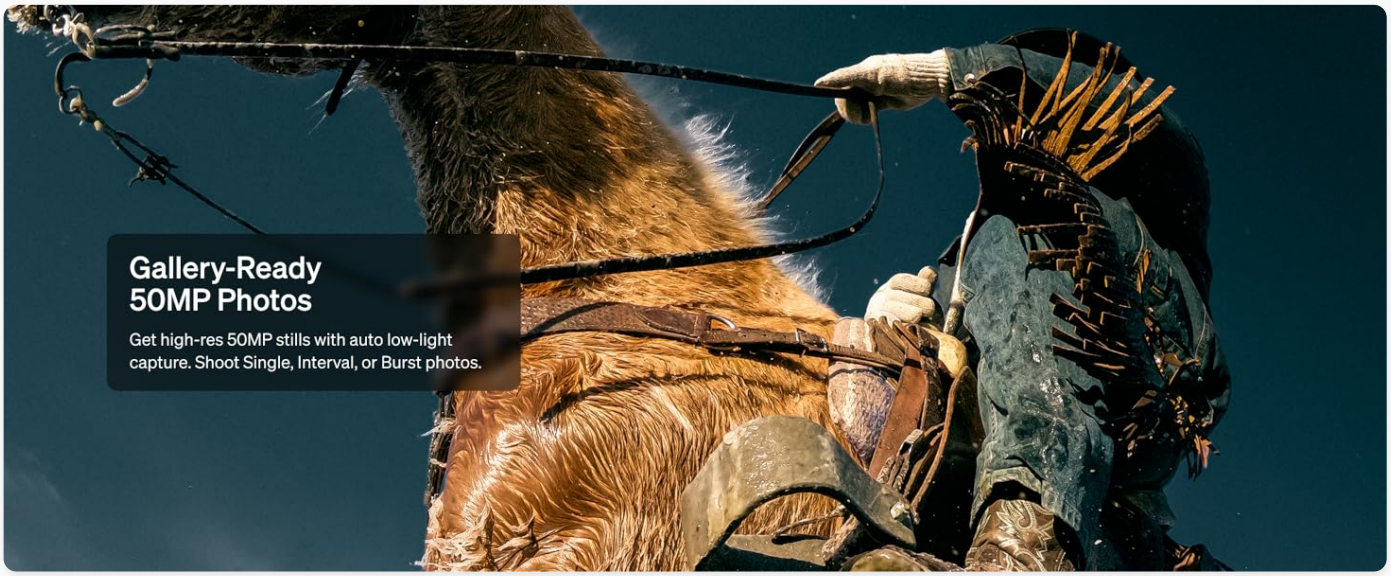

Capture gallery-ready 50MP photos with auto low-light features.

4.3 Advanced Features

- **1-inch Sensor:** Provides superior low-light performance with reduced noise.
- **Waterproof Design:** The camera is waterproof up to 66ft (20m) without additional housing.
- **360° Horizon Lock:** Keeps your footage level and stable, regardless of camera rotation.
- **Intelligent Modes:** 13 purpose-built capture modes optimize settings for various environments (e.g., Dive, Vlog, Low Light).
- **Hydrophobic Replaceable Lens Cover:** Actively sheds water droplets for clear views and reduces lens flare.
- **Pro-Level Audio:** Features 4 microphones and 32-bit float audio for extended dynamic range. Supports USB-C shotgun microphones and Bluetooth audio.
- **GoPro Labs:** Access advanced features and custom controls by downloading firmware and scanning QR codes.

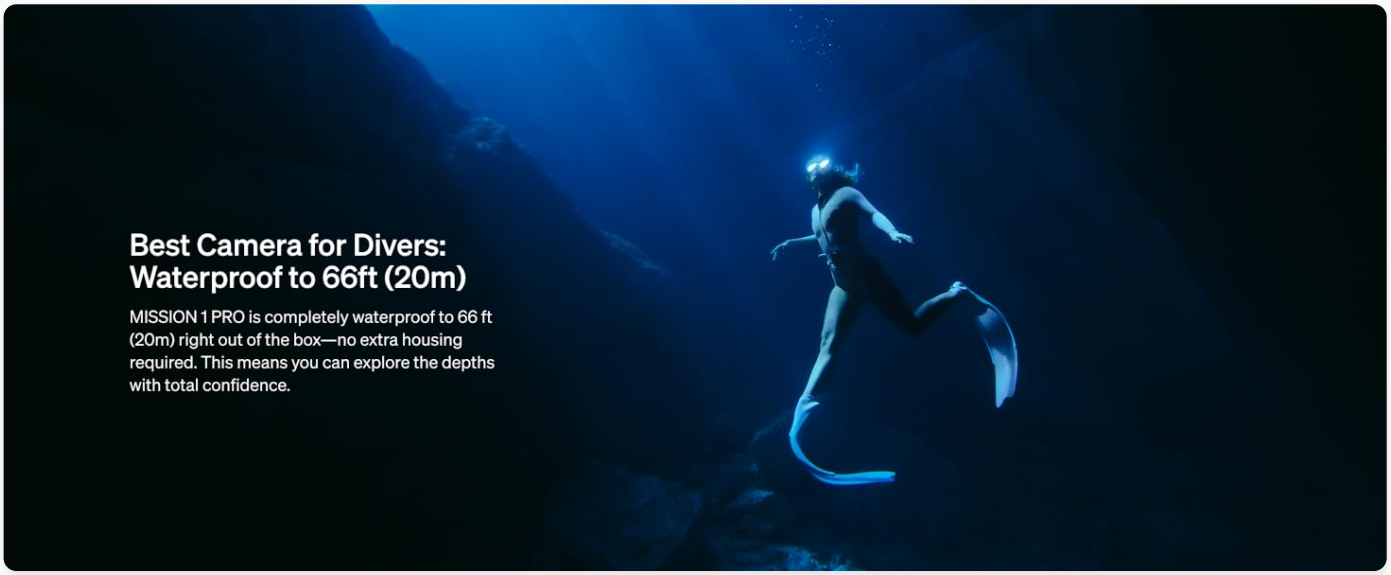

The Mission 1 PRO is waterproof up to 66ft (20m), ideal for underwater use.

5. Maintenance

- **Cleaning the Camera:** Use a soft, lint-free cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- **Waterproof Seals:** After using the camera in water, rinse it with fresh water and ensure all seals are free of debris

before drying. Do not open the battery/SD card door when wet.

- **Battery Care:** Store the Enduro 2 Battery in a cool, dry place. Avoid extreme temperatures. For long-term storage, charge the battery to approximately 50%.
- **Lens Cover:** The hydrophobic lens cover can be replaced if damaged. Refer to GoPro's official support for replacement instructions.

6. Troubleshooting

Issue	Possible Solution
Camera not powering on	Ensure the battery is fully charged. Try a different USB-C cable and power adapter. Perform a hard reset by holding the Power/Mode button for 10 seconds.
Short battery life / Overheating	Reduce video resolution or frame rate. Close unnecessary background apps if using the Quik app. Ensure the camera has adequate ventilation. Use the Enduro 2 battery for optimal performance.
Footage is shaky	Ensure HyperSmooth stabilization is enabled in settings. Check if the camera is securely mounted.
Water droplets on lens	Ensure the hydrophobic lens cover is clean. Gently wipe with a soft, dry cloth.

7. Specifications

Feature	Detail
Brand	GoPro
Model Name	MISSION 1 PRO
Photo Sensor Technology	CMOS (1-inch sensor)
Video Capture Resolution	8K (Open Gate), 4K, 1080p
Effective Still Resolution	50 MP
Image Stabilization	HyperSmooth
Water Resistance Level	Waterproof (up to 66ft / 20m)
Battery	2150mAh Enduro 2 Battery
Connectivity Technology	USB-C, Bluetooth
Item Weight	183 Grams
Item Dimensions (D x W x H)	6.9D x 6.4W x 3.9H Centimeters



Detail of the 1-inch sensor, crucial for advanced low-light performance.

8. Warranty and Support

8.1 Warranty Information

The GoPro Mission 1 PRO comes with a **1-year International Warranty**. Additionally, a **free 1-year extended India warranty** is available upon registration on the official GoPro Luxury Personified website.
For detailed warranty terms and conditions, please refer to the documentation included with your product or visit the official GoPro support website.

8.2 Customer Support

For technical assistance, troubleshooting, or service inquiries, please visit the official GoPro support website or contact their customer service. Keep your purchase receipt and product serial number handy when contacting support.
Manufacturer: GoPro, Jabil Precision Industry (Guangzhou)Co Ltd, Building No. 1199, Huangpu, Guangzhou, China
Importer Contact Information: Luxury Personified LLP, Plot number 38, Sector 20A, Faridabad-121001, Haryana

© 2026 GoPro. All rights reserved. GoPro and Mission 1 PRO are trademarks or registered trademarks of GoPro, Inc.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0H371CVMZ

More documents and user manuals: **https://manuals.plus/**