Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VGR V-173

VGR V-173 Professional Multi Grooming Kit User Manual

Model: V-173

Introduction

Thank you for choosing the VGR V-173 Professional Multi Grooming Kit. This versatile 6-in-1 grooming tool is designed for precision and convenience, offering solutions for hair, beard, nose, ear, and body grooming. Please read this manual carefully before first use to ensure safe and optimal performance of your device. Keep this manual for future reference.

Safety Information

WARNING: To reduce the risk of electric shock, injury, or fire, always follow these basic safety precautions:

- Children may not play with the appliance.
- Children may not clean or carry out any maintenance on the appliance without adult supervision.
- The appliance must only be supplied at safety extra low voltage corresponding to the marking on it.
- Do not immerse the charging adapter in water or other liquids.
- Do not use the appliance if it is damaged or malfunctioning.
- Keep the appliance away from heat sources and direct sunlight.

Package Contents

Your VGR V-173 Multi Grooming Kit includes the following items:

- 1x Hair Trimmer (Main Unit)
- 1x Full Size Trimmer Head
- 1x Body Trimmer Head
- 1x Shaver Head

- 1x Nose/Ear Trimmer Head
- 4x Guide Combs for Hair Trimmer (3mm, 6mm, 9mm, 12mm)
- 3x Guide Combs for Body Trimmer (1mm, 3mm, 6mm)
- 1x Zoom Wheel Comb (1-6mm adjustable)
- 1x Cleaning Brush
- 1x Lubricating Oil Bottle
- 1x Type-C Fast Charging Cable
- 1x Stand Base
- 1x Comb
- 1x User Manual (this document)



Image: All components included in the VGR V-173 Multi Grooming Kit.

Product Overview

The VGR V-173 is a versatile grooming tool featuring a durable stainless steel blade, a powerful motor, and an LED display for battery and speed status. Its IPX7 waterproof rating allows for easy cleaning.

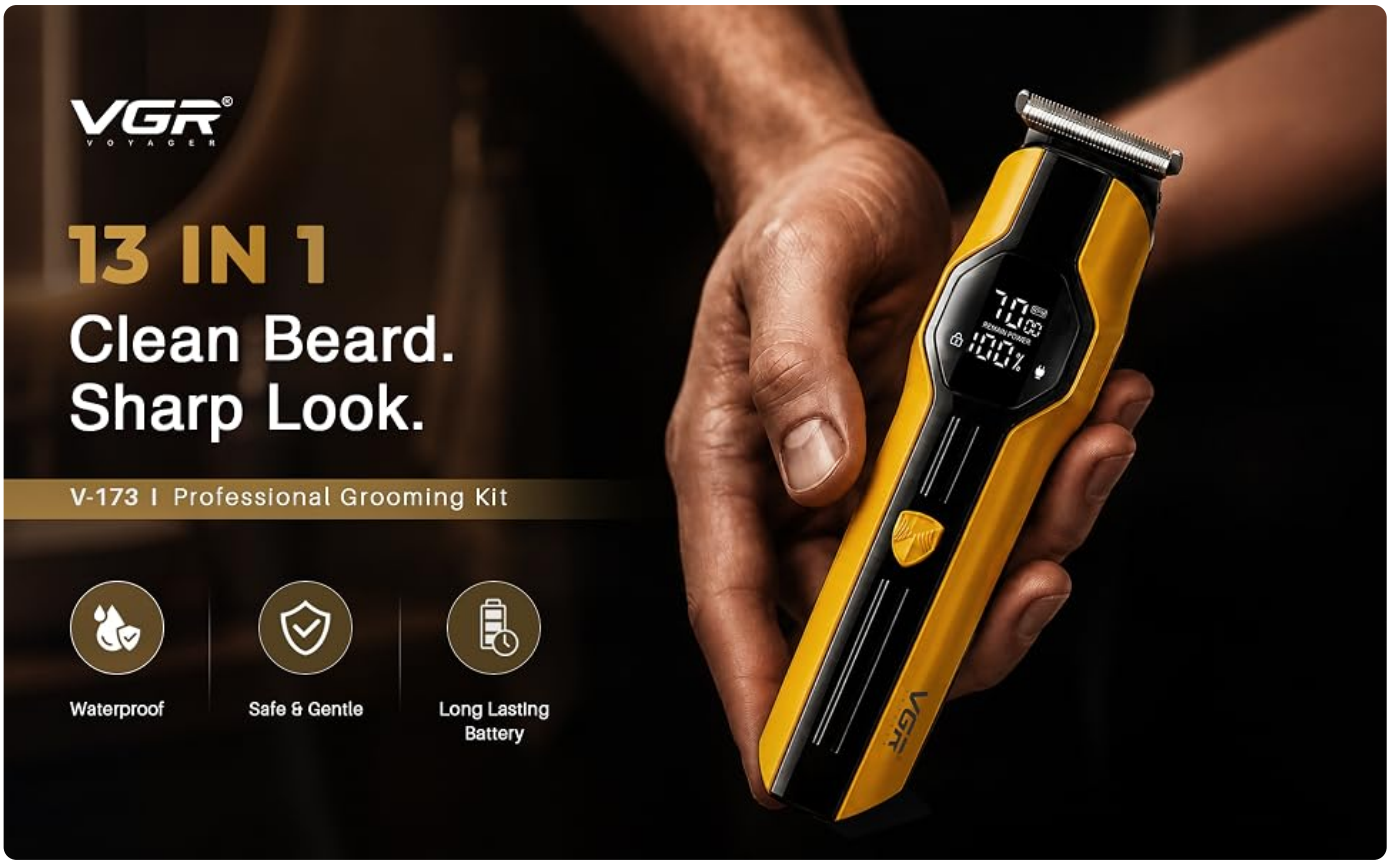


Image: Overview of the VGR V-173 Multi Grooming Kit highlighting key features like battery, waterproofing, and charging.



Image: Close-up of the VGR V-173 detailing its precision blade, powerful motor, LED display, and travel lock function.

Charging the Device

Before first use, fully charge the grooming kit. A full charge takes approximately 2.5 hours and provides up to 210 minutes of cordless runtime.

1. Ensure the trimmer is switched off.
2. Insert the Type-C charging cable into the charging port at the bottom of the trimmer.
3. Connect the other end of the cable to a USB power adapter (not included) or a compatible USB port.
4. The LED display will indicate the charging status. Once fully charged, the display will show 100%.
5. Disconnect the charger once charging is complete.



Image: The VGR V-173 trimmer showcasing its large battery capacity and charging specifications.

Setup and Operation

Attaching/Detaching Trimmer Heads

1. To attach a head: Align the desired trimmer head with the main unit and press it down until it clicks into place.
2. To detach a head: Gently push the head upwards from the front while holding the main unit firmly.

Using Guide Combs

1. Select the appropriate guide comb for your desired hair length.
2. Slide the guide comb onto the trimmer head until it securely locks.
3. For the Zoom Wheel Comb, rotate the wheel to select the desired length setting (1mm to 6mm).

Operating the Trimmer

1. Press and hold the ON/OFF button for 3 seconds to turn the trimmer on or off.
2. The LED display will show the battery percentage and current speed.
3. **Travel Lock:** To activate the travel lock, press and hold the ON/OFF button for 3 seconds while the device is off. The lock icon will appear on the display. To deactivate, press and hold the ON/OFF button for 3 seconds again.
4. **Full Size Trimmer Head:** Use for precise lines, edging, and trimming hair on the head or beard. Attach a guide comb for desired length.
5. **Body Trimmer Head:** Designed for grooming body hair. Use with body trimmer guide combs (1mm, 3mm, 6mm) for different lengths.
6. **Shaver Head:** For a close, smooth shave on the face or body. Use on clean, dry skin for best results.
7. **Nose/Ear Trimmer Head:** Gently insert the trimmer into the nostril or ear canal. Move it slowly to trim unwanted hair. Do not insert too deeply.



Image: Demonstrations of the VGR V-173 being used for head-to-toe grooming, including beard, hair, nose/ear, and clean shaving.



Image: The VGR V-173 in use for full body grooming.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the lifespan of your grooming kit.

1. **Cleaning the Blades:** After each use, switch off the trimmer and remove the attachment head. Use the provided cleaning brush to remove any loose hairs from the blades and the trimmer body.
2. **Washing (IPX7 Waterproof):** The VGR V-173 is IPX7 waterproof, allowing for easy cleaning under running water. Ensure the trimmer is switched off and disconnected from the charging cable before washing. Rinse the trimmer heads and the main unit under warm running water. Do not use hot water or harsh detergents.
3. **Lubrication:** After cleaning and drying, apply a small drop of the provided lubricating oil to the blades. Turn on the trimmer for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and smooth operation.
4. **Drying:** Allow all parts to air dry completely before reassembling or storing the trimmer.
5. **Storage:** Store the trimmer and its accessories in a dry, cool place, away from direct sunlight and out of reach of children. Use the provided stand base for convenient storage.



Image: The VGR V-173 being cleaned under running water, highlighting its IPX7 waterproof design.

Troubleshooting

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted. Travel lock is activated.	Charge the trimmer fully. Deactivate travel lock by pressing and holding the ON/OFF button for 3 seconds.
Poor trimming performance.	Blades are dull or clogged with hair. Insufficient lubrication.	Clean the blades thoroughly. Apply lubricating oil to the blades. Consider replacing the blade head if excessively dull.
Trimmer makes unusual noise.	Blades are not properly aligned or lubricated.	Ensure the trimmer head is securely attached. Clean and lubricate the blades.
Charging indicator not working.	Charging cable or adapter is faulty.	Try a different Type-C cable or USB power adapter. Ensure connections are secure.

Specifications

- **Model:** V-173
- **Power Source:** Battery Powered

- **Battery Type:** 1500mAh Lithium Battery
- **Charging Time:** 2.5 Hours
- **Runtime:** Up to 210 Minutes
- **Waterproof Rating:** IPX7 (Fully Washable)
- **Blade Material:** Stainless Steel
- **Connector Type:** Type-C
- **Product Dimensions:** 16.5 x 4 x 3.8 cm
- **Item Weight:** 182 g
- **Special Features:** Detachable Head, Low Noise, Multigroomer, Travel Size, USB Charging, LED Display

Warranty and Support

The VGR V-173 Professional Multi Grooming Kit comes with a**2-Year Brand Warranty**. This warranty covers defects in materials or workmanship under normal use during the warranty period.
For warranty claims or technical support, please refer to the contact information provided by the manufacturer or retailer. You can also scan the QR code below to get your extended warranty.

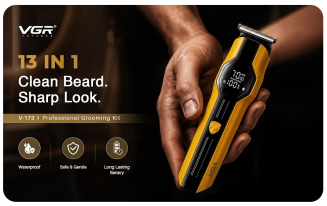


Image: VGR 2-Year Extended Warranty information with QR code.
Scan for Extended Warranty: https://www.canvaqr.com/RGGmrTYMne

Manufacturer: LooMantha Enterprises Private Limited
Address: Plot No. 1001/A, Khasra No. 3&14/2, Khatoni No.41/11, Najafgarh, Industrial Area, Village Nangli Sakrawati, New Delhi, South West Delhi, Delhi, 110043

© 2026 VGR. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0H3FCTG7P

More documents and user manuals: **https://manuals.plus/**