Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VASAGLE LSD308KD03

VASAGLE Balok LSD308KD03 Electric Standing Desk User Manual

Model: LSD308KD03

Introduction

Thank you for choosing the VASAGLE Balok LSD308KD03 Electric Standing Desk. This desk is designed to enhance your workspace by allowing seamless transitions between sitting and standing positions, promoting a healthier and more dynamic work routine. Featuring a quiet motor, customizable height settings, and smart safety features, this desk is a versatile addition to any home or office environment.



The VASAGLE Balok LSD308KD03 Electric Standing Desk in a home office setup.




The desk provides an ergonomic workspace for various tasks.

Safety Information

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Ensure there are no obstacles in the desk's lifting and lowering path to prevent damage or injury.

- Do not exceed the maximum static load capacity of 70 kg (154 lbs).
- Keep the control panel and all electrical components away from liquids to ensure safe operation.
- The desk features rounded corners to minimize the risk of bumps and scratches.

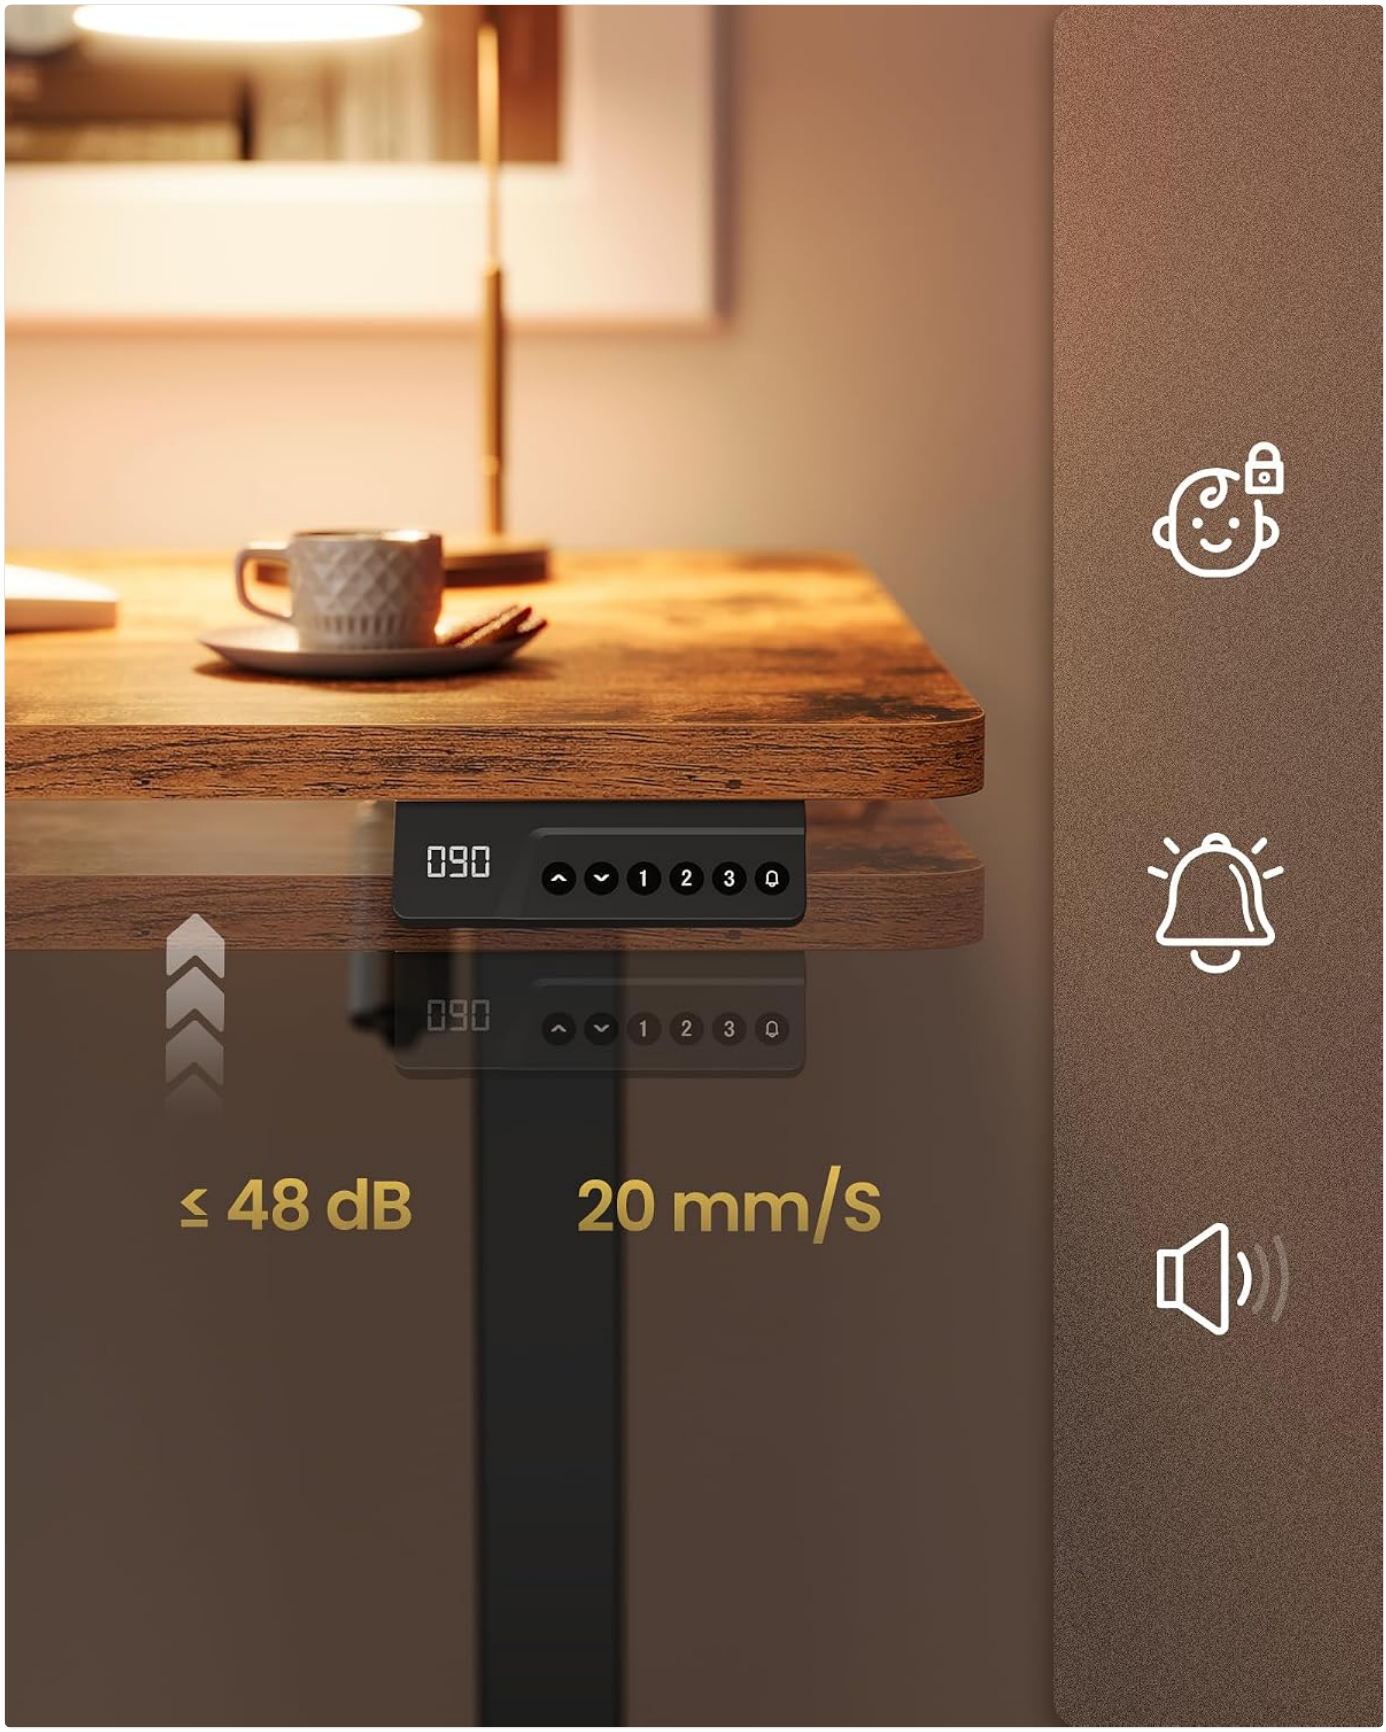

The desk is designed for stability and safety, supporting up to 70 kg.

Package Contents


Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- 1 x Electric Standing Desk (Tabletop and Frame)
- 1 x Assembly Kit (Hardware and Tools)
- 1 x User Manual
- 2 x Side Hooks

Setup and Assembly

The VASAGLE Balok LSD308KD03 desk is designed for quick and straightforward assembly. Follow the detailed instructions provided in the included installation manual for a smooth setup process. All parts are clearly numbered for easy identification.

For a comprehensive visual guide, please refer to the officialInstallation Manual (PDF).

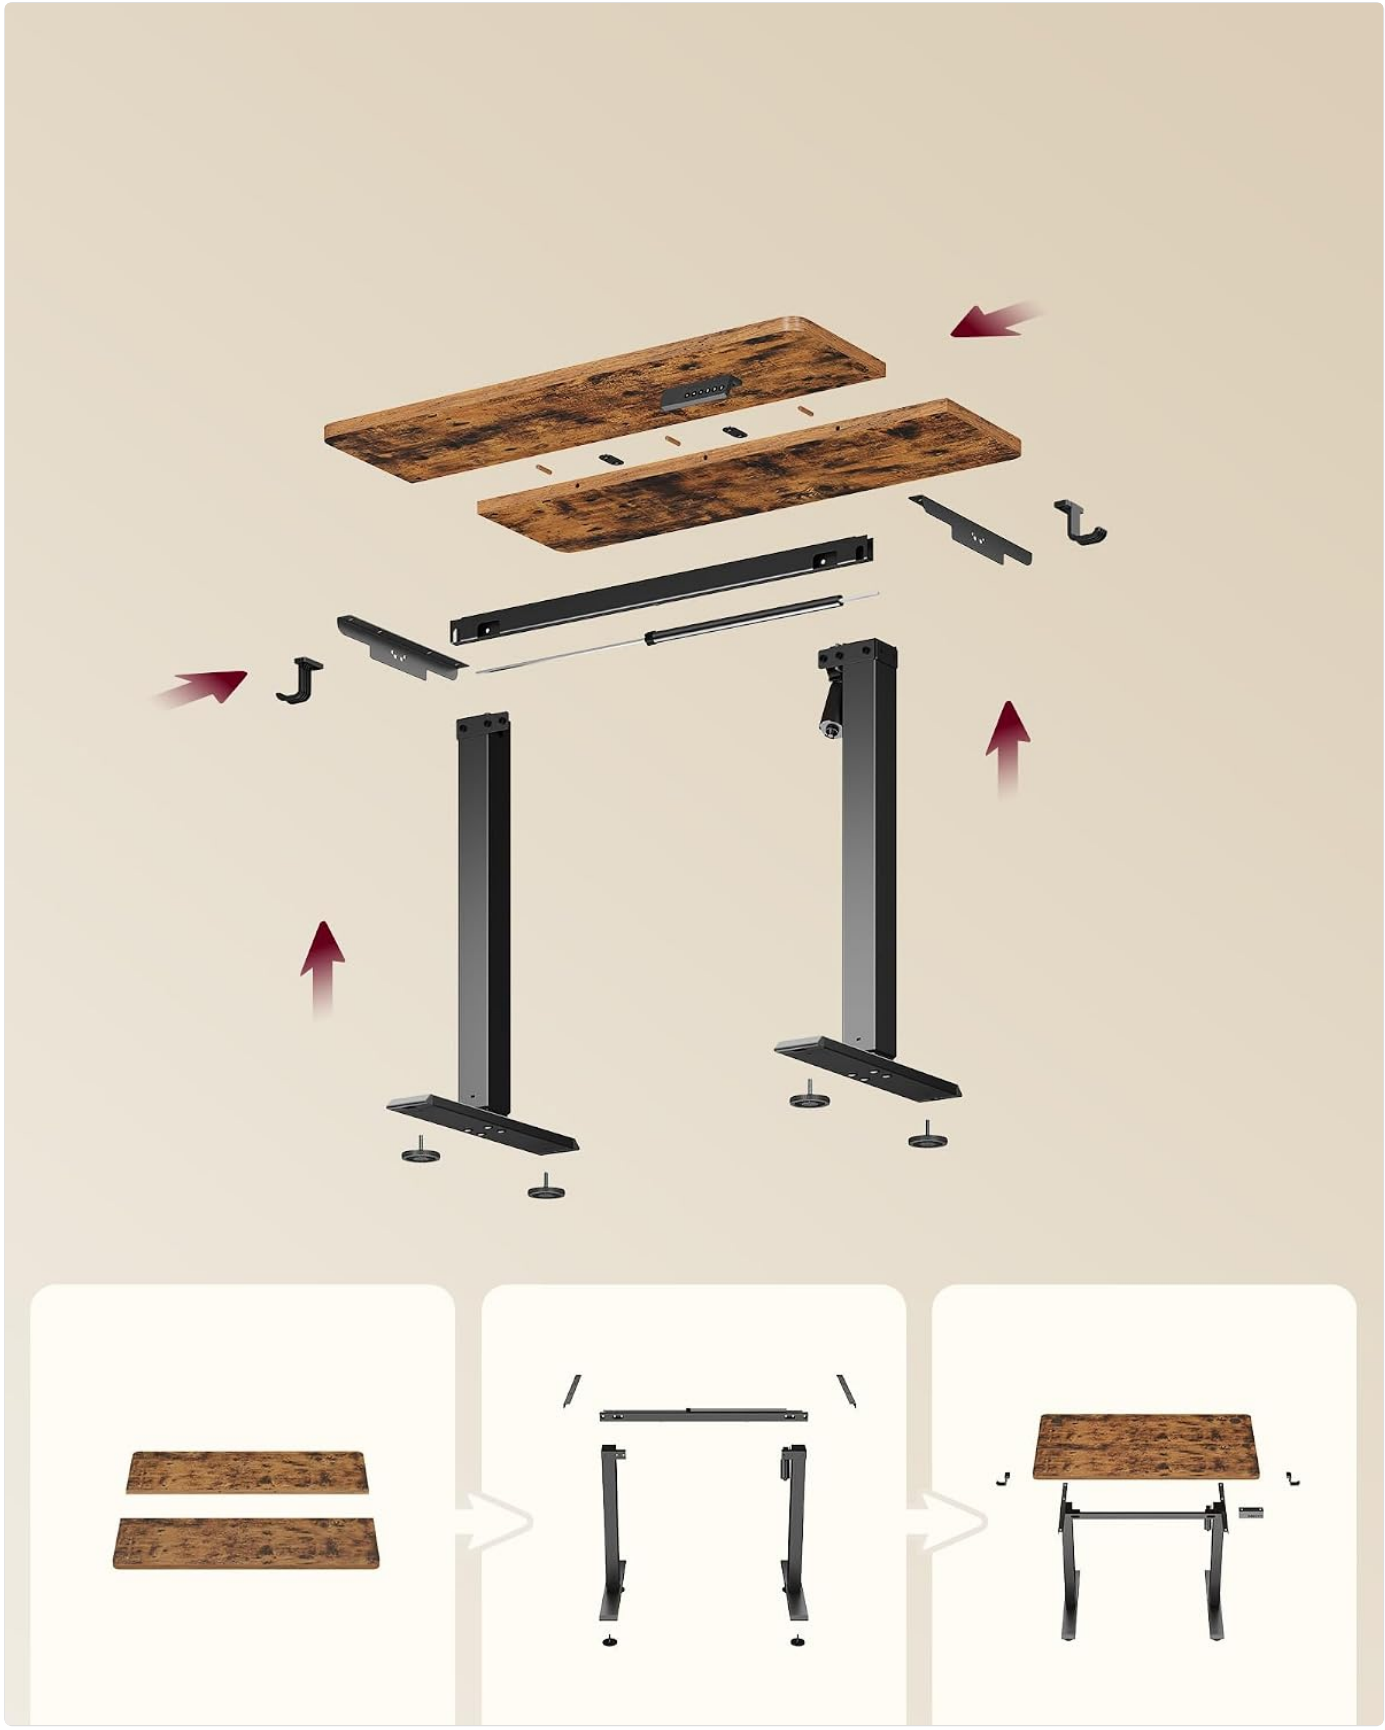

Assembly diagram illustrating the main components and steps for setting up the desk.

Operating Instructions

The desk features an intuitive control panel for easy height adjustment and access to smart functions.

Basic Height Adjustment

Use the **Up (▲)** and **Down (▼)** arrow buttons on the control panel to adjust the desk height. The height range is from 72

cm (28.3 inches) to 120 cm (47.2 inches).

Memory Presets

The desk allows you to save up to four preferred height positions for quick adjustments.

1. Adjust the desk to your desired height using the Up/Down buttons.
2. Press the **M** button, then press one of the numbered buttons (**1**, **2**, **3**, or **4**) to save the current height. The display will show 'S-' followed by the number to confirm.
3. To recall a saved height, simply press the corresponding numbered button.

Child Lock

Activate the child lock feature to prevent accidental height adjustments. Press and hold the **M** button for 3 seconds to engage or disengage the child lock. When activated, the display will show 'LOC'.

Sedentary Reminder

The sedentary reminder prompts you to change positions after a set period. To activate or adjust the reminder, consult the detailed instructions in the full installation manual.



The intuitive control panel allows for easy height adjustments and access to smart features.



Easily switch between sitting and standing positions with memory presets.

Maintenance

To ensure the longevity and optimal performance of your VASAGLE Balok LSD308KD03 Electric Standing Desk, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the tabletop and frame with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners

that could damage the finish.

- **Cable Management:** Regularly check and organize cables using the integrated cable holes to prevent tangles and ensure smooth desk operation.
- **Inspection:** Periodically inspect all screws and connections to ensure they are tight. Retighten if necessary.
- **Liquid Exposure:** Keep liquids away from the control panel and motor components to prevent electrical damage.

Troubleshooting

If you encounter any issues with your electric standing desk, refer to the following common troubleshooting tips:

- **Desk Not Moving:** Check if the power cord is securely plugged into both the desk and a working power outlet. Ensure the child lock is not activated (display shows 'LOC').
- **Uneven Movement:** Ensure the desk is placed on a flat, stable surface. Check for any obstructions under the desk or in the lifting mechanism.
- **Error Codes:** If the display shows an error code (e.g., 'E01', 'E02'), refer to the detailed installation manual for specific solutions or contact customer support.
- **Noise:** The motor operates quietly (≤ 48 dB). If you notice unusual or excessive noise, ensure all connections are secure and there are no obstructions.

For further assistance, please contact VASAGLE customer support.

Specifications

Feature	Detail
Model Number	LSD308KD03
Dimensions (L x W x H)	80 x 50 x (72-120) cm (31.5 x 19.7 x (28.3-47.2) inches)
Material	PA Plastic, Steel, Particleboard
Color	Rustic Brown, Black Frame
Weight Capacity	70 kg (154 lbs)
Motor Noise Level	≤ 48 dB
Memory Settings	4 Presets
Special Features	Child Lock, Sedentary Reminder, Cable Management Holes, Side Hooks, Rounded Corners
GTIN/UPC	194343622538



Key dimensions and weight capacity of the desk.

Warranty and Support

For warranty information or technical support, please contact VASAGLE customer service. Keep your purchase receipt and model number (LSD308KD03) handy for faster service.

You can typically find support contact information on the VASAGLE official website or through your retailer.

© 2026 VASAGLE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0H3KNXHHS

More documents and user manuals: **https://manuals.plus/**