Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Transformers TF-T59

Transformers TF-T59 Earbuds User Manual

Ear-Hook True Wireless Bluetooth Earbuds

1. Introduction

Welcome to the user manual for your Transformers TF-T59 Ear-Hook True Wireless Bluetooth Earbuds. These earbuds are designed to provide a secure fit, high-fidelity audio, and reliable performance for active lifestyles, gaming, and daily use. Featuring Bluetooth 5.4, a low-latency game mode, and IPX5 water resistance, the TF-T59 ensures an immersive and uninterrupted audio experience.

2. What's in the Box

- T59 Wireless Bluetooth Charging Case
- T59 Wireless Bluetooth Earbuds
- Type-C Charging Cable
- 13-inch Long Rubber Lace for Charging Case
- User Manual

3. Product Overview

Familiarize yourself with the components of your TF-T59 earbuds and charging case.



Image 3.1: The Transformers TF-T59 earbuds shown with their charging case. The earbuds feature an ear-hook design and are yellow and black, matching the case.



Image 3.2: The Transformers TF-T59 charging case with the included 13-inch rubber lace attached, demonstrating its portability.

4. Setup

4.1. Charging the Earbuds and Case

1. Place the earbuds into the charging case, ensuring they are correctly seated.
2. Connect the provided Type-C charging cable to the charging port on the case and to a USB power source.
3. The charging indicators on the case will illuminate to show charging status. A full charge for the earbuds and case typically takes about 1.5 hours.

The earbuds provide up to 5 hours of playtime on a single charge, with the charging case extending total playtime to approximately 24 hours.

4.2. Bluetooth Pairing

1. Open the charging case. The earbuds will automatically enter pairing mode.

2. On your device (smartphone, tablet, PC), enable Bluetooth and search for available devices.
3. Select "TF-T59" from the list of found devices to connect.
4. Once connected, you will hear an audio prompt, and the earbuds' indicator lights will change.

The TF-T59 uses Bluetooth 5.4 for a stable and fast connection. After initial pairing, the earbuds will automatically connect to the last paired device when removed from the case.

4.3. Wearing the Earbuds

1. Identify the left (L) and right (R) earbuds.
2. Gently place the earbud into your ear canal and hook the ear-hook over the top of your ear.
3. Adjust the earbud and ear-hook for a comfortable and secure fit. The ear-hook design ensures stability during physical activities.

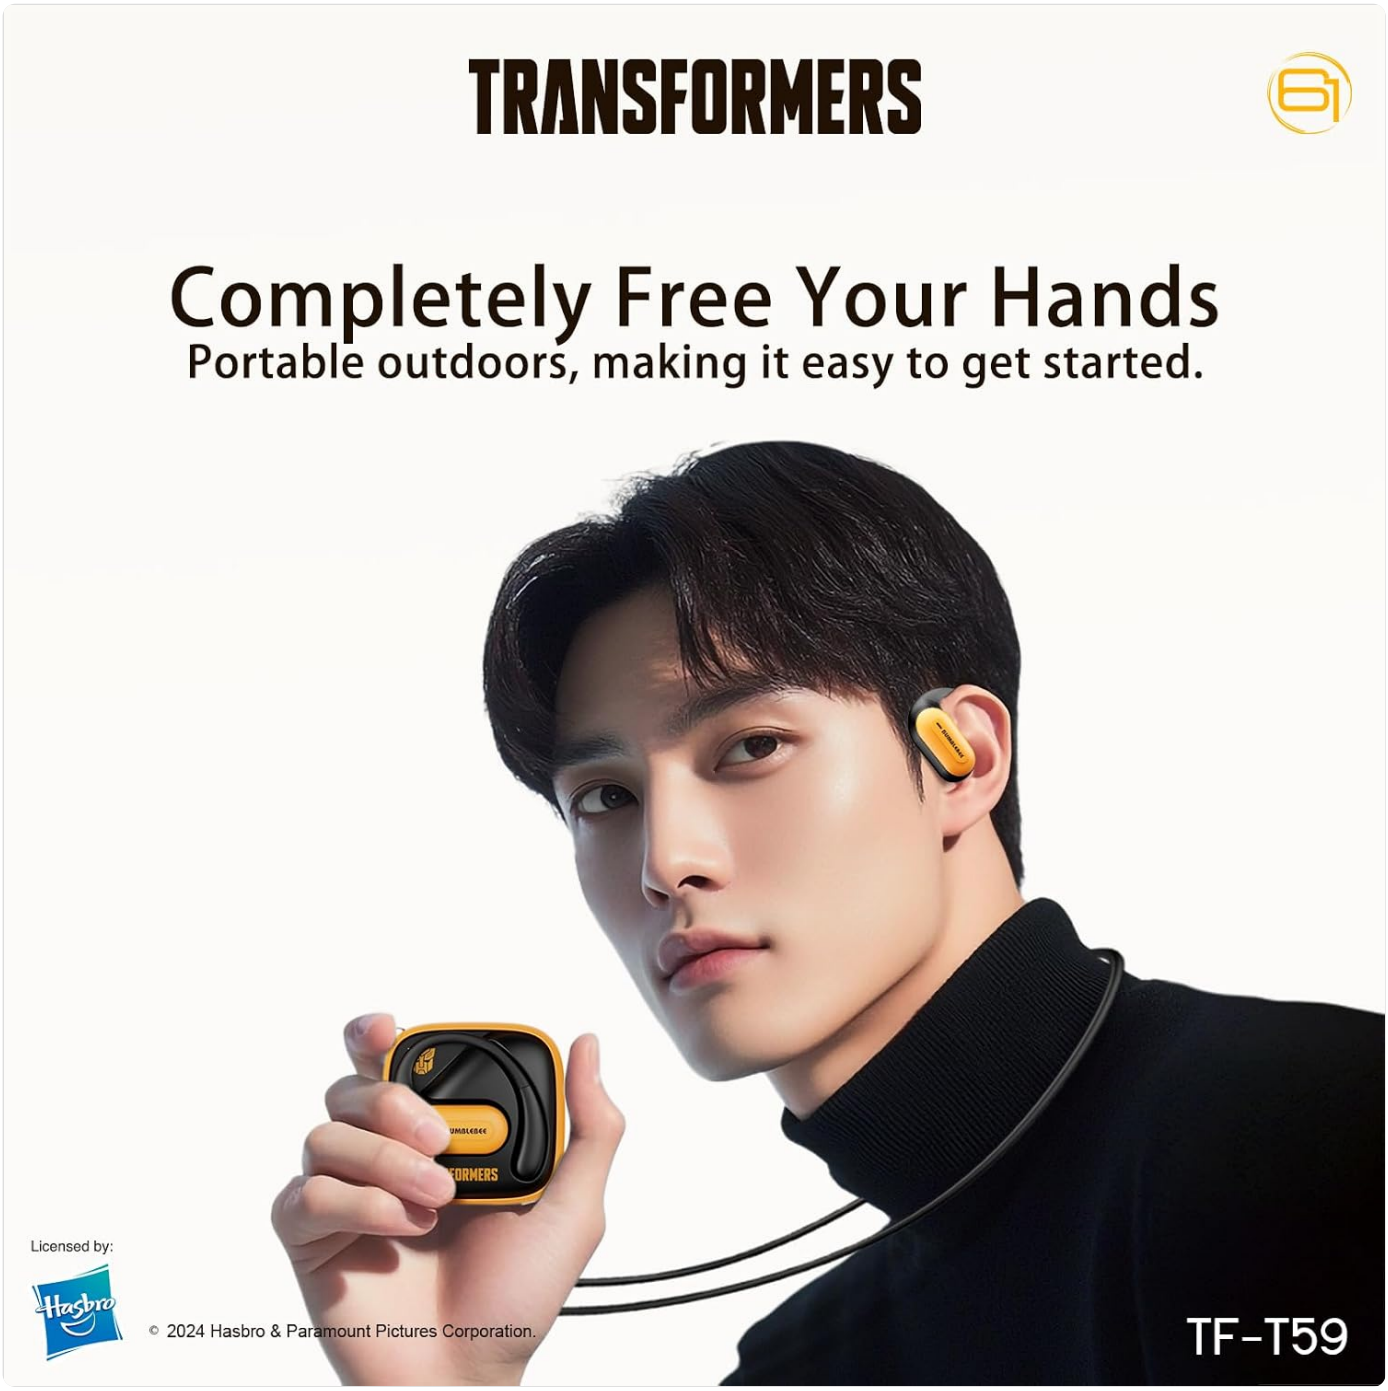


Image 4.1: A user demonstrating the correct way to wear the Transformers TF-T59 earbuds, highlighting the secure ear-hook design.

5. Operating the Earbuds

5.1. Touch Controls

The TF-T59 earbuds feature intuitive touch controls for various functions:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant:** Triple tap on either earbud.
- **Switch Modes (Music/Game):** Press and hold the right earbud for 2 seconds.

5.2. Music Mode

In Music Mode, the earbuds deliver high-fidelity audio with deep bass, clear mids, and crisp highs, optimized for listening to music, podcasts, and videos.

5.3. Low-Latency Game Mode

Switch to Game Mode for a synchronized audio experience during gaming. This mode minimizes audio delay, ensuring that in-game sound cues are more responsive.

5.4. Making and Receiving Calls

The built-in HD microphone ensures clear voice transmission during calls. Use the touch controls to manage calls as described above.

6. Maintenance

6.1. Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure charging contacts on both earbuds and case are free from dust and debris.

6.2. Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store the case and earbuds in a cool, dry place, away from extreme temperatures and direct sunlight.

7. Troubleshooting

7.1. Earbuds Not Pairing

- Ensure the earbuds are charged.
- Turn off Bluetooth on your device and turn it back on.
- Forget "TF-T59" from your device's Bluetooth list and attempt to pair again.
- Ensure no other Bluetooth devices are interfering.

7.2. No Sound or Low Volume

- Check the volume levels on both your device and the earbuds.
- Ensure the earbuds are properly connected to your device.

- Clean any debris from the earbud speakers.

7.3. Charging Issues

- Verify the Type-C cable is securely connected to both the case and the power source.
- Try a different charging cable or power adapter.
- Ensure the charging contacts on the earbuds and inside the case are clean.

8. Specifications

Feature	Detail
Brand	Transformers
Model Number	TF-T59
Connectivity Technology	Bluetooth 5.4, Wireless
Ear Placement	In Ear (Ear-Hook)
Driver Size	13 mm Dynamic Driver
Frequency Response	20 Hz - 20 KHz
Impedance	32 Ohms
Sensitivity	109 dB
Water Resistance Level	IPX5
Battery Playtime (Earbuds)	Up to 5 hours
Total Playtime (with Case)	Up to 24 hours
Charging Time	Approx. 1.5 hours (Earbuds & Case)
Charging Port	USB Type-C
Control Type	Touch Control
Microphone	Built-in HD Microphone
Material	Plastic
Weight	4.7 Ounces (total)
UPC	788934992140

9. Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Transformers product support website. Keep your purchase receipt for warranty claims.
If you encounter any issues not covered in this manual, please contact customer service for assistance.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0H4BCRR8S

More documents and user manuals: **https://manuals.plus/**