Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

PHILCO PMO38A

Philco PMO38A 4-in-1 Microwave Oven with Air Fryer, Grill, and Convection - User Manual

Model: PMO38A

Introduction

Thank you for choosing the Philco PMO38A 4-in-1 Microwave Oven. This appliance combines the functionalities of a microwave, air fryer, grill, and convection oven, offering versatility for your cooking needs. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.



Image: Front view of the Philco PMO38A 4-in-1 Microwave Oven, showcasing its sleek black and silver design with a digital display and control panel.

Important Safety Instructions

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Always ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.
- Supervise children closely when the appliance is in use.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only use utensils suitable for microwave ovens.

Package Contents

Verify that all items are present and in good condition upon unpacking:

- Philco PMO38A 4-in-1 Microwave Oven
- Glass Turntable
- Metal Baking Pan
- Air Fryer Basket
- Grill Rack
- User Manual (this document)

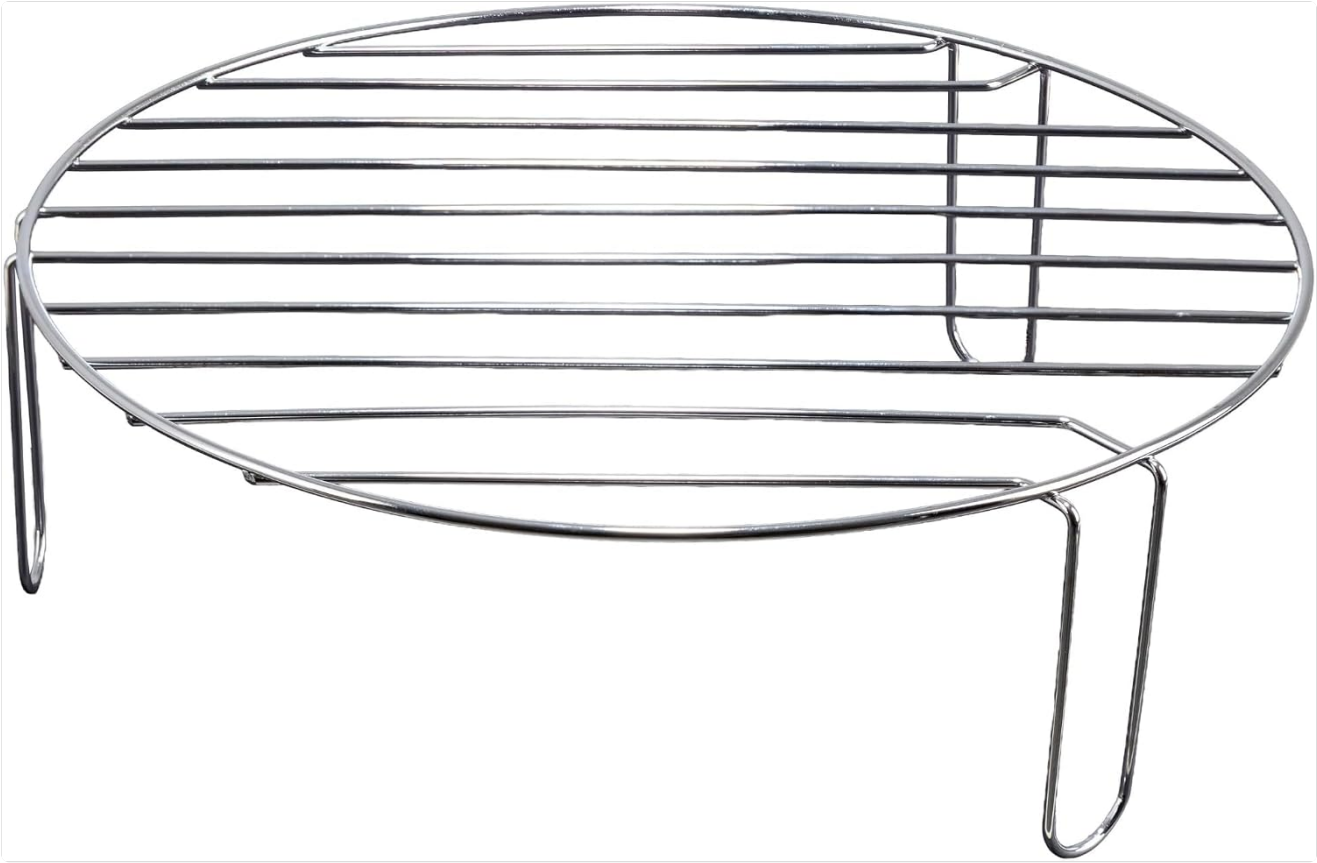


Image: All included accessories for the Philco PMO38A, including the glass turntable, metal baking pan, air fryer basket, and grill rack, displayed alongside the microwave oven.

Setup and Installation

1. **Unpacking:** Remove all packaging materials and accessories. Inspect the oven for any damage such as dents or a misaligned door. Do not install if damaged.
2. **Placement:** Place the oven on a flat, stable surface that can support its weight. Ensure adequate ventilation by leaving at least 10 cm (4 inches) of space at the back, 20 cm (8 inches) at the top, and 5 cm (2 inches) on the sides.
3. **Power Connection:** Ensure the voltage matches your household supply (220 Volts for this model). Plug the oven into a grounded electrical outlet.
4. **Turntable Installation:** Place the turntable ring inside the oven cavity. Position the glass turntable securely on top of the turntable ring.



Image: Interior view of the Philco PMO38A microwave oven, showing the placement of the glass turntable and other accessories like the air fryer basket and grill rack.

Operating Instructions

The Philco PMO38A offers four primary cooking modes: Microwave, Air Fryer, Grill, and Convection.

1. Microwave Function

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door.
3. Press the "Micro-ondas" button.
4. Use the number pad to enter the desired cooking time.
5. Press "Ligar" (Start) to begin cooking.
6. To adjust power level, press "Potência" after setting time and select desired level (e.g., P100 for 100% power).

2. Air Fryer Function

Use the Air Fryer basket for best results.

1. Place food in the Air Fryer basket, then place it on the glass turntable.
2. Press the "Air Fryer" button.
3. Select a pre-programmed Air Fryer setting (e.g., "Batata Frita" for French Fries) or manually set time and temperature if available.
4. Press "Ligar" (Start).



Image: Close-up of the black perforated air fryer basket accessory, designed for crisping food in the Philco PMO38A oven.

3. Grill Function

Use the grill rack for grilling.

1. Place food on the grill rack, then place it on the glass turntable.
2. Press the "Grill" button.
3. Enter the desired grilling time.
4. Press "Ligar" (Start).



Image: Close-up of the metal grill rack accessory, suitable for elevating food closer to the heating element during grilling in the Philco PMO38A oven.

4. Convection Function

The convection function uses a fan to circulate hot air, similar to a traditional oven.

1. Place food in an oven-safe dish on the glass turntable or metal baking pan.
2. Press the "Convecção" button.
3. Set the desired temperature and cooking time.
4. Press "Ligar" (Start).



Image: Close-up of the round, silver-colored metal baking pan accessory, ideal for baking and roasting in the Philco PMO38A

convection oven mode.

Other Functions:

- **Defrost (Descongelar):** Press the "Descongelar" button, then select defrost by time or weight. Enter the value and press "Ligar".
- **Pre-programmed Menus:** The control panel features dedicated buttons for common foods like Popcorn, Brigadeiro, and Pizza. Simply press the corresponding button and then "Ligar".
- **Odor Removal (Tira Odor):** Use this function to remove lingering food odors from the oven cavity. Refer to the control panel for specific instructions.
- **Keep Warm (Manter Aquecido):** This function helps keep food warm after cooking.

Care and Maintenance

Regular cleaning and proper care will extend the life of your Philco PMO38A microwave oven.

- **Cleaning the Interior:** After each use, wipe the interior with a damp cloth and mild detergent. For stubborn stains, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue.
- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Turntable and Accessories:** The glass turntable, metal baking pan, air fryer basket, and grill rack can be washed with warm, soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Odor Removal:** Use the "Tira Odor" function as needed to refresh the oven interior.
- **Do Not Use:** Harsh detergents, abrasive cleaners, or metal scouring pads, as these can damage the oven's surfaces.

Troubleshooting Guide

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close door firmly; Check household fuse or reset circuit breaker.
Food not cooking evenly	Food not stirred or turned; Incorrect power level or cooking time; Turntable not rotating.	Stir or turn food during cooking; Adjust power level and time; Ensure turntable and ring are correctly placed and free of obstructions.
Excessive steam or condensation	High moisture content in food; Normal during cooking.	Wipe interior with a dry cloth after use. This is generally normal and not a fault.
Oven light not working	Light bulb burned out.	Contact qualified service personnel for bulb replacement.

If the problem persists after attempting these solutions, please contact customer support.

Technical Specifications

Brand	PHILCO
Model Number	PMO38A
Capacity	33 Liters
Voltage	220 Volts
Power	1100 Watts
Product Dimensions (D x W x H)	46 cm x 51.5 cm x 31 cm
Item Weight	15.1 Kilograms
Color	Black
Control Type	Button
Installation Type	Countertop
Special Features	4-in-1: Microwave, Convection, Grill, Air Fryer; Odor Removal Function; Pre-programmed Buttons; Defrost by Time/Weight.

Warranty and Support

Warranty Information

This Philco PMO38A microwave oven comes with a**1-year manufacturer's warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.
For extended warranty options, please refer to the retailer's offerings at the time of purchase.

Customer Support

For technical assistance, service requests, or questions regarding your Philco PMO38A, please contact Philco customer support. Visit the official Philco website for contact details or refer to the warranty card included with your product.
You can also visit the Official Philco Store on Amazon for more information and product support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0H5MGHDSG

More documents and user manuals: **https://manuals.plus/**