Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CAMWORLD AC32

CAMWORLD AC32 2K Vlog Camera User Manual

Model: AC32

Introduction

Thank you for choosing the CAMWORLD AC32 2K Vlog Camera. This compact and versatile camera is designed for capturing high-quality video and photos, perfect for vlogging, travel, sports, and everyday moments. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance.

What's in the Box

Please check the package contents to ensure all items are present:

- 1 × CAMWORLD AC32 Vlog Camera
- 1 × 32 GB Memory Card (pre-installed or separate)
- 1 × USB Cable (Type-A to Type-C)
- 1 × User Manual



Image: CAMWORLD AC32 camera and its accessories, including a USB cable, 32GB memory card, and wrist strap.

Product Overview

360° Rotating Lens

The camera features a manually rotatable lens that allows for 180° vertical and 180° horizontal rotation. This enables quick switching between front-facing (selfie) and point-of-view (POV) recording, offering flexibility for various shooting angles. *Note: The lens rotation is manual and does not support automatic rotation.*



Image: Illustration of the camera's 360° rotating lens, detailing 180° vertical and horizontal manual rotation.

Compact and Lightweight Design

With dimensions of approximately 14.5 × 3.7 cm and a weight of about 104g, the AC32 is ultra-compact and fits easily into a pocket or backpack, making it ideal for on-the-go recording.

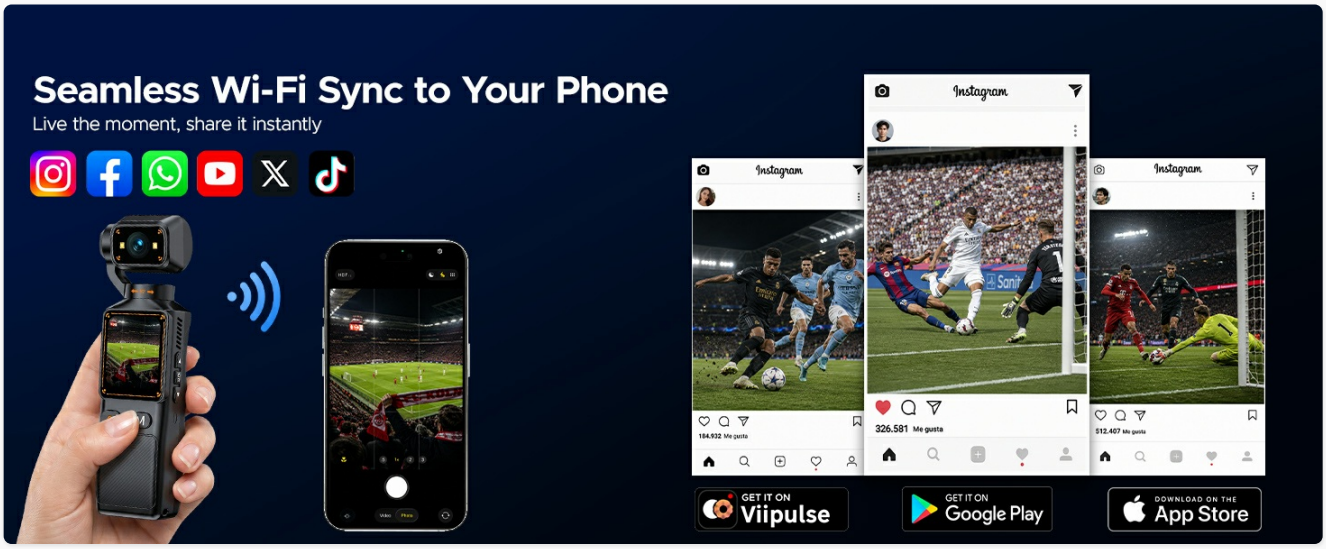


Image: The CAMWORLD AC32 camera being stored in a small bag, highlighting its pocket-sized design and dimensions.

2K HD Video and Integrated Microphone

Record videos in crisp 2K HD resolution with natural colors and sharp details. The integrated microphone captures audio directly during recording, making it suitable for vlogs, interviews, and daily video capture.

Long-lasting Battery

The built-in 2000 mAh rechargeable battery provides up to 7 hours of continuous recording on a full charge, ensuring you can capture extended sessions without frequent recharging.



Image: Visual representation of the camera's 2000mAh battery capacity, offering up to 7 hours of recording.

Integrated WiFi and App Control

Connect the camera to your smartphone via WiFi for live preview, remote control, and quick file transfer. The dedicated app allows easy downloading and sharing of photos and videos to social media platforms.



Image: The camera's seamless Wi-Fi synchronization feature, allowing live preview and instant sharing to a smartphone.

Dual LED Illumination

Two integrated LED lights provide additional illumination in low-light conditions, enhancing video and photo quality for night recordings, parties, or indoor environments.



Image: A visual comparison demonstrating the effect of the dual LED fill light, showing enhanced visibility in low-light conditions when activated.

Multifunction Features

- **Loop Recording:** Automatically overwrites the oldest video when the memory card is full, ensuring continuous recording.
- **Webcam Mode:** Can be used as a webcam for live streaming, video calls, or vlogging when connected to a computer.
- **Recording While Charging:** Allows for extended recording sessions by powering the camera via a USB connection.
- **1/4"-20 Standard Thread:** Compatible with most tripods and selfie sticks for stable, hands-free recording.

Setup

1. Charging the Battery

1. Connect the camera to a USB power adapter (not included) or a computer using the provided USB Type-C cable.
2. The charging indicator light will illuminate. It will turn off or change color once fully charged.
3. A full charge typically takes approximately 2-3 hours.

2. Inserting the MicroSD Card

1. Locate the microSD card slot on the side of the camera.
2. Insert the included 32GB microSD card (or another compatible Class 10 or UHS-I card, 16-256GB) with the gold contacts facing down, until it clicks into place.
3. To remove, gently push the card until it springs out.

3. Powering On/Off

- **Power On:** Press and hold the Power button for a few seconds until the screen illuminates.
- **Power Off:** Press and hold the Power button again until the screen turns off.

Operating Instructions

1. Basic Video/Photo Recording

1. Turn on the camera.
2. Use the mode button (often labeled 'M') to switch between video and photo modes. The current mode will be displayed on the screen.
3. Press the Shutter/Record button (usually a prominent button) to start recording video or take a photo.
4. Press the Shutter/Record button again to stop video recording.

2. Using the Rotating Lens

Manually rotate the camera lens to your desired angle. You can rotate it 180° vertically for different perspectives or 180° horizontally to switch between front-facing and rear-facing views. Ensure the lens clicks into position for stable framing.

3. Connecting to the App via WiFi

1. Download the recommended app (e.g., Viipulse) from your smartphone's app store.
2. On the camera, navigate to the WiFi settings and enable WiFi. The camera's WiFi name (SSID) and password will be displayed.
3. On your smartphone, go to WiFi settings, find the camera's SSID, and connect using the provided password.
4. Open the app on your smartphone. It should automatically detect and connect to the camera, providing a live preview and control options.

4. Activating Dual LED Lights

In low-light conditions, access the camera's settings or press a dedicated button (if available) to turn on the dual LED fill lights. This will brighten your subject and improve image clarity.

5. Webcam Mode

To use the camera as a webcam, connect it to your computer using the USB cable. The camera should be recognized as a webcam device. You may need to select it as the video input source in your video conferencing or streaming software.

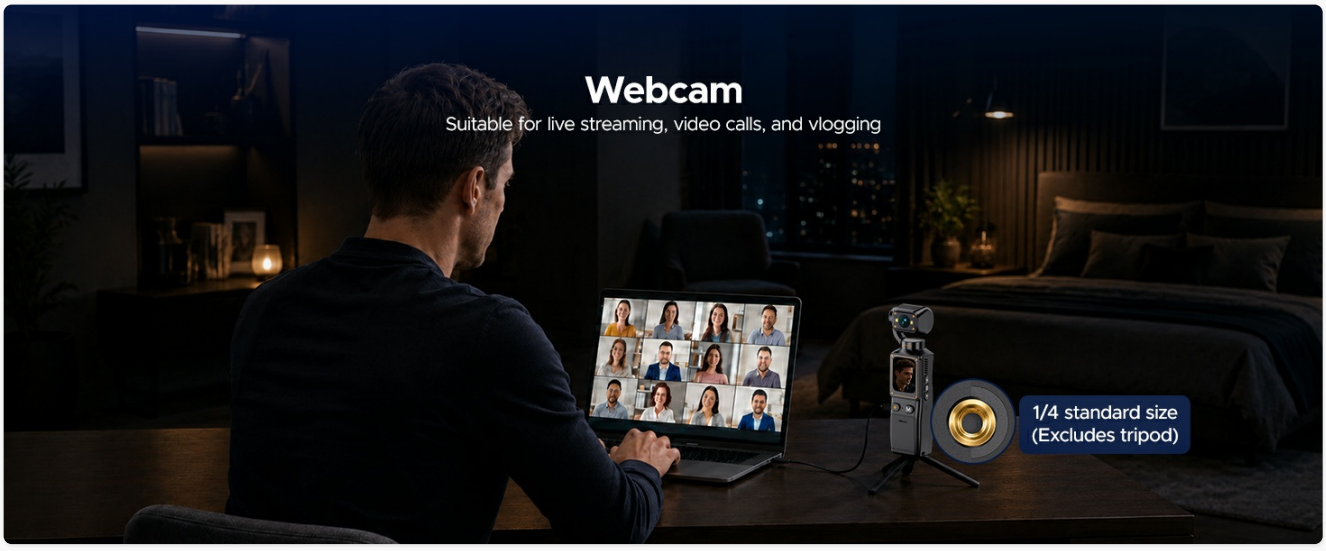


Image: The CAMWORLD AC32 camera set up as a webcam, connected to a laptop for video conferencing.

6. Loop Recording

Enable loop recording in the camera settings if you wish for the camera to continuously record, automatically overwriting the oldest files when the memory card reaches its capacity. This is useful for dashcam-like functionality or continuous monitoring.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For long-term storage, charge the battery to about 50% every few months to prolong its lifespan.
- **Firmware Updates:** Check the manufacturer's website periodically for any available firmware updates to improve performance and add features.

Troubleshooting

Camera Not Turning On

- Ensure the battery is charged. Connect to a power source and try again.
- Press and hold the Power button for a longer duration (5-10 seconds).

Cannot Record Video/Take Photos

- Check if a microSD card is inserted correctly.
- Ensure the microSD card has sufficient free space. Format the card if necessary (this will erase all data).
- Verify the camera is in the correct mode (video or photo).

WiFi Connection Issues

- Ensure WiFi is enabled on both the camera and your smartphone.
- Double-check the WiFi password.
- Move closer to the camera to ensure a strong signal.
- Restart both the camera and your smartphone.

Poor Image/Video Quality

- Clean the lens with a soft cloth.
- Ensure adequate lighting. Use the dual LED lights in dark environments.
- Check camera settings for resolution and exposure.

Specifications

Feature	Detail
Brand	CAMWORLD
Product Model Number	AC32
ASIN	B0H6P2KZXR

Feature	Detail
GTIN	763306491902
Video Capture Resolution	2K
Effective Video Resolution	2048 Pixels
Photo Sensor Technology	CMOS
Optical Sensor Size	1/2.7 Inch
Maximum Focal Length	3.6 Millimeters
Minimum Focal Length	3.6 Millimeters
Video Capture Format	MP4
Supported Audio Format	MP4
Supported Image Format	JPEG
File Format	JPEG
Screen Size	1.69 Inches
Maximum Screen Resolution	2K
Connectivity Technology	USB, Wi-Fi
Color	Ink Black
Special Feature	360-degree Capture, Lightweight
Image Stabilization	No
Water Resistance Level	Not Water Resistant
Form Factor	Handheld
Product Weight	104 Grams
Average Battery Life	7 hours
Item Dimensions (Depth x Width x Height)	22f. x 34an. x 140al. millimeters
Number of Batteries	1 Non-standard Battery (included)
Focus Type	Manual Focus
Integrated Flash Memory Capacity	32 GB
Digital Zoom	4 x
Zoom Type	Digital
Video Camera Type	Action Camera
Recommended Uses for Product	Outdoor, Indoor
Batteries Included	Yes

Feature	Detail
Image Aspect Ratio	4:3
Compatible Devices	Smartphone, Laptop, Personal Computer

Warranty and Support

For warranty information, technical support, or customer service inquiries, please refer to the official CAMWORLD website or contact the retailer where you purchased the product. Keep your proof of purchase for any warranty claims.
You can visit the CAMWORLD Store on Amazon for more information.

© 2026 CAMWORLD. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0H6P2KZXR

More documents and user manuals: **https://manuals.plus/**