Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Nictemaw 5573_8_2_GR

Nictemaw Portable Washing Machine User Manual

Model: 5573_8_2_GR

20 Lbs Capacity, Dark Gray, Glass Cover

1. Introduction

Thank you for choosing the Nictemaw Portable Washing Machine. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read it thoroughly before first use and keep it for future reference.
This compact and smart washing machine features a 20 lbs capacity, 10 washing programs, and 8 water levels, designed for convenience in homes, apartments, dorms, and RVs.

2. Safety Instructions

- Ensure the washing machine is placed on a stable, level surface to prevent vibration and noise.
- Connect the appliance to a grounded power outlet with the correct voltage (110 volts).
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the washing machine during operation. Utilize the Child Lock feature for added safety.
- Do not wash items that are waterproof or water-resistant, as this may cause abnormal vibration.
- Always turn off the water supply and unplug the machine when not in use or before cleaning/maintenance.
- Do not attempt to repair or modify the appliance yourself. Contact qualified service personnel for assistance.

3. What's in the Box

Upon unpacking, please verify that all components are present:

- Nictemaw Portable Washing Machine

- 2 Faucet Adapters
- Fill Hose
- User Manual

4. Setup and Installation

4.1 Placement

Place the washing machine on a firm, level surface. The adjustable bottom feet can be used to stabilize the machine and correct for uneven terrain, reducing vibration during operation.



Image: The washing machine with an illustration of its auto unbalance detection system and adjustable bottom feet for stability.

4.2 Water Inlet Connection

Connect the fill hose to a water faucet using the provided adapters. The machine supports two methods for water inlet: direct faucet connection with quick-connect adapters or manual water pouring into the tub.



Image: Diagram illustrating two methods for water inlet: quick connect adapters for faucet attachment and manual pouring directly into the washing machine tub.

4.3 Drainage

The washing machine is equipped with a powerful built-in drain pump and an extended drain hose. This allows for easy drainage of water to low or high positions, such as a sink or bathtub.



Image: The washing machine with its drain hose connected to a sink, highlighting the convenient drainage system and the powerful internal motor.

4.4 Power Connection

Plug the power cord into a suitable grounded electrical outlet. Ensure the voltage matches the machine's requirements (110V).

5. Product Features

- **Large Capacity:** 20 lbs (2.8 Cu.ft) capacity, suitable for various laundry needs.
- **Compact Design:** Space-saving 2-in-1 washer and spin dryer with side handles for easy movement.
- **Smart Control Panel:** Intuitive LED digital display with 10 programs and 8 water levels.
- **Glass Top Lid:** Transparent glass cover allows monitoring of the washing process.
- **Powerful Drain Pump:** Ensures efficient drainage to various heights.
- **Child Lock:** Enhances safety by preventing accidental operation.
- **24-Hour Delay Start:** Schedule wash cycles in advance for convenience.
- **Stainless Steel Inner Tank:** Honeycomb-shaped design reduces clothing wear.
- **Built-in Lint Filter:** Effectively collects lint and debris, detachable for easy cleaning.
- **Auto Unbalance Detection:** Automatically corrects load imbalance for stable operation.
- **Adjustable Base:** Provides stability on uneven surfaces.



Image: An overview of the Nictemaw portable washing machine, highlighting its compact design, 20 lbs capacity, and intelligent controls for water intake, time, water level, and balance.



Image: Detailed view of the washing machine's external components, including the water inlet, high-quality inlet hose, transparent top cover, side handle, extended drainage outlet, built-in filter, stainless steel inner barrel, and adjustable bottom feet.



Image: Infographic summarizing key features: 20 lbs large capacity, double tub cleaning, gentle laundry with pulsator, integrated intelligent control, 20 minutes quick wash, and 24 hours delay function.

6. Operating Instructions

6.1 Control Panel Overview

The control panel features an LED display and touch buttons for various functions.



Image: Close-up of the washing machine's LED control panel, detailing buttons for Water Level, Program, Start/Pause, Power, and Child Lock, along with program numbers and water level options.

6.2 Loading Laundry

Open the top lid and load clothes loosely into the tub. Do not overload the machine. For best results, ensure clothes are evenly distributed.

6.3 Adding Detergent

Add the appropriate amount of detergent directly into the tub before starting the wash cycle, or into the designated dispenser if available.

6.4 Selecting Programs and Water Levels

Press the 'Program' button to cycle through the 10 available washing programs (e.g., Normal, Quick, Blanket, Soak). Press the 'Water Level' button to select one of the 8 water levels. The default water level is 6.



Image: Display of the 10 laundry programs available on the washing machine, including Normal, Quick, Blanket, and Soak, designed to meet daily washing needs.



Image: Visual representation of different water levels (Low, Middle, High, Large) and their corresponding functions for rinsing, washing, and soaking.

6.5 Start/Pause

Press the 'Start/Pause' button to begin or temporarily stop a wash cycle. To cancel a setting, press 'Water Level' and 'Program' buttons together, then press 'Start/Pause' again.

6.6 Delay Start Function

Utilize the 24-hour delay start function to schedule your laundry cycle to begin at a later time. This allows you to manage your time effectively.

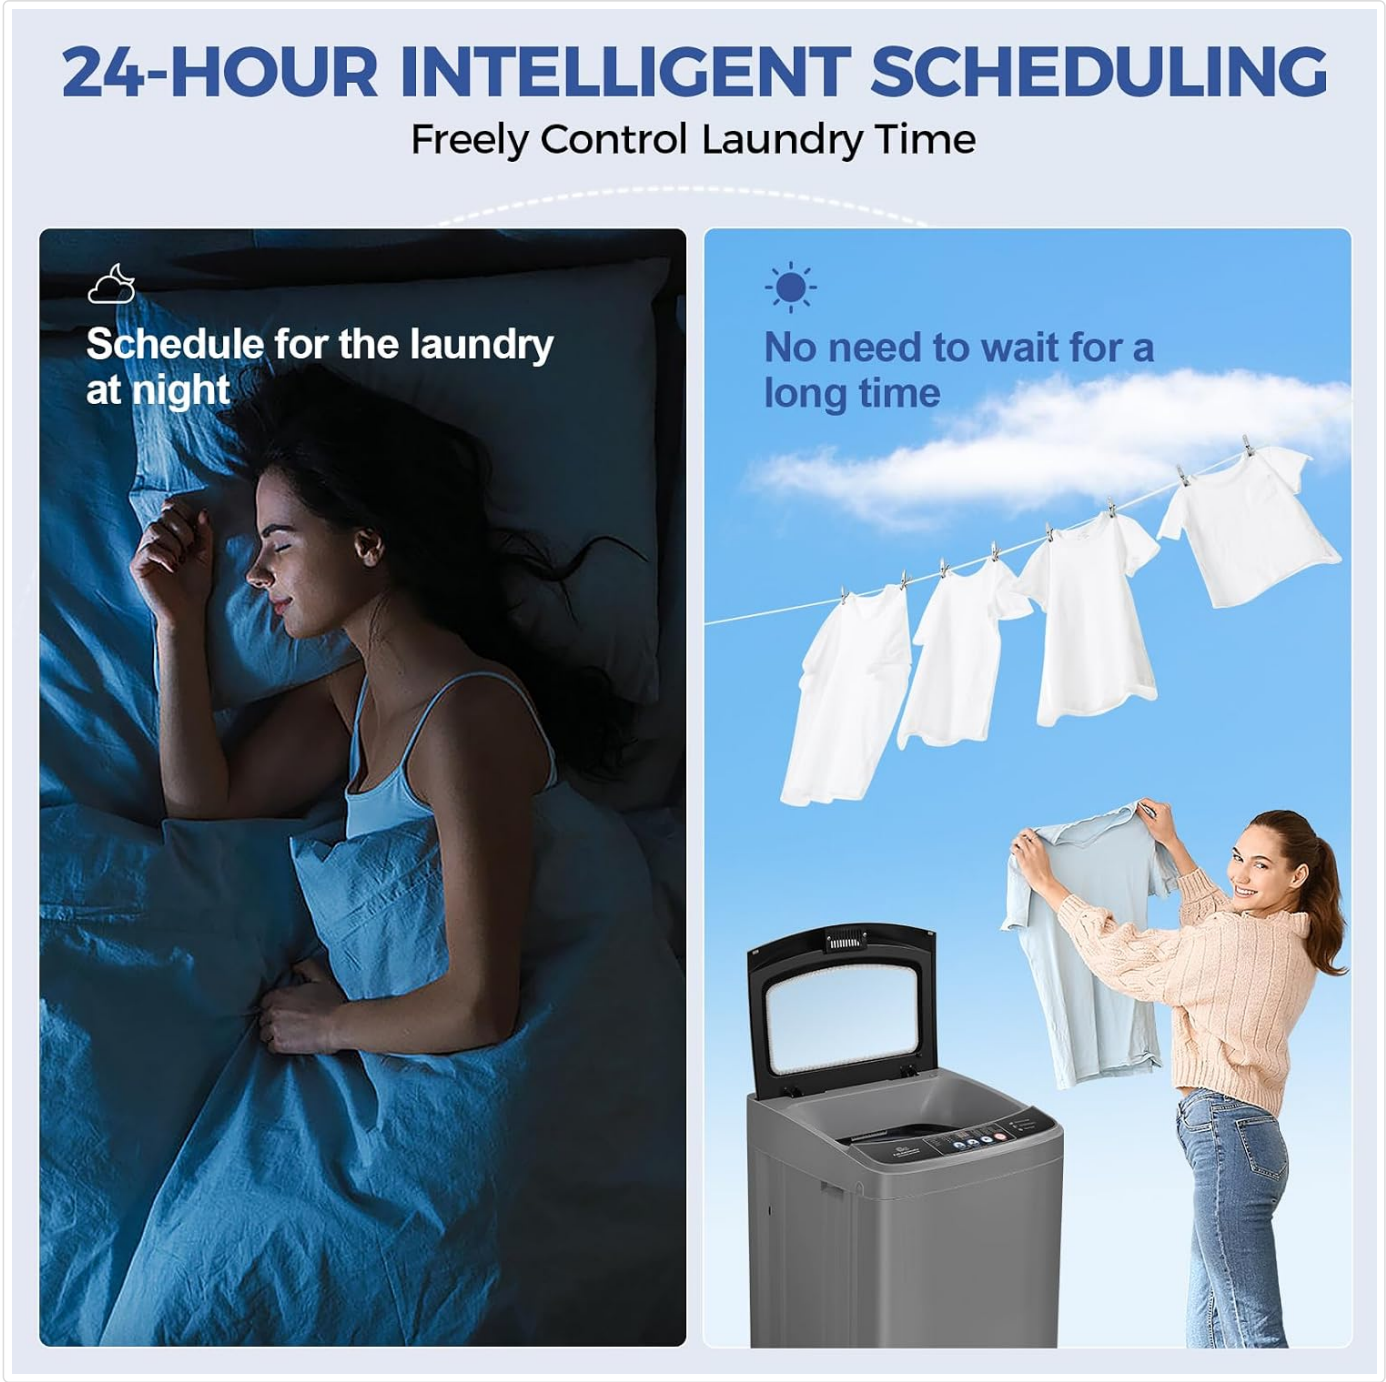


Image: Illustration of the 24-hour intelligent scheduling feature, showing a user setting laundry to wash overnight and then hanging it to dry the next morning.

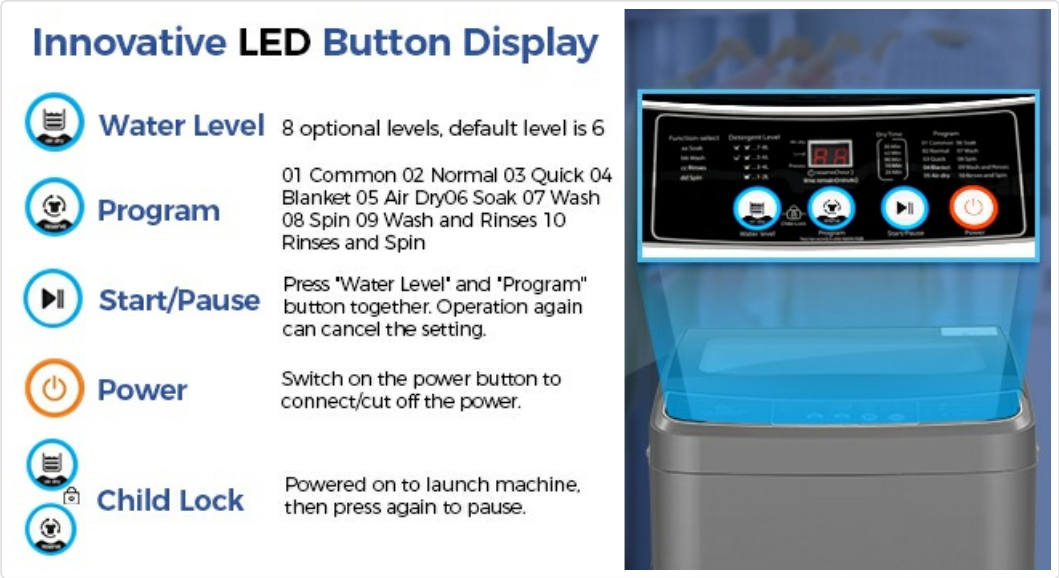


Image: A visual example of the delay start function, showing clothes being loaded at 23:00 for a wash 10 hours later, ready to be hung at 8:00 the next day.

6.7 Child Lock Activation

To activate the child lock, power on the machine, then press and hold the 'Child Lock' button for a few seconds. This will lock the control panel to prevent unintended changes.



Image: A child reaching for the washing machine, with a shield icon indicating the Child Lock feature for family safety.

7. Maintenance

7.1 Tub Self-Cleaning

The machine features a tub self-cleaning function that uses high-pressure pulse jet water to scour the tub walls, preventing dirt and residue accumulation. This also includes an antibacterial pulsator to inhibit bacterial growth.



Image: Illustration of the tub air dry self-cleaning process, showing water jets cleaning the inner barrel, alongside details of the antibacterial pulsator and how it helps remove residual moisture.

7.2 Lint Filter Cleaning

The built-in lint filter effectively collects lint and hair. Regularly detach and clean the filter to maintain optimal washing performance and prevent residue on clothes.



Image: A close-up of the built-in lint filter, demonstrating its high lint collection rate and detachable design for easy cleaning, with a comparison showing cleaner clothes after using the filter.

7.3 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid using abrasive cleaners or solvents.

8. Troubleshooting

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	No power, lid not closed, program not selected.	Check power connection, ensure lid is fully closed, select a program and press Start.

Problem	Possible Cause	Solution
Water not draining	Drain hose kinked or blocked, drain pump malfunction.	Check drain hose for obstructions, ensure it is positioned correctly.
Excessive vibration/noise	Uneven load, machine not level, shipping bolts not removed (if applicable).	Redistribute laundry, adjust bottom feet to level the machine.
Water leakage	Hose connections loose, excessive detergent.	Tighten all hose connections, use recommended amount of detergent.

8.1 Auto Unbalance Detection (AUD)

The washing machine is designed to autonomously detect and correct load imbalances. If an imbalance is detected, the machine may pause or adjust its spin cycle to ensure even washing and reduce vibration. If the issue persists, manually redistribute the laundry.

9. Specifications

Feature	Specification
Brand	Nictemaw
Model Name	5573_8_2_GR
Capacity	20 pounds (2.8 Cu.ft)
Product Dimensions (D x W x H)	20"D x 20"W x 34.6"H
Color	Dark Gray
Access Location	Top Load
Material	Stainless Steel (Drum)
Controls Type	Touch
Operation Mode	Fully Automatic
Voltage	110 volts
Number of Standard Cycles	10
Noise Level	55 dB
Special Features	Child Lock, Delay Start, Vibration Reduction

10. Warranty and Support

This Nictemaw Portable Washing Machine comes with a**One-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.
For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Nictemaw customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.

When contacting support, please have your model number (5573_8_2_GR) and purchase date ready.

© 2023 Nictemaw. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0H7XDCTZP

More documents and user manuals: **https://manuals.plus/**