Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

EarFun HP1000B

EarFun Wave Pro X Hybrid ANC Wireless Over-Ear Headphones User Manual

Model: HP1000B

1. Introduction

Thank you for choosing the EarFun Wave Pro X Hybrid ANC Wireless Over-Ear Headphones. This manual will guide you through the setup, operation, and maintenance of your new headphones to ensure optimal performance and longevity. Please read it carefully before use.

2. Package Contents

Verify that all items are present in your package:

- EarFun Wave Pro X Headphones
- Protective Case
- AUX Audio Cable
- USB-C Charging Cable
- User Manual

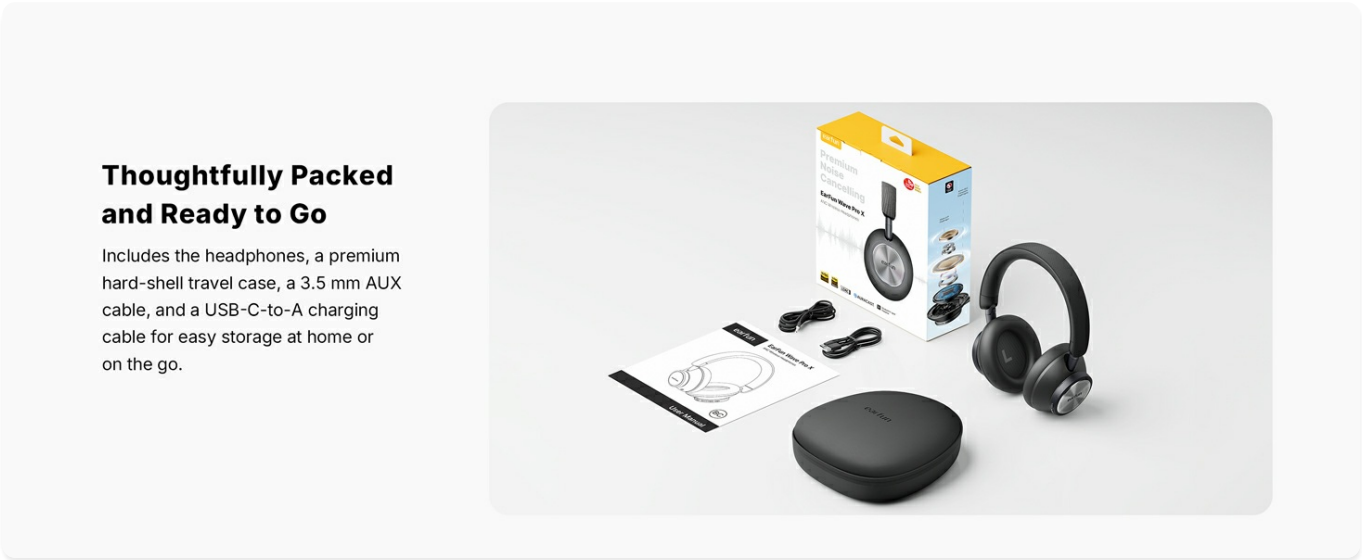


Image: EarFun Wave Pro X headphones, protective case, and cables.

3. Setup

3.1 Charging the Headphones

Before first use, fully charge your headphones. Connect the provided USB-C charging cable to the headphone's USB-C port and the other end to a compatible USB power source. The LED indicator will show charging status.

- **Full Charge Time:** Approximately 2 hours.
- **Quick Charge:** 15 minutes of charging provides up to 10 hours of playback.
- **Battery Life:** Up to 90 hours (ANC off), up to 50 hours (ANC on).



Image: Visual representation of battery life and quick charge feature.

3.2 Bluetooth Pairing

To connect your headphones to a device:

1. Ensure the headphones are powered off.
2. Press and hold the Power button until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for "EarFun Wave Pro X".

4. Select "EarFun Wave Pro X" from the list of available devices to connect.
5. The LED indicator will turn solid blue once connected.

Google Fast Pair: For Android devices, simply turn on the headphones near your device, and a pop-up will appear for quick pairing.
Multipoint Connection: The headphones support connecting to two devices simultaneously. After pairing with the first device, disconnect it, then pair with the second. Reconnect to the first device, and both should be connected.



Image: Headphones demonstrating multipoint connection with a laptop and a smartphone.

4. Operating the Headphones

4.1 Controls

The EarFun Wave Pro X headphones feature intuitive button controls for various functions:

Button/Action	Function

Button/Action	Function
Power Button (Press & Hold)	Power On/Off, Enter Pairing Mode
ANC Button (Short Press)	Cycle ANC Modes (ANC On, Ambient Sound, Normal)
Volume Up (+)	Increase Volume
Volume Down (-)	Decrease Volume
Multi-function Button (Single Press)	Play/Pause, Answer/End Call
Multi-function Button (Double Press)	Next Track
Multi-function Button (Triple Press)	Previous Track
Multi-function Button (Press & Hold)	Activate Voice Assistant, Reject Call

4.2 Active Noise Cancellation (ANC)

The headphones feature Hybrid Active Noise Cancellation to reduce ambient noise. Press the ANC button to cycle through modes:

- **ANC On:** Maximizes noise reduction for quiet listening.
- **Ambient Sound:** Allows you to hear your surroundings while listening to audio.
- **Normal:** ANC is off, providing standard audio playback.

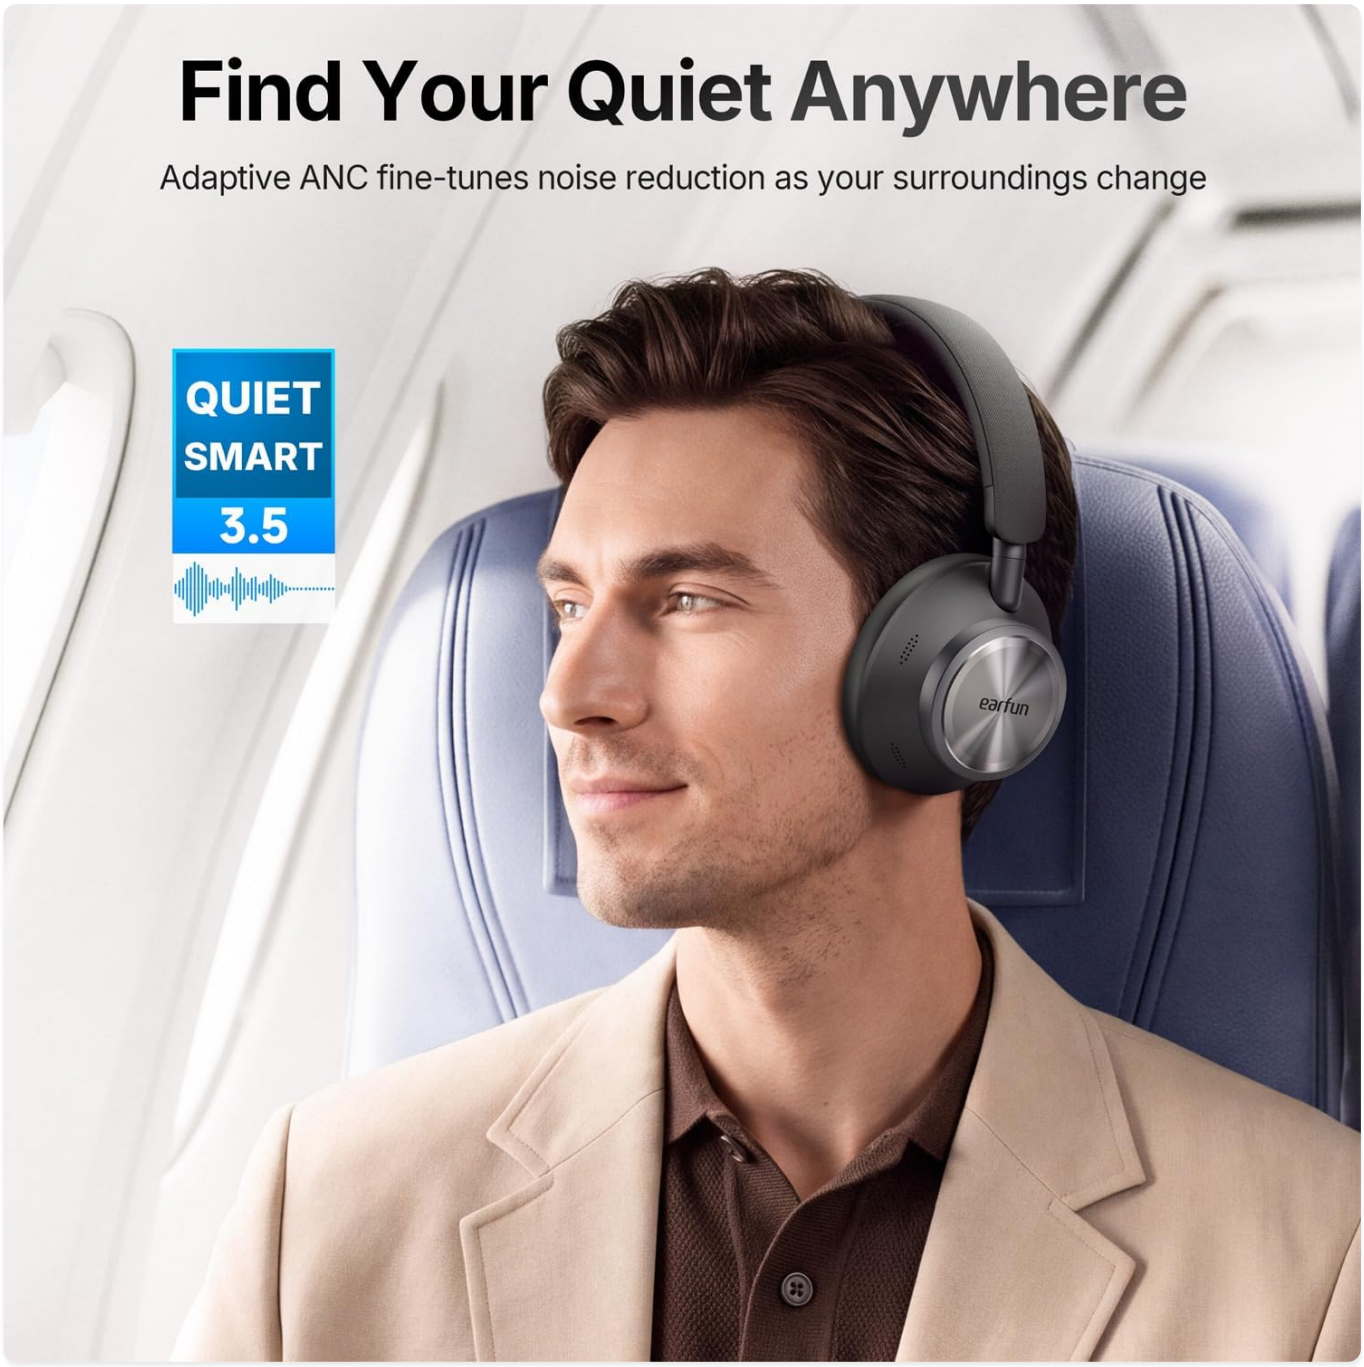


Image: A man wearing the headphones on an airplane, enjoying quiet listening.

4.3 Making Calls

The 8-microphone AI call system ensures clear conversations by isolating your voice and minimizing background noise.

- **Answer/End Call:** Single press the Multi-function button.
- **Reject Call:** Press and hold the Multi-function button.



Image: A woman using the headphones for a call, highlighting the multi-mic array for clear voice pickup.

4.4 EarFun Audio App

Download the EarFun Audio App for enhanced control and customization:

- **Custom EQ:** Adjust audio settings to your preference.
- **Noise Control:** Fine-tune ANC levels.
- **Game Mode:** Activate ultra-low latency mode for gaming and video.
- **Firmware Updates:** Keep your headphones updated with the latest features.

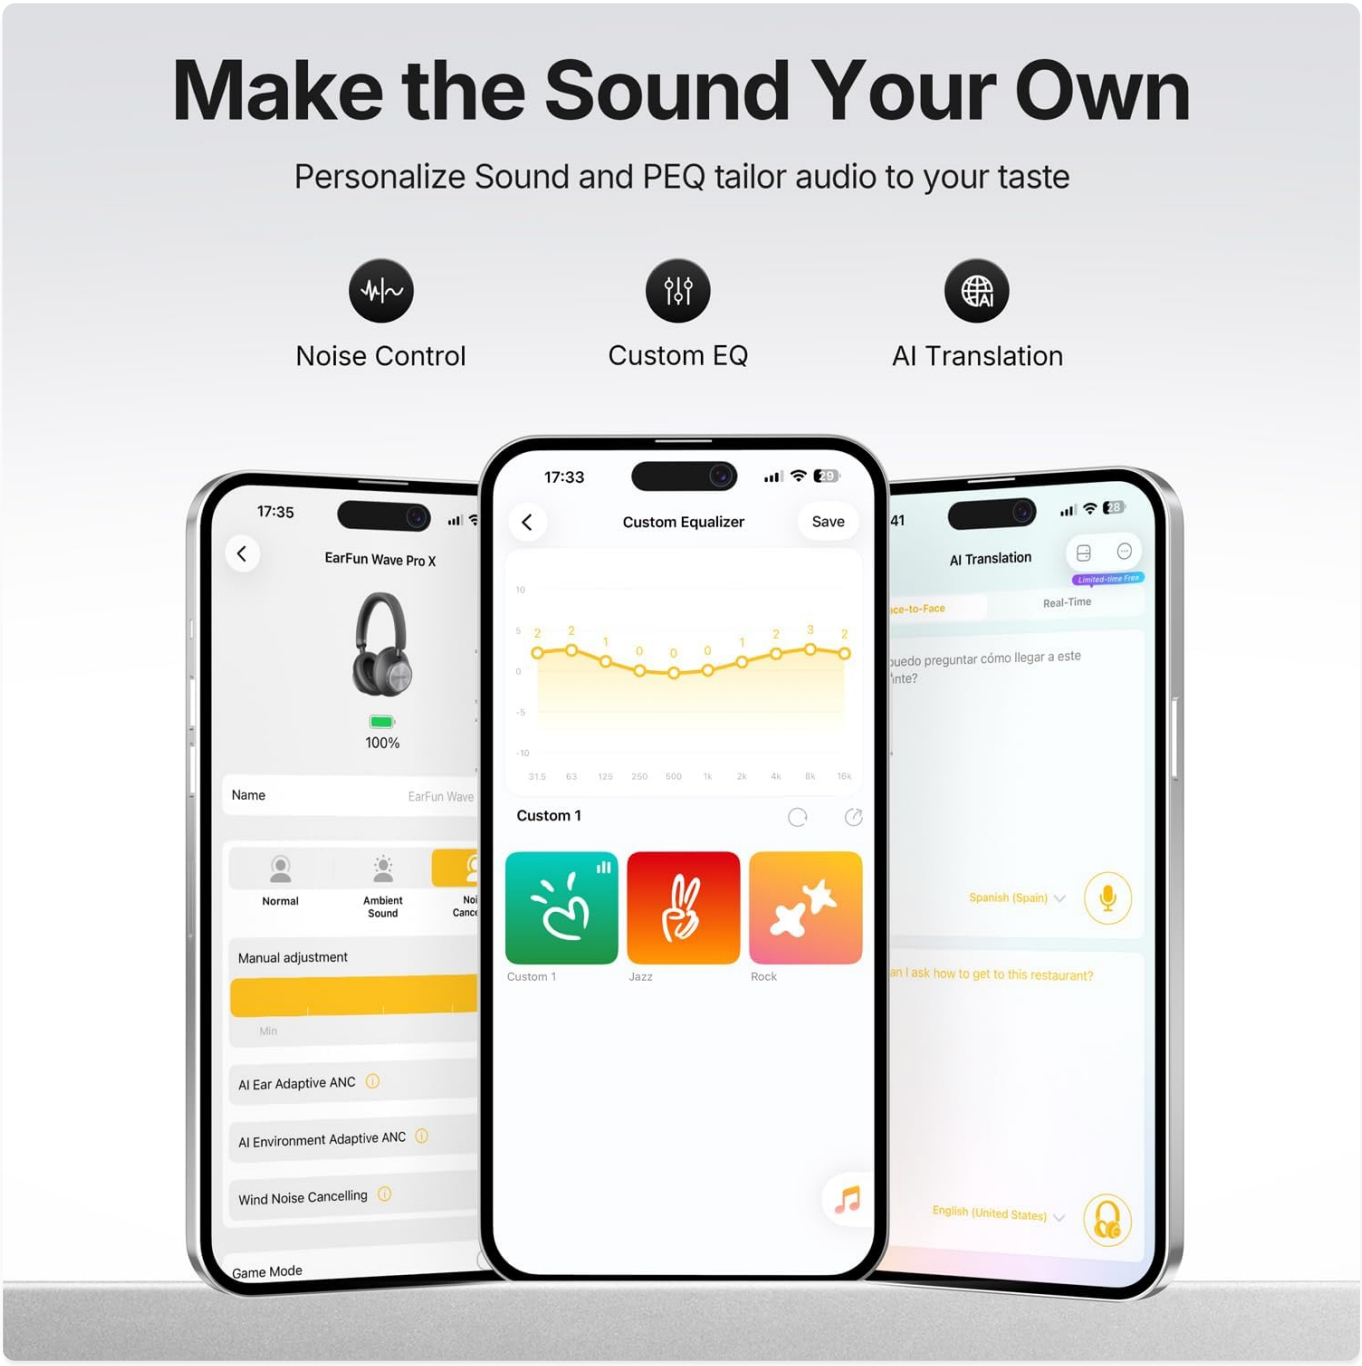


Image: Screenshots of the EarFun Audio App displaying various customization options.

4.5 Wired Audio Modes

The EarFun Wave Pro X supports both USB Audio and 3.5mm AUX connections for versatile listening options.

- **USB Audio:** Connect via a USB-C data cable (not included) for high-resolution digital audio.
- **3.5mm AUX:** Use the provided AUX audio cable for analog connection. The headphones must be powered on for AUX mode.



Image: Close-up of the headphone ports for USB-C and 3.5mm AUX connections.

4.6 Auracast Support

Auracast enables audio sharing and group listening. Tune into Auracast broadcasts from compatible devices to share audio experiences.

5. Maintenance

- **Cleaning:** Wipe the headphones with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the headphones in their protective case when not in use to prevent damage.
- **Water Resistance:** The headphones are waterproof. However, avoid prolonged exposure to water and ensure ports are dry before charging.
- **Battery Care:** To preserve battery life, charge the headphones at least once every three months if not used regularly.

6. Troubleshooting

Problem	Solution
Cannot power on	Ensure the headphones are charged. Connect to a power source and try again.
Cannot pair via Bluetooth	◦ Ensure headphones are in pairing mode (flashing blue/red LED). ◦ Turn off and on Bluetooth on your device. ◦ Clear previous pairings on your device and try again. ◦ Move closer to your device.
No sound	◦ Check volume levels on both headphones and connected device. ◦ Ensure headphones are properly paired. ◦ If using AUX, ensure the cable is fully inserted and headphones are powered on.
ANC not working effectively	◦ Ensure ANC mode is activated (not in Ambient Sound or Normal mode). ◦ Adjust headphone fit to ensure a good seal around your ears.

7. Specifications

Feature	Detail
Model Name	EarFun Wave Pro X
Model Number	HP1000B
Brand	EarFun
Connectivity	Bluetooth 6.0, 3.5mm AUX, USB-C Audio
Noise Control	Hybrid Active Noise Cancellation
Audio Codecs	aptX Adaptive, aptX Lossless, LDAC
Drivers	40mm DLC & 10mm LCP Dual Dynamic Drivers
Microphones	8 Mics AI Call System
Playtime (ANC Off)	Up to 90 hours
Playtime (ANC On)	Up to 50 hours
Fast Charging	15 mins charge for 10 hours playtime
Weight	260 g
Water Resistance	Waterproof
Special Features	Hi-Res Audio Certified, Google Fast Pair, Multipoint Connection, Auracast Support, EarFun Audio App

8. Warranty and Support

Warranty: EarFun provides an 18-month warranty for every product from the date of purchase. Please retain your proof of purchase for warranty claims.
Customer Support: For further assistance, troubleshooting, or warranty inquiries, please visit the official EarFun website or contact their customer service team. You can also visit the EarFun Store on Amazon.

© 2023 EarFun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0H8N49DSC

More documents and user manuals: **https://manuals.plus/**